
prado


trim light only | short
installation instruction

1

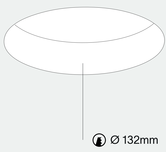

cut a round hole (Ø 132 h 85)

2

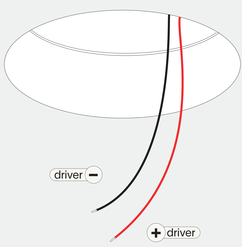


POWER OFF

10 mm

0.08 - 2.5mm²


constant current (mA)	typical forward voltage (V)	typical power (W)
350	16,9	5,9
500	17,4	8,7

3

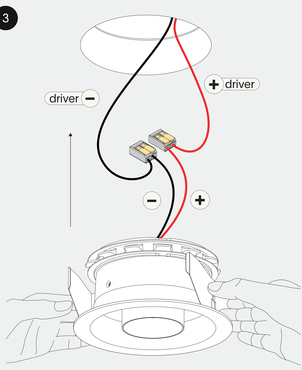

connect the wires with the connectors
for serial connection, respect polarity
combine with a prado LED-driver

4

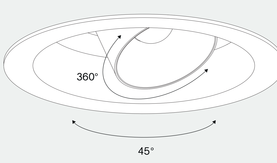

POWER ON

twist the luminaire as desired
thank you for choosing prado

IP 44

Replace glass lens when broken.
Luminaire shall only be used together with glass lens.

prado.eu

The light source in this luminaire shall only be replaced by the manufacturer or a similar qualified person. Warranty will not apply in case of wrongful use or if unskilled personnel attempts to repair the product.