

plaster ring jack
installation instruction


1

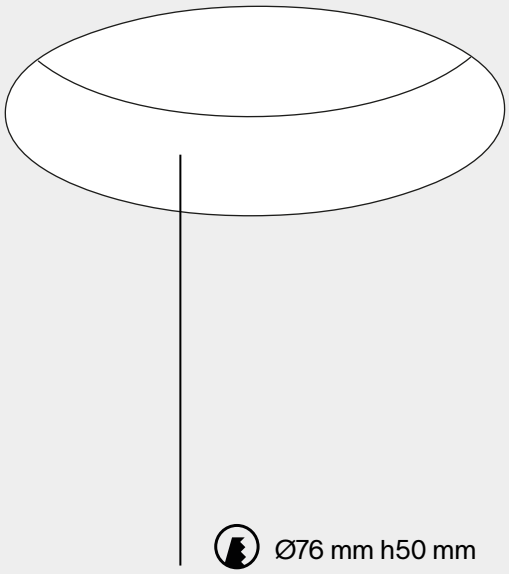

Cut a round hole (Ø76 mm h50 mm).
Suited for indoor, non-sloped ceilings only.


2

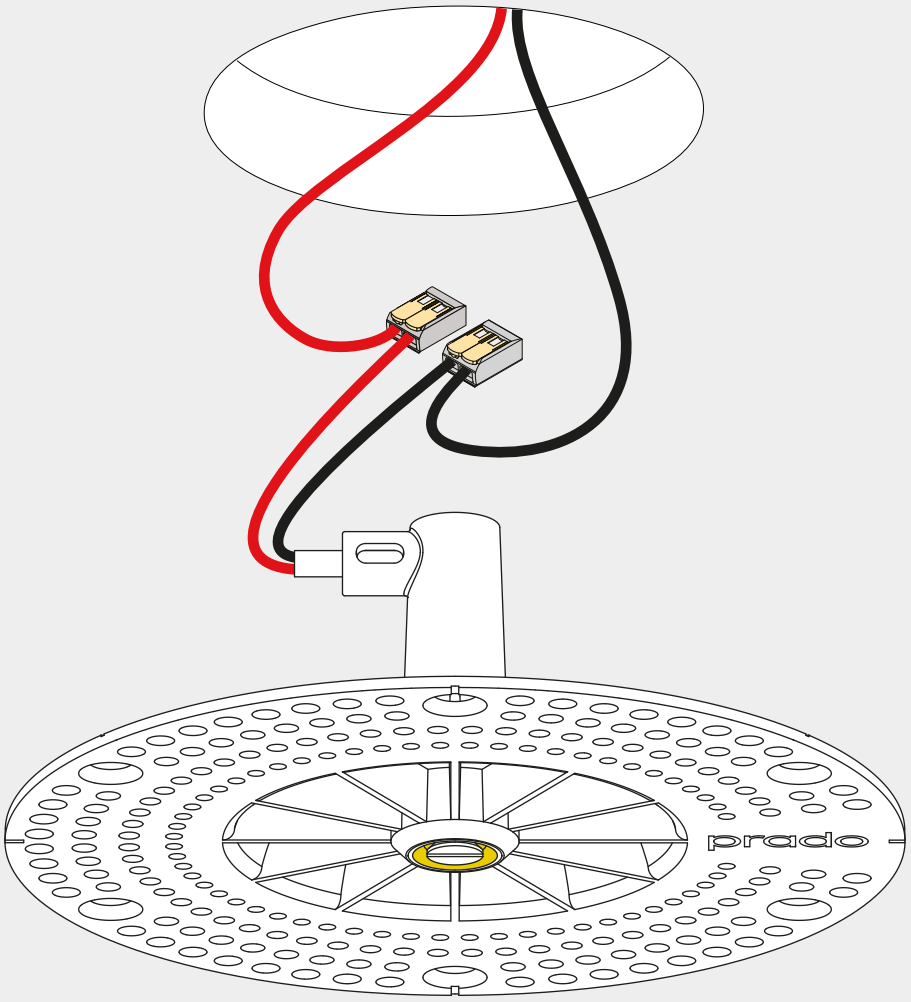

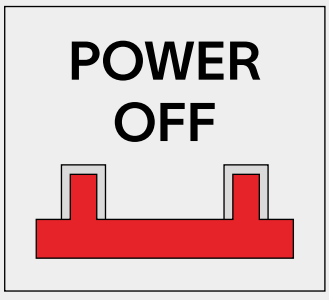

Connect the wires with wago connectors. For serial connection, respect polarity.

3

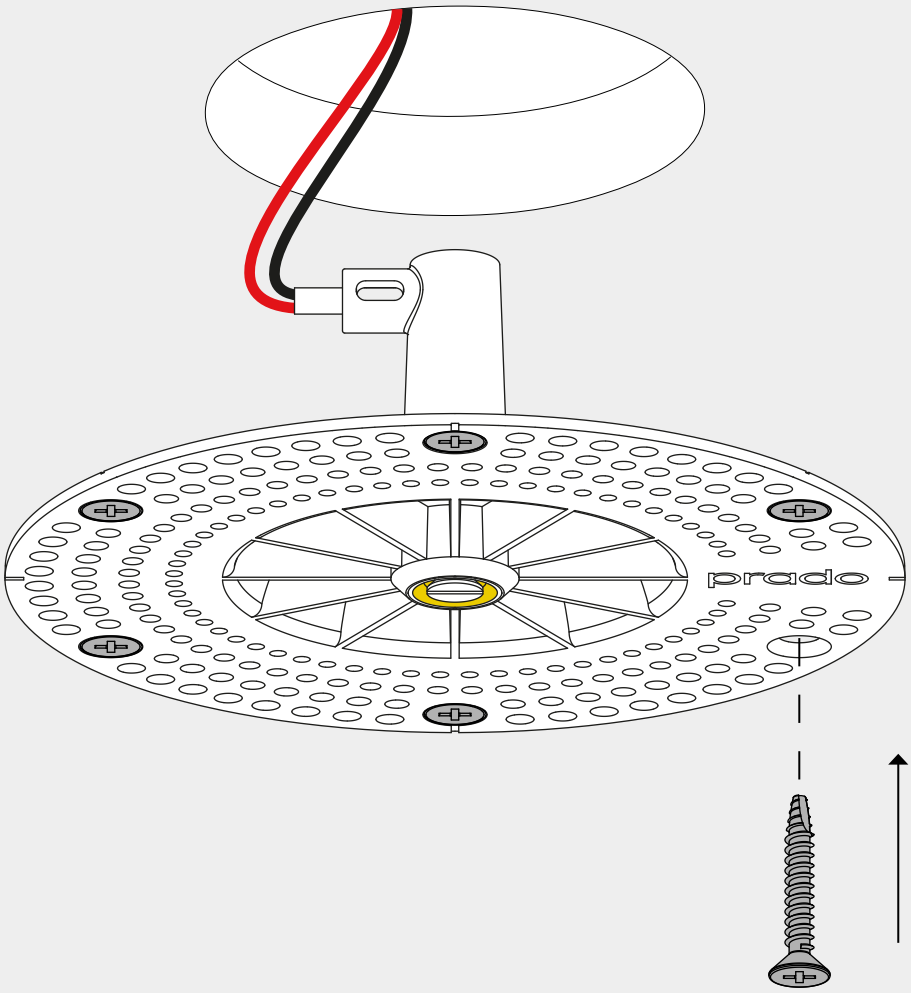


Insert the plaster ring and securely fasten it with glue or the appropriate screws on a screwfast surface. The attachment must be able to obtain a static load of 5 kg. It's the installers responsability to ensure optimal attachment.


We advise to test the electrical connection before starting to plaster.


Important installation note - prevent LED glow.
To avoid unwanted LED glow, do not run AC cables alongside the DC cables coming from the LED driver. This can cause residual voltage, resulting in faintly glowing LEDs.

Note: Once the plaster ring jack is installed, it is no longer possible to add the capacitor. Be sure to install it during the initial wiring phase.

4

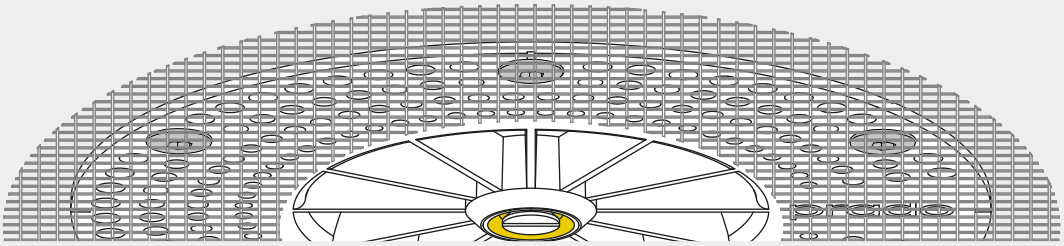

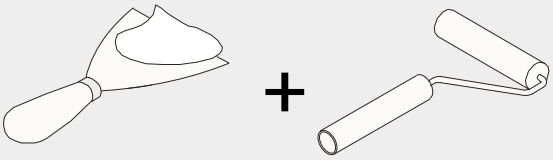


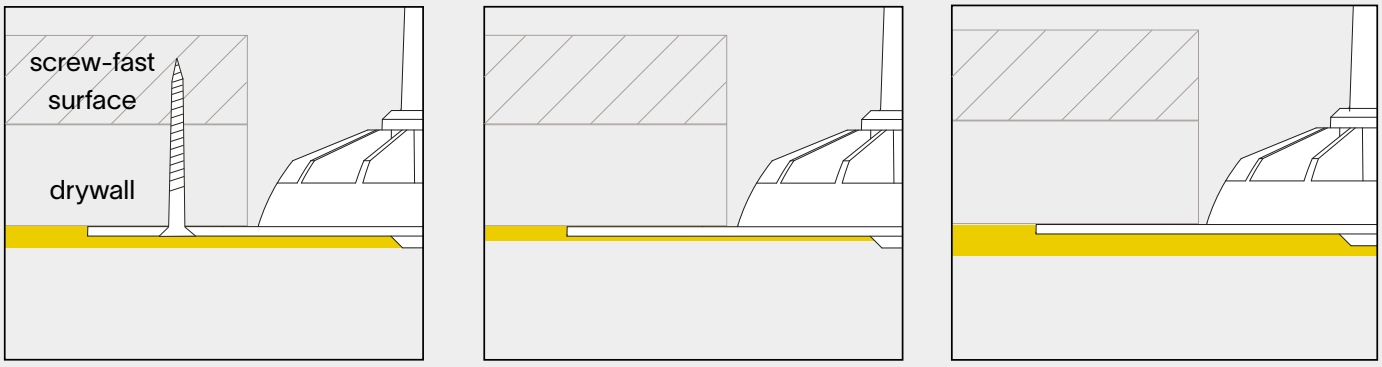

perfect amount of plaster ✓ not enough plaster ✗ too much plaster ✗


Excercise caution while plastering, do not damage the ring.
Keep the plaster lid inside the plaster ring while plastering.
Use a fiberglass mesh tape for optimal plaster adhesion.
Make sure not to touch the edge of the ring when sanding.

5

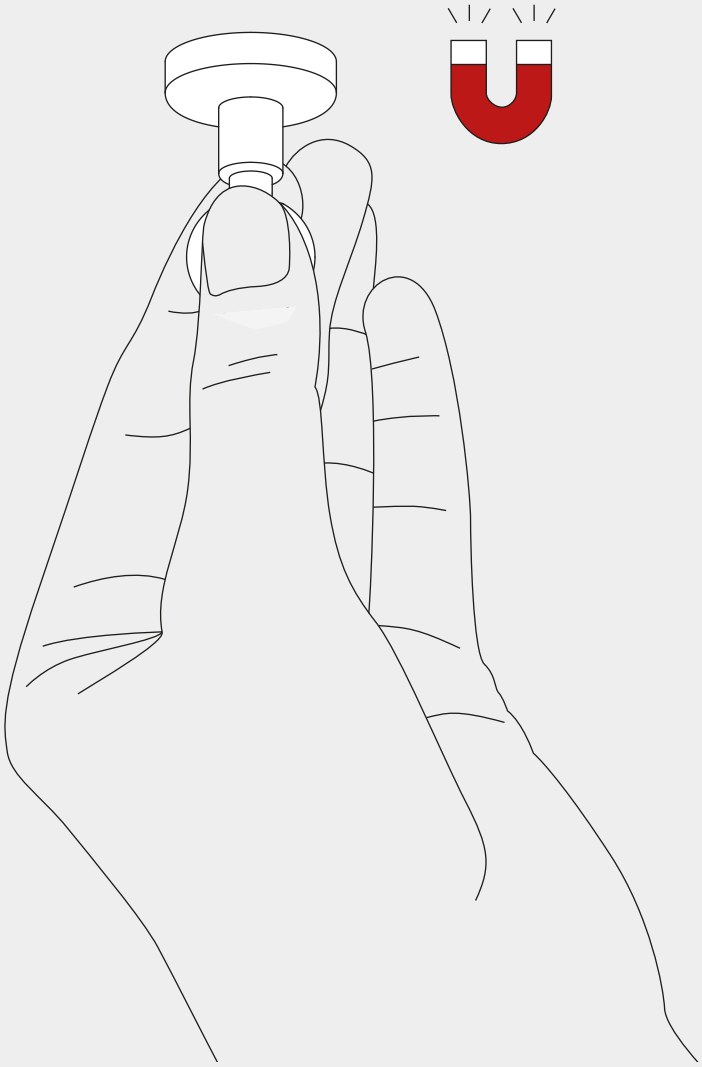


Carefully remove excess plaster to access the screw. You can easily locate the jack kit by using a magnet.

6

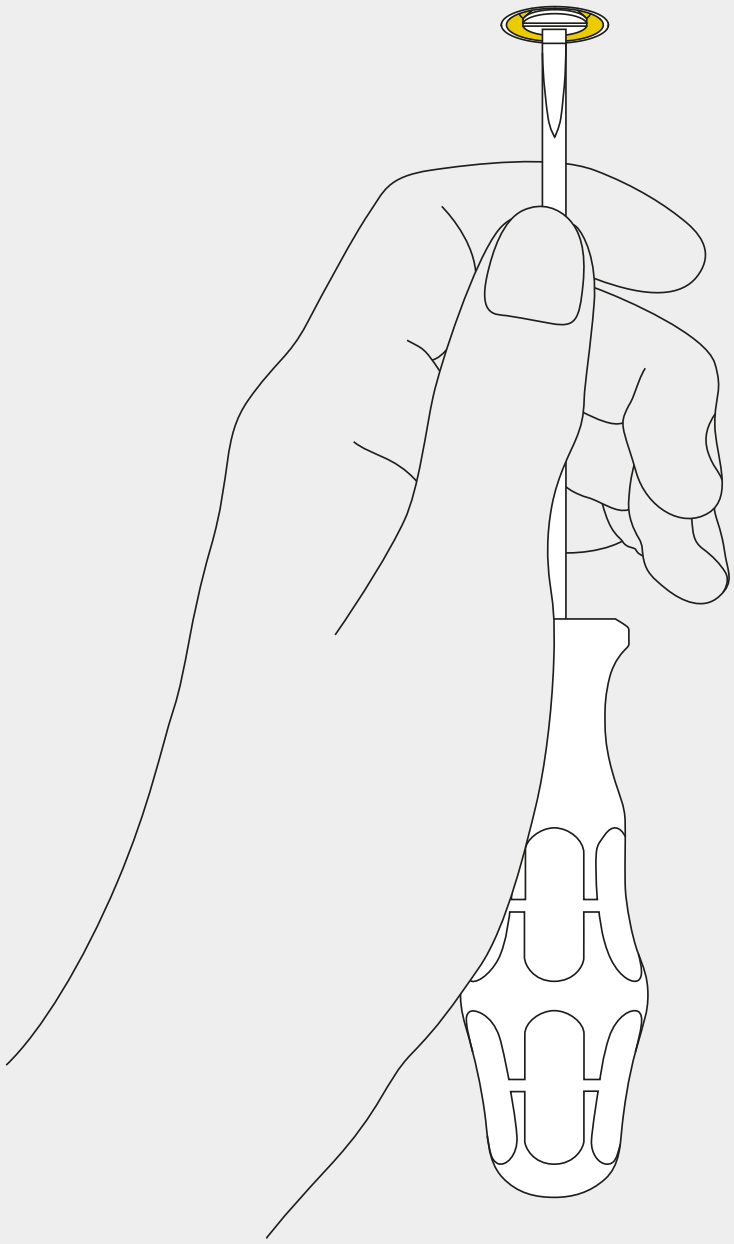

Twist the yellow plaster lid with a screwdriver before removeing it with a magnet.

7

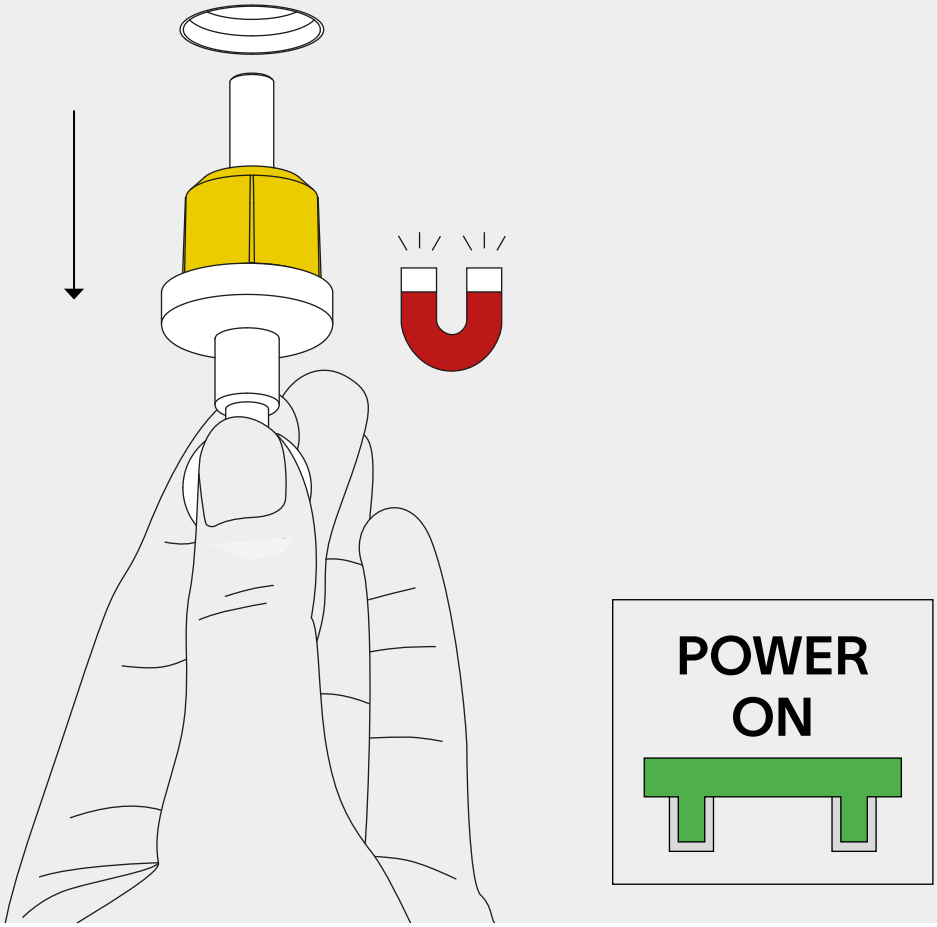

Remove the plaster lid with a magnet before installing the fixture. Any residue needs to be removed without damaging the edges of the installation ring.

thank you for choosing prado

---

prado.com

Installation must be done by skilled professionals only and instructions must be followed at all times. Warranty will not apply in case of wrongful use or if unskilled personnel attempts to repair a product.