pradocam | main unit
installation instruction

for **installation instruction** go to page 2 (click here)

for **PoE server connection** go to page 6 (click here)

for **PoE switch connection** go to page 7 (click here)

for **downloads** go to page 9 (click here)

1

installation instruction



2




Install the fakra connector to the main unit.

3



Connect the SMA connector to the pradocam.

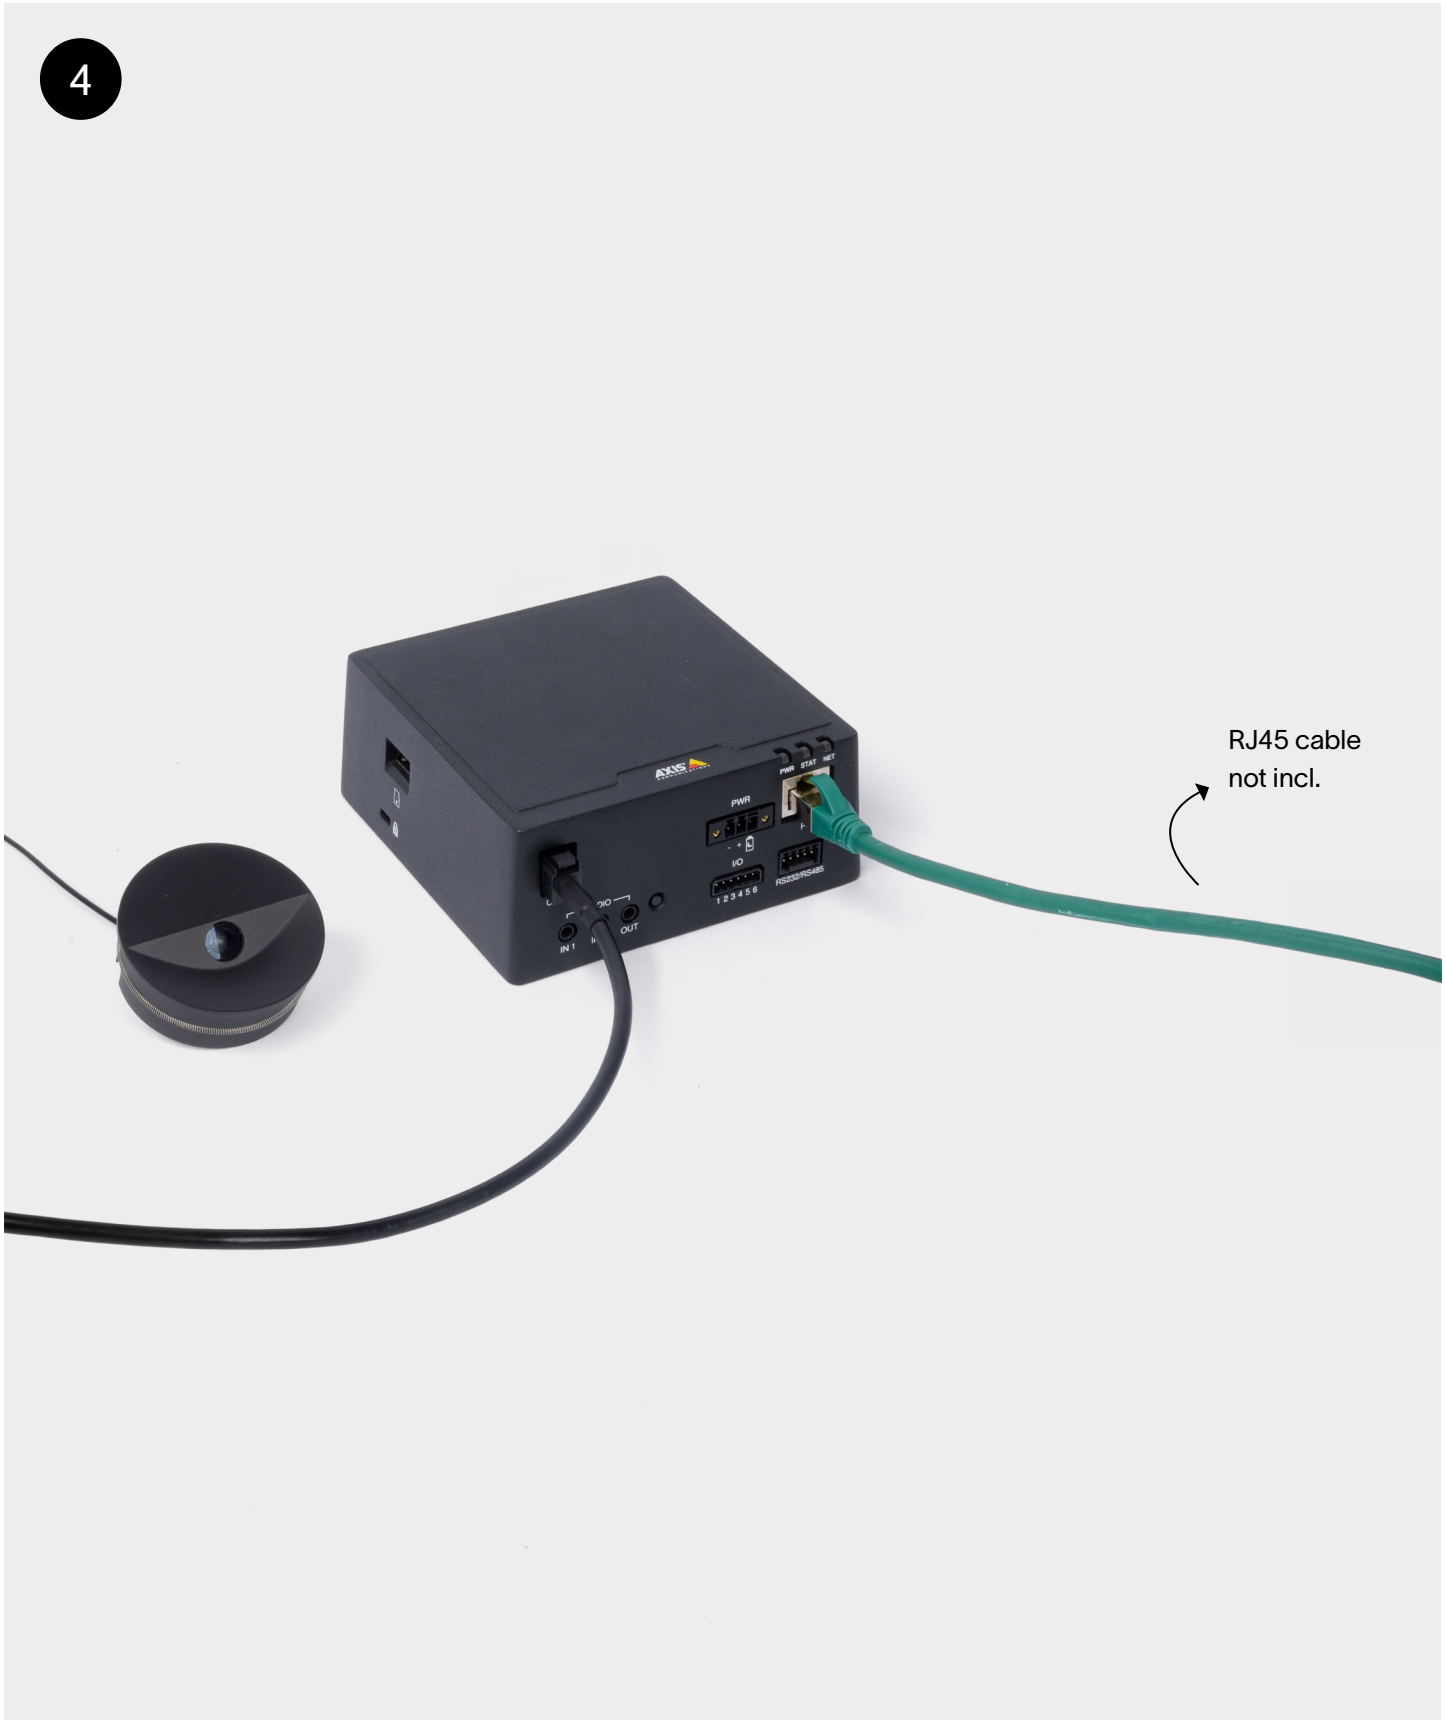

Now connect the RJ45 cable to the main unit.

5

PoE server



Choose your preferred connection - PoE server. Basic knowledge of networking principles and network configuration is required.

5

PoE switch

multiple main units



one main unit



Choose your preferred connection - Poe switch.

6



When fully installed, the 3 green lights are lit.

downloads

AXIS technical ref. one camera

AXIS technical ref. four cameras

AXIS Camera Station Edge

Download app in APP store

Download app in Google Play

Downloads.

thank you for choosing prado

prado.com

Installation must be done by skilled professionals only and instructions must be followed at all times. Warranty will not apply in case of wrongful use or if unskilled personnel attempts to repair a product.