
multifit holder/socket
installation instruction


1

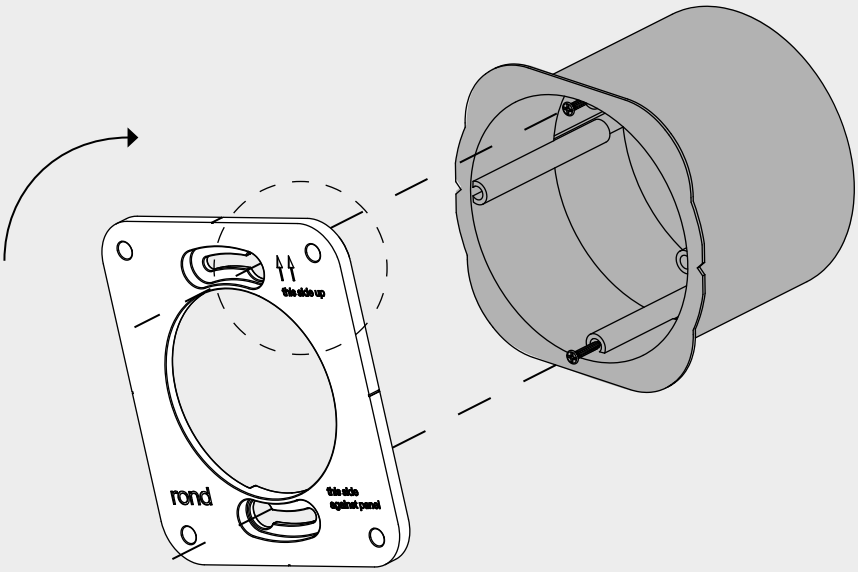




Place the multifit holder backfit on top of the junction box, give it a twist, and tighten the screws.

2

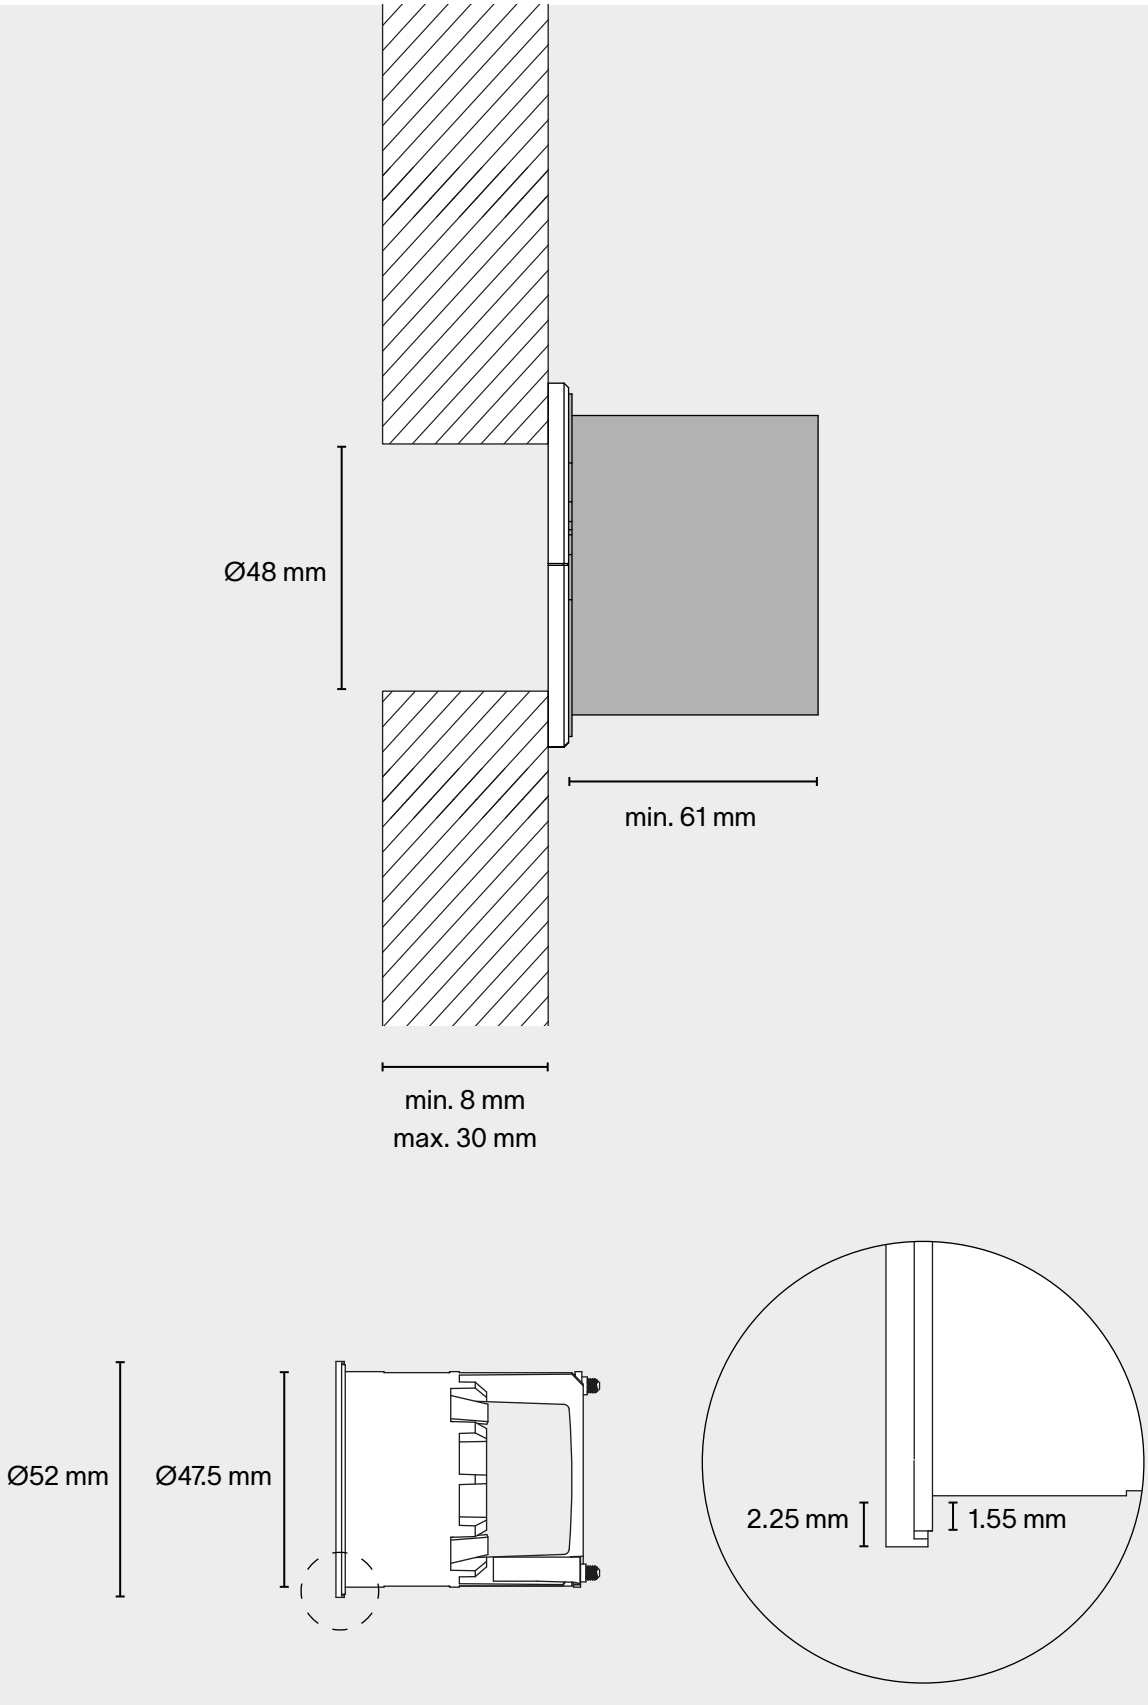


Drill a hole of Ø48 mm and install the junction box with junction box cover plate to the back of the wall with the appropriate screws. Make sure the correct side is facing up.


3

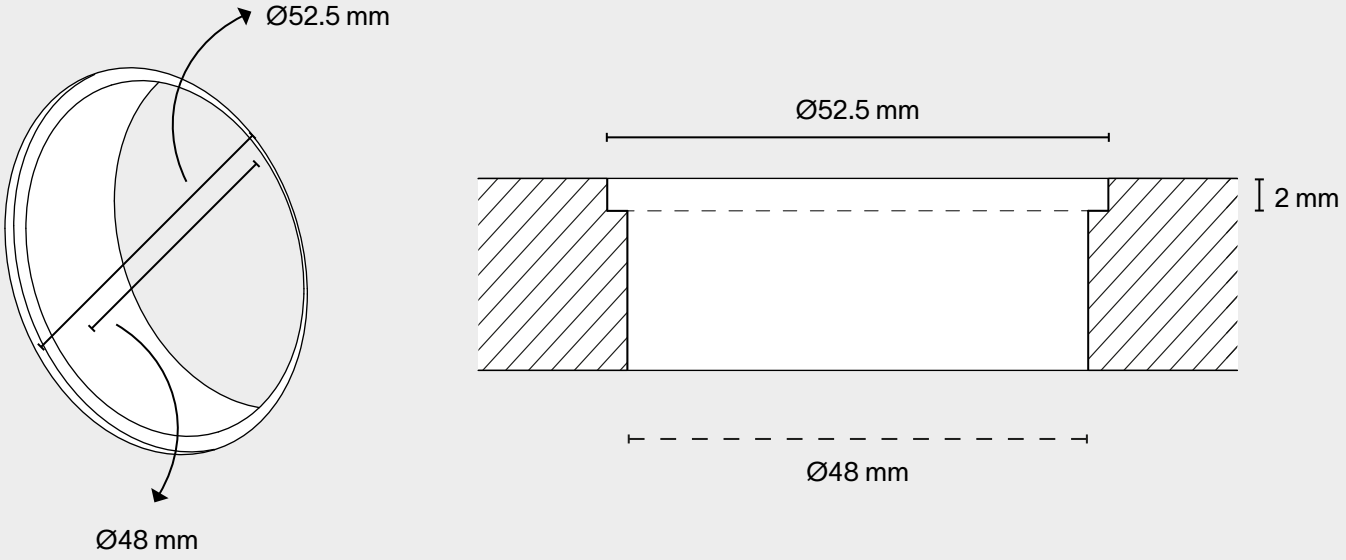

Optional flush mount countersink.


4

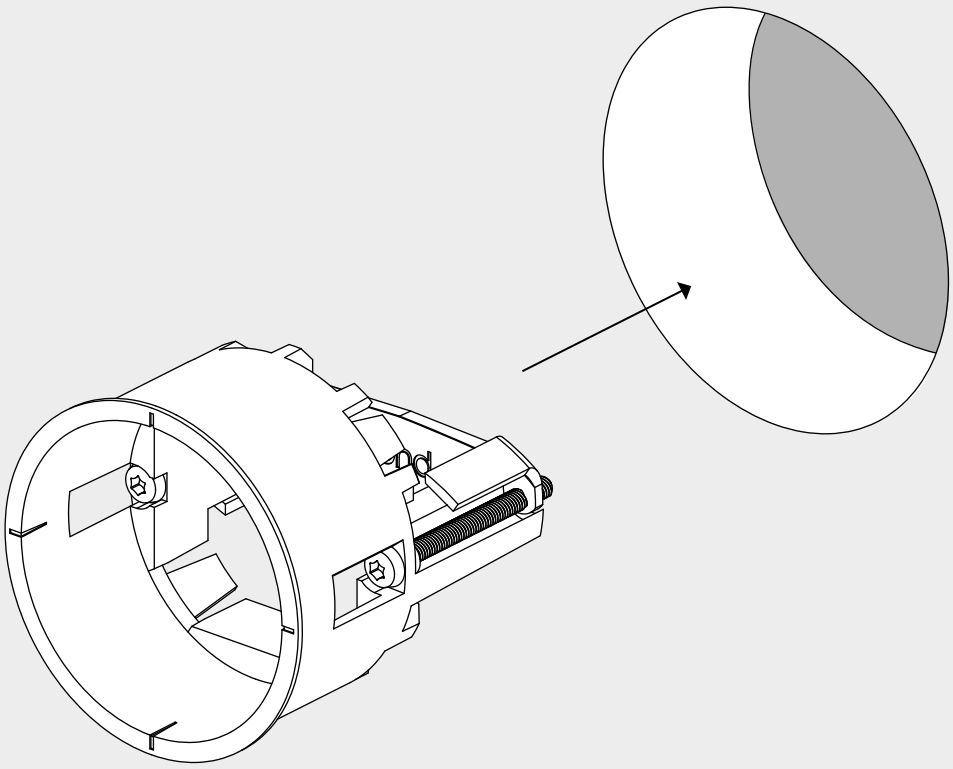

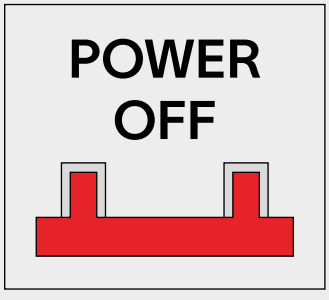


Position the multifit holder in the hole.

5

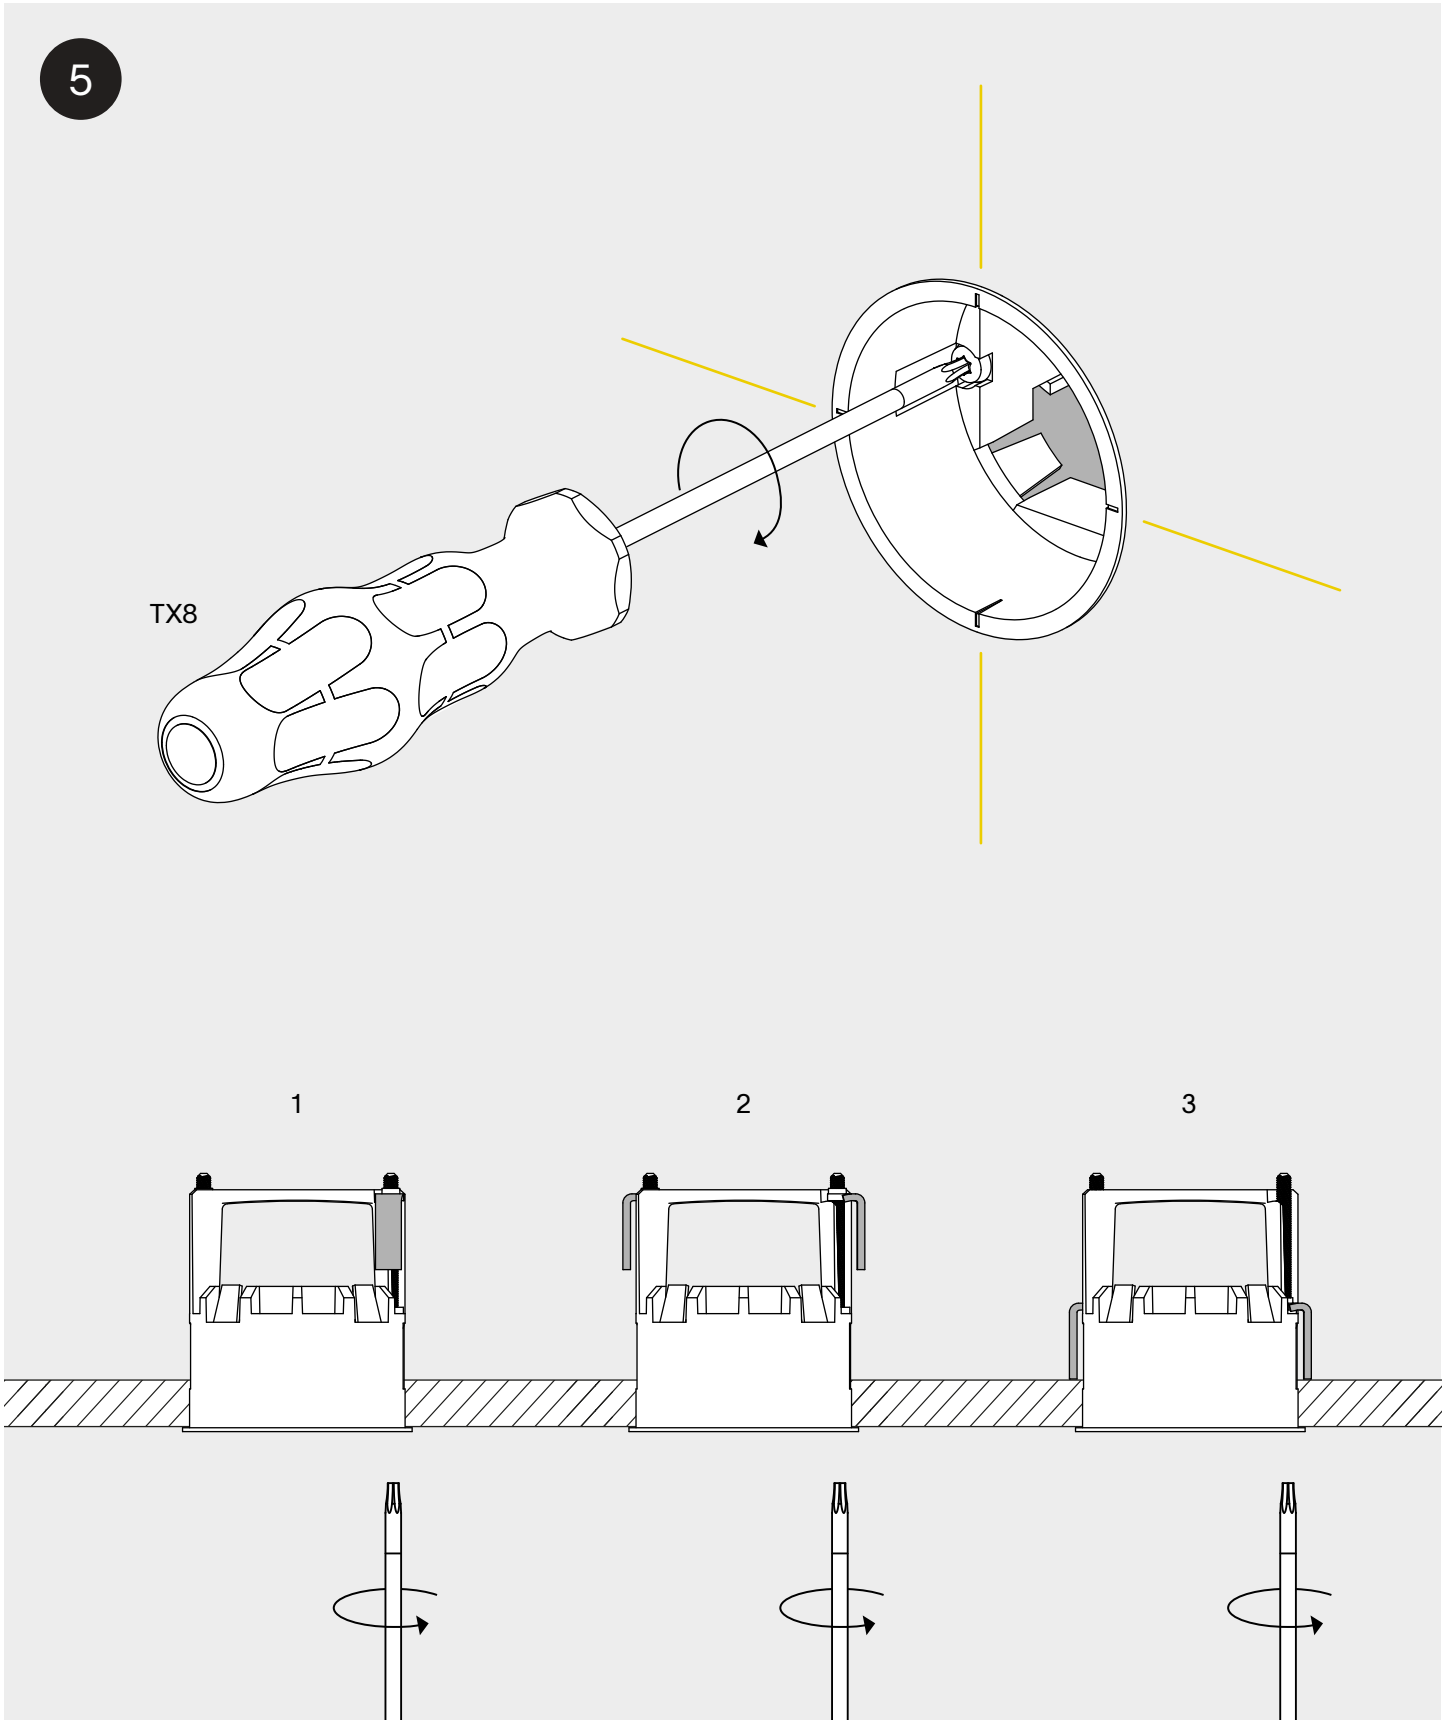


Use the notches in the multifit holder to level it. Now fix the multifit holder until the clamps are tightened against the wall.


6

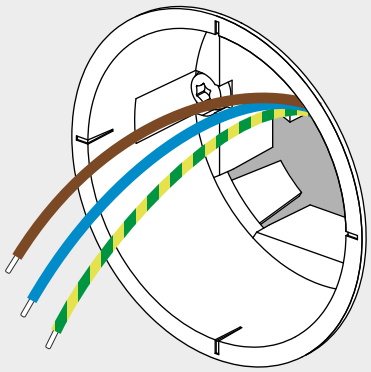

Pull the wires through.


7

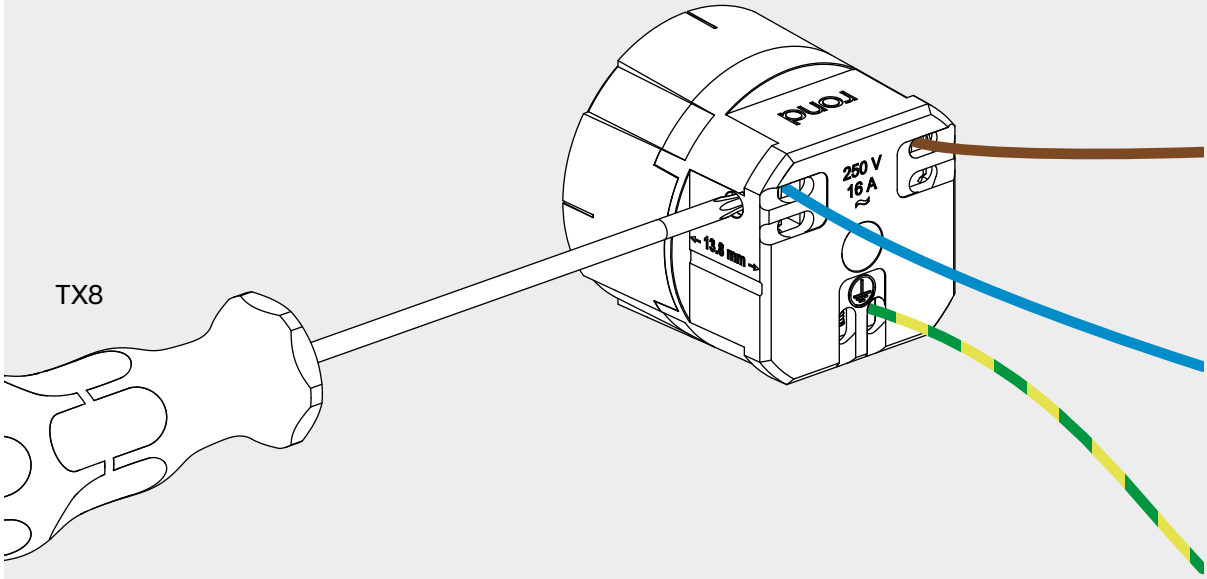

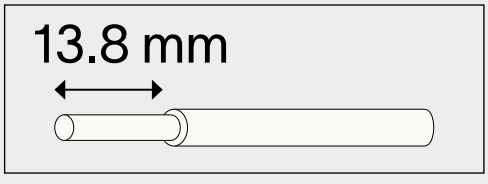


Attach the wires to the socket.

8

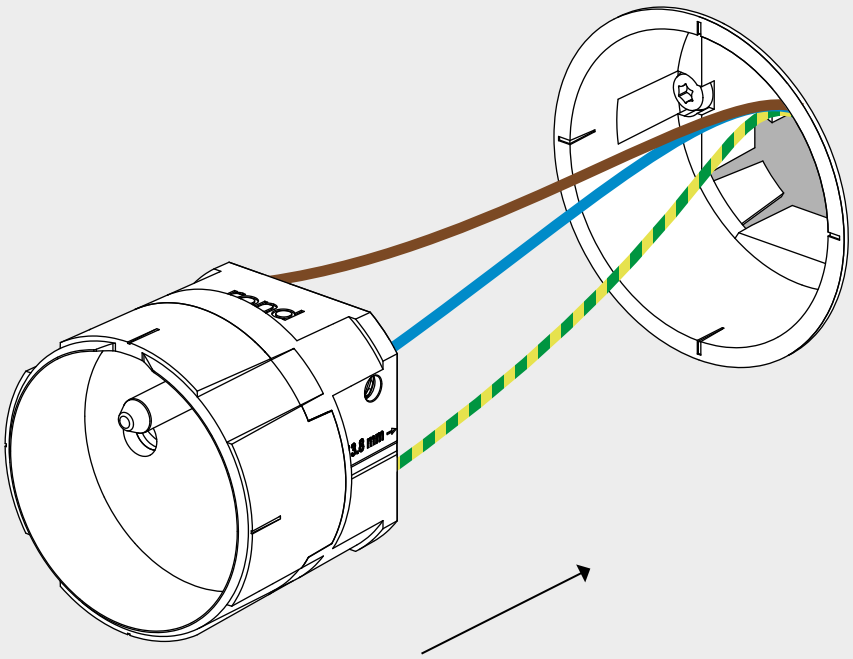


Push the socket into the multifit holder.


9

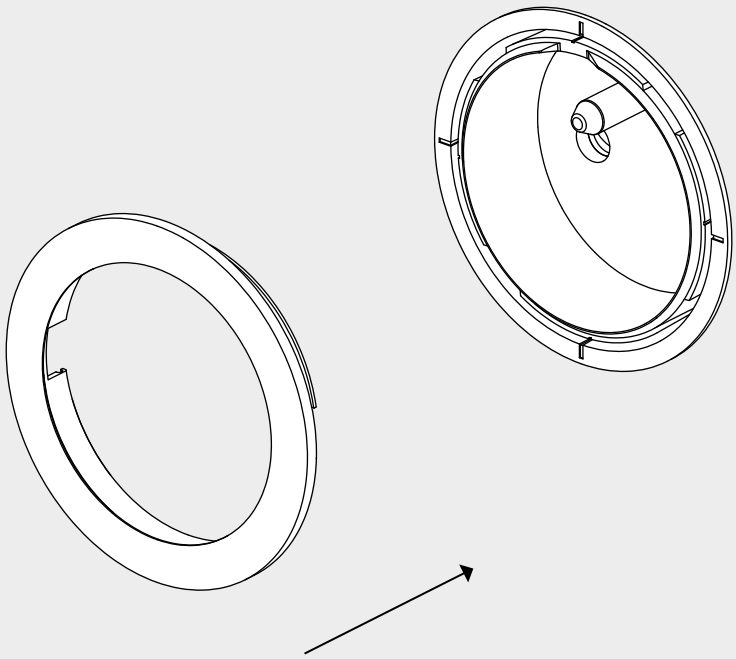

Install the showring.

10

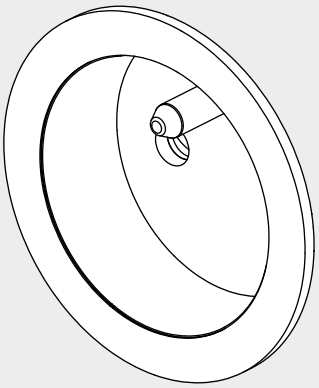


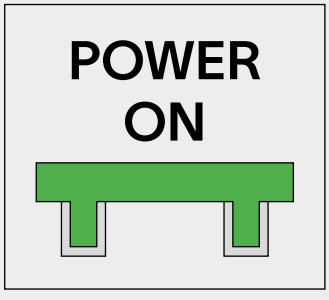


Turn the power back on.

1


for removal

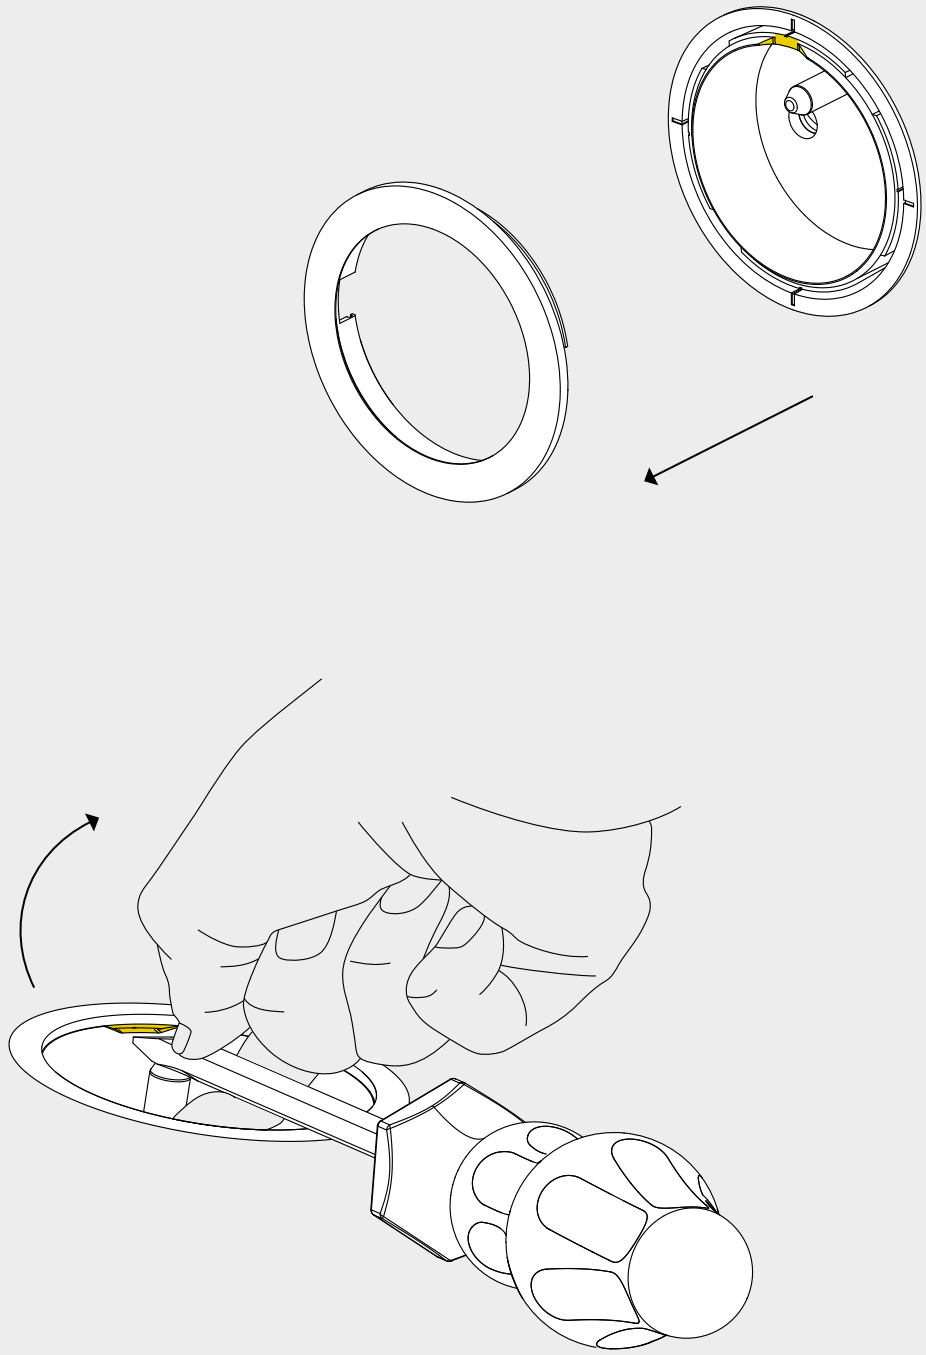

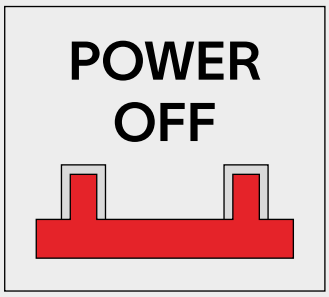


Remove the showring with a flat screwdriver.

2

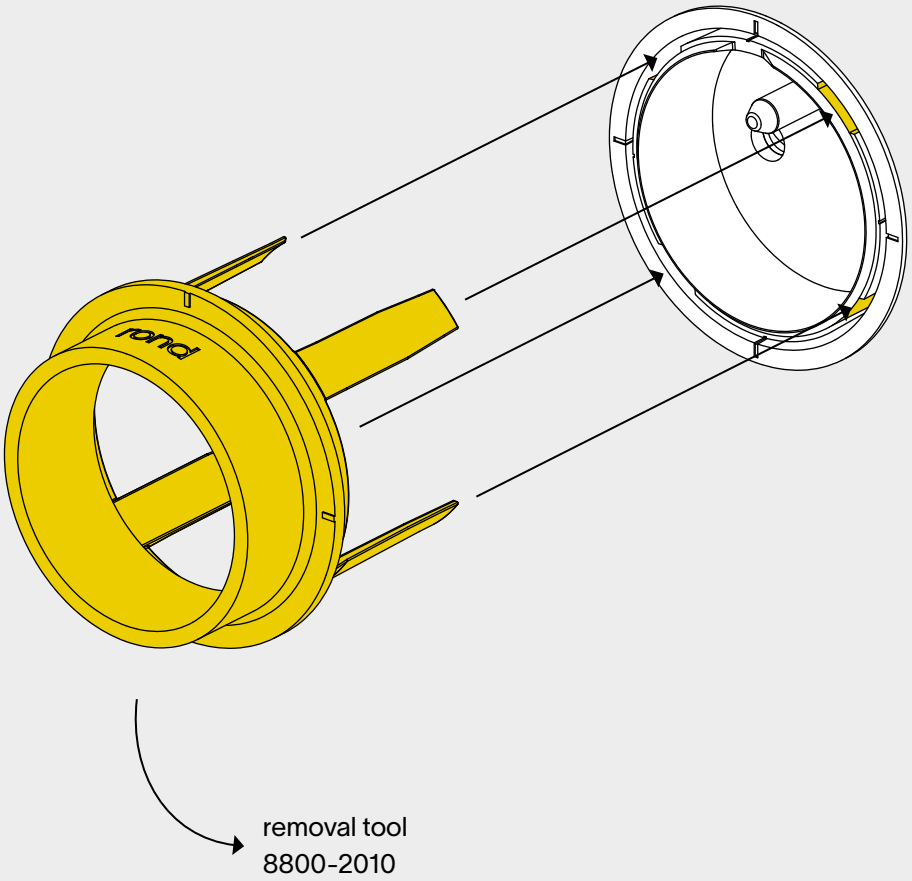


Put the removal tool into the socket.

3

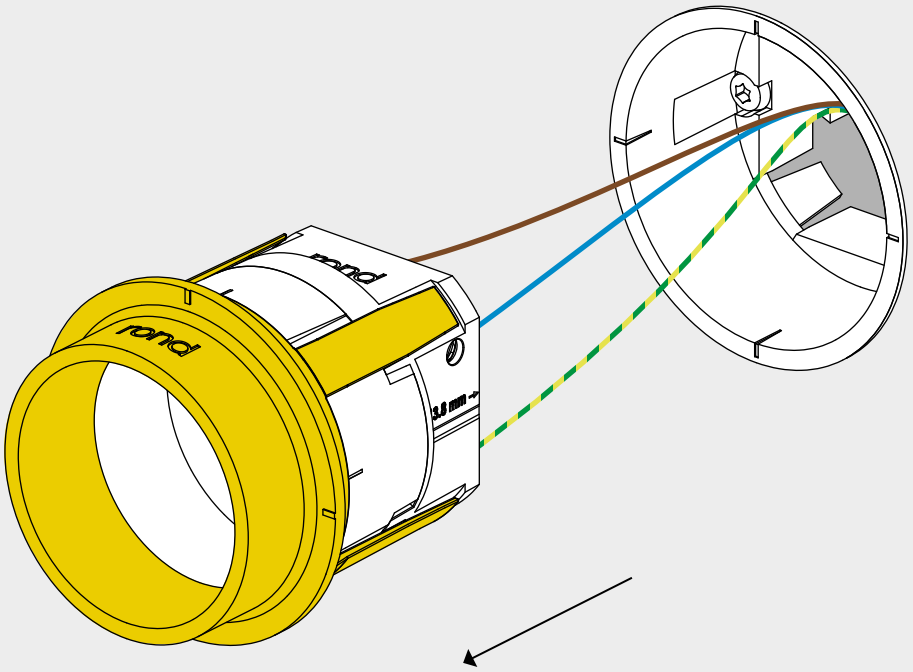


Pull out the socket.

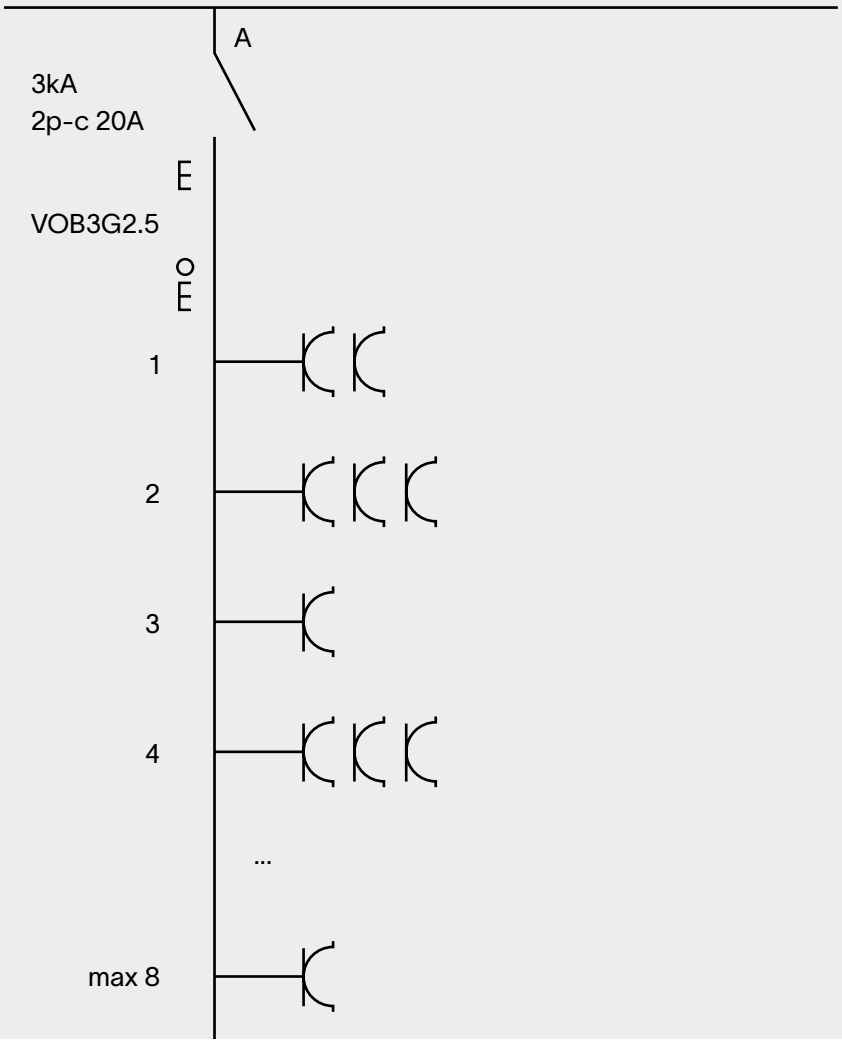

Socket model scheme.

thank you for choosing rond

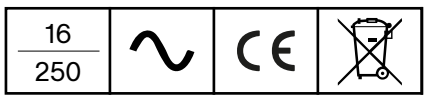

Installation must be done by skilled professionals only and instructions must be followed at all times. Warranty will not apply in case of wrongful use or if unskilled personnel attempts to repair a product.