
trim spot | short


installation instruction

1

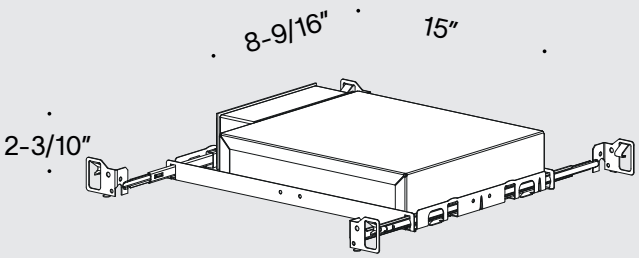


housing

IC AT

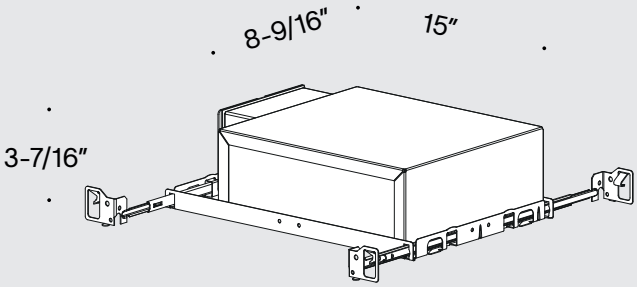


housing

IC AT

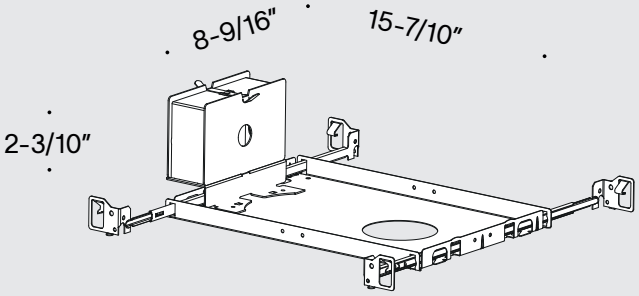

housing

NIC

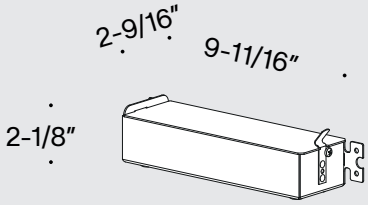


remodel


IJB

Install the appropriate IC/driver box.

2

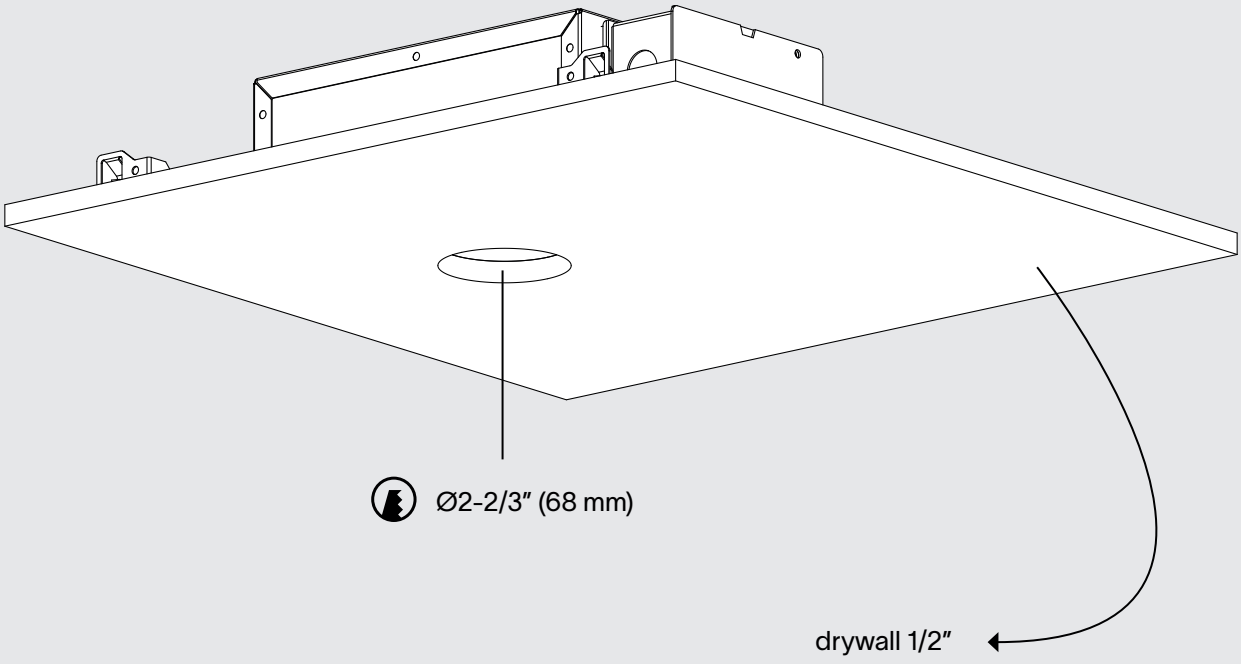


Install the drywall (thickness 1/2″) with a round hole (Ø2-2/3″).

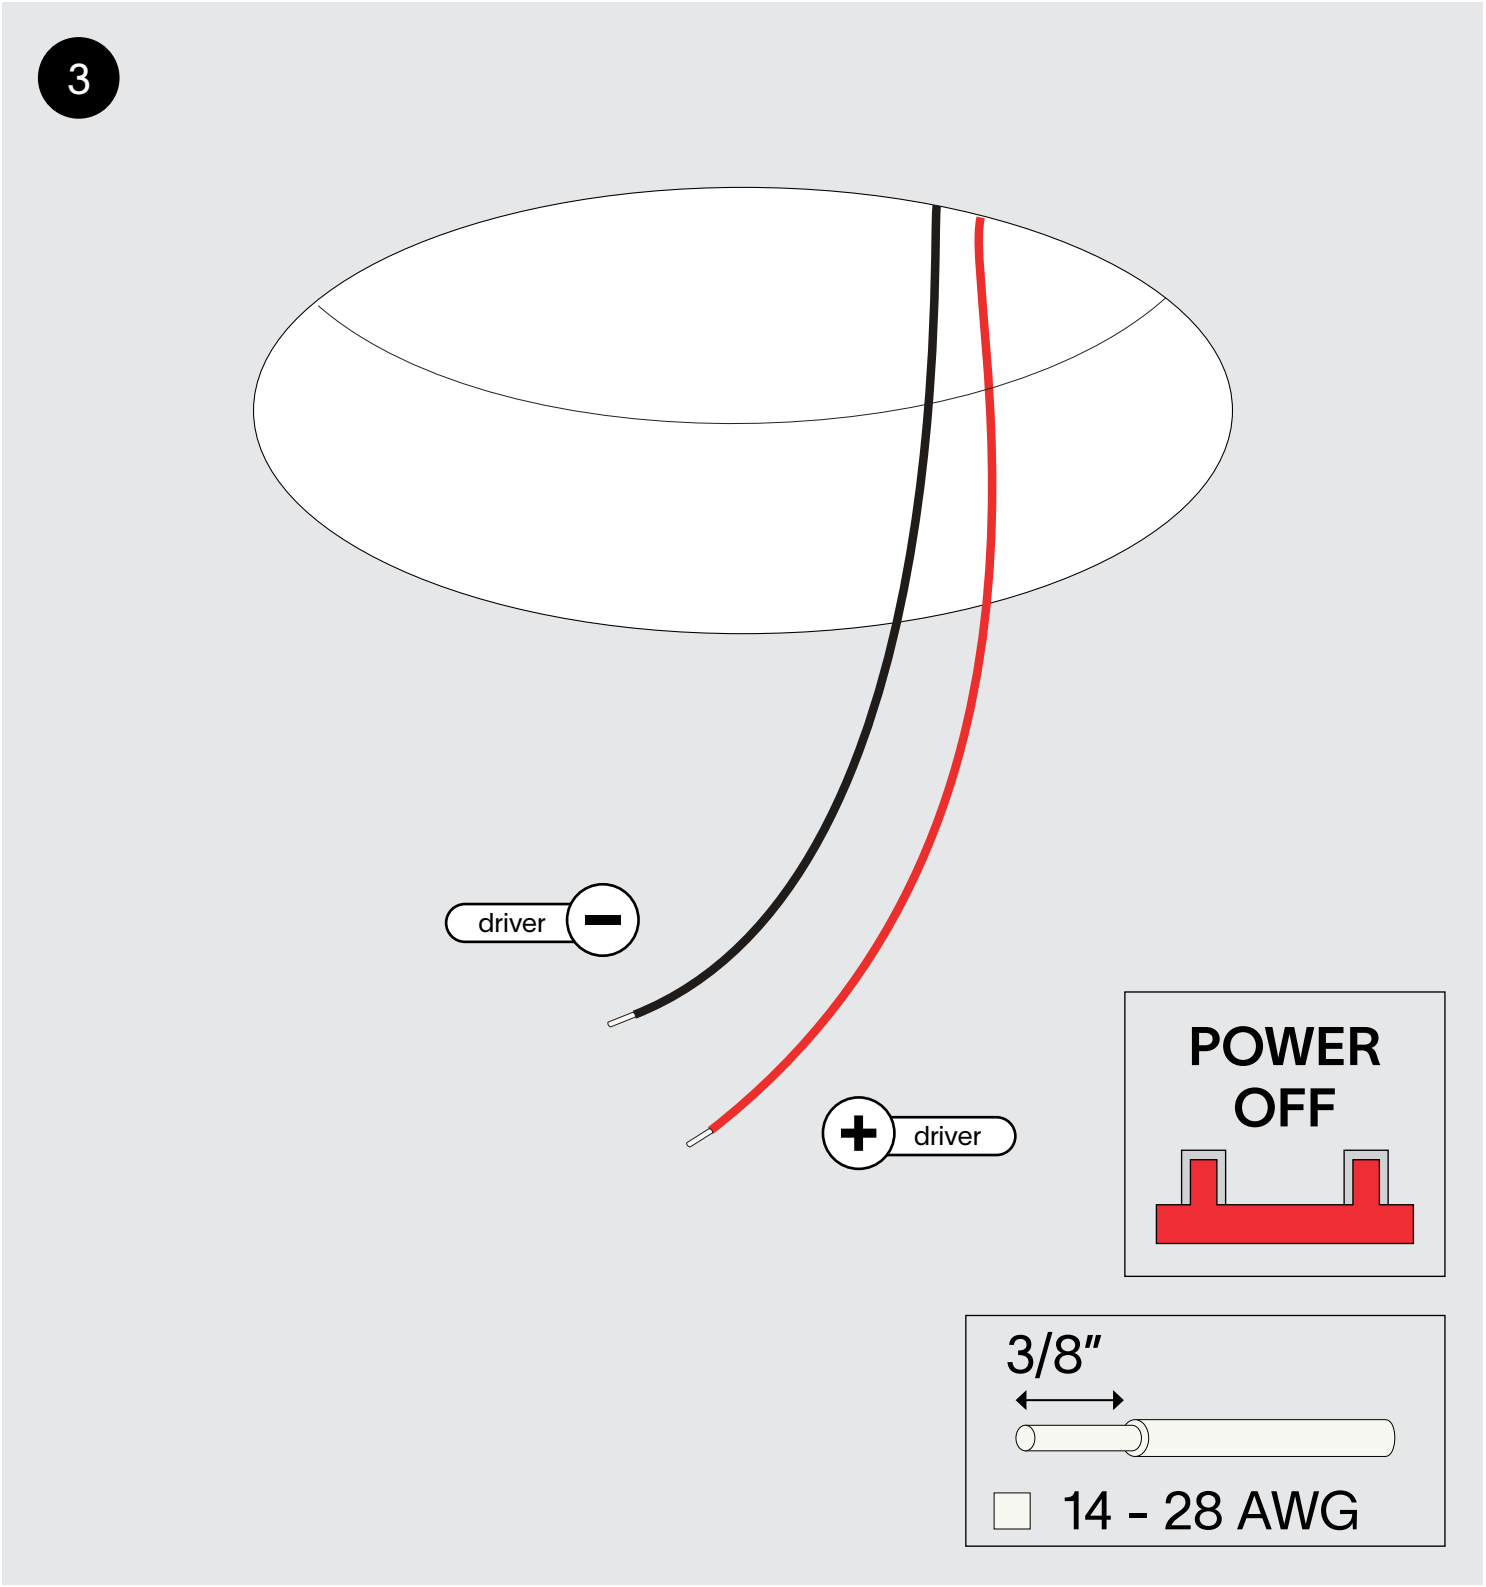


See packaging or fixture label for maximum current.

4

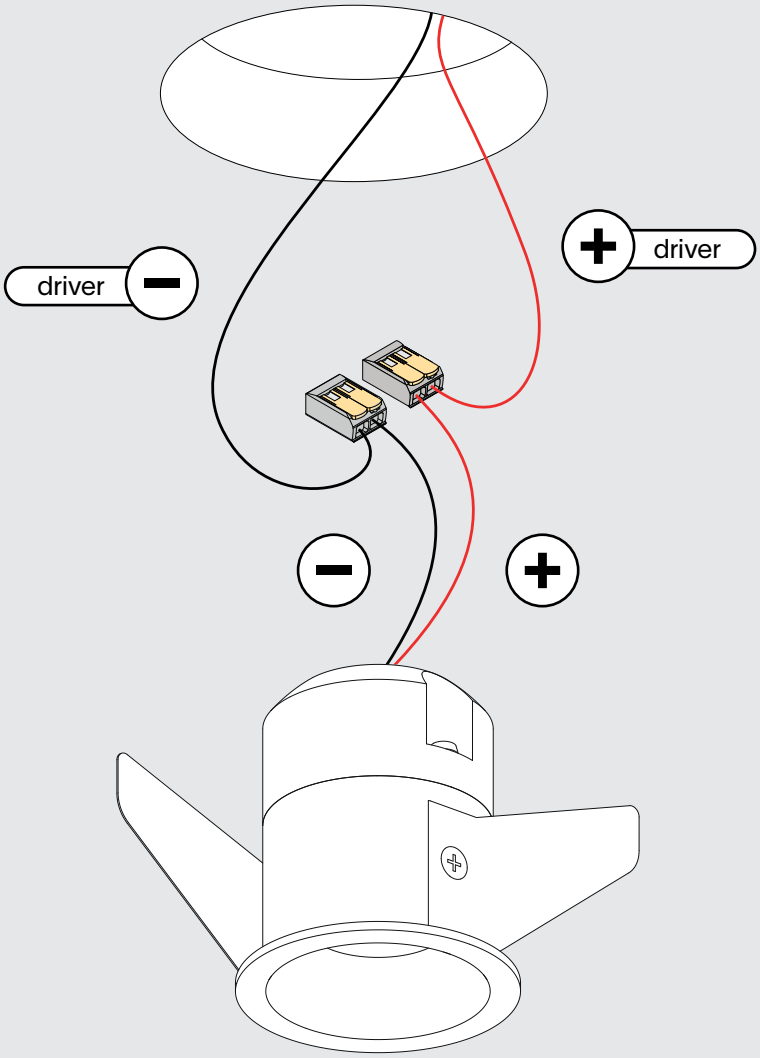


Connect the wires with wago connectors. For serial connection, respect polarity. Combine with a prado LED-driver.


5

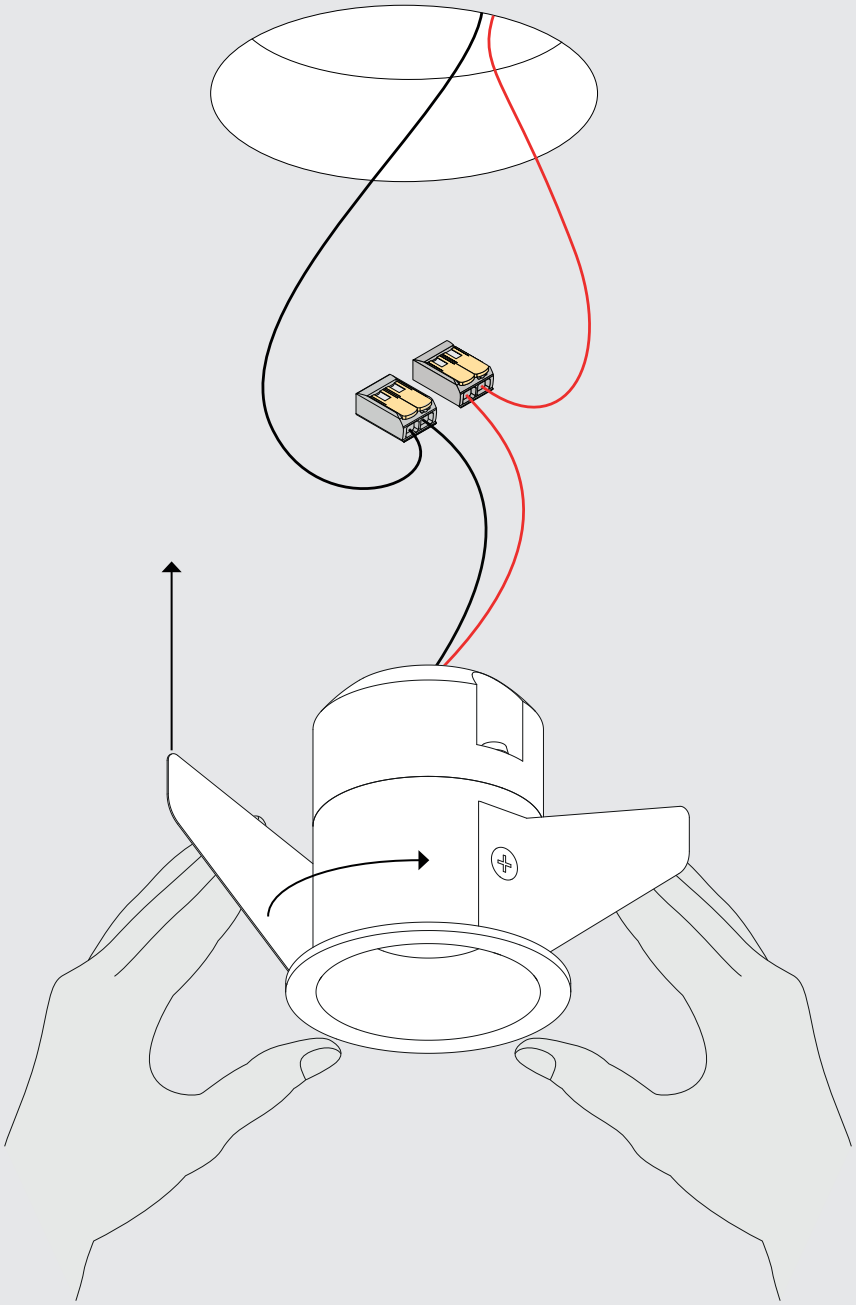

Bend over the springs and push the luminaire into the ceiling.

6

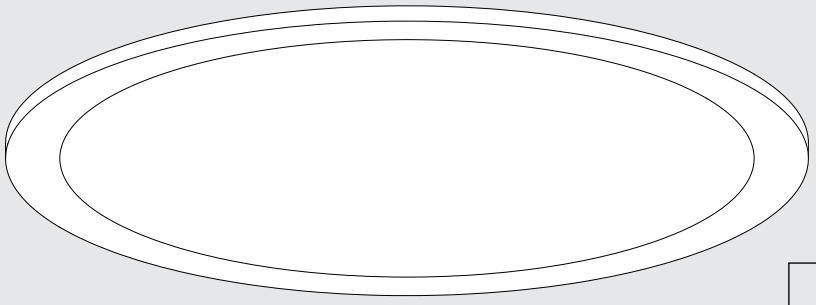


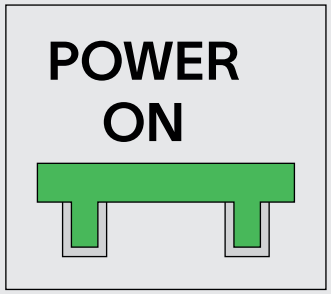

Turn the power back on.

thank you for choosing prado

UL CERTIFIED
SAFETY US-CA
E543420



prado.com

Installation must be done by skilled professionals only and instructions must be followed at all times. Warranty will not apply in case of wrongful use or if unskilled personnel attempts to repair a product.