

unifit mud plate | duplex
installation instruction

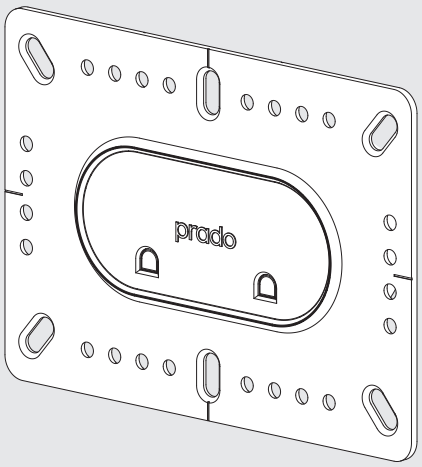


rounded


square

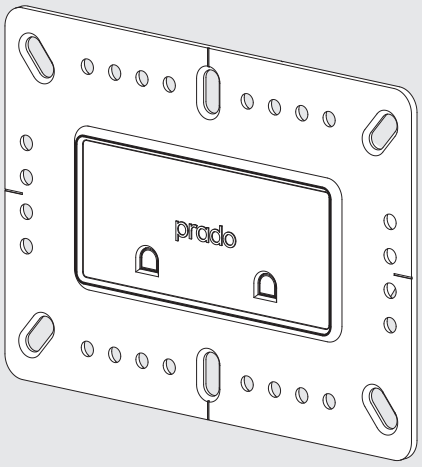


1

For self-contained installations only.
Not compatible with back boxes.

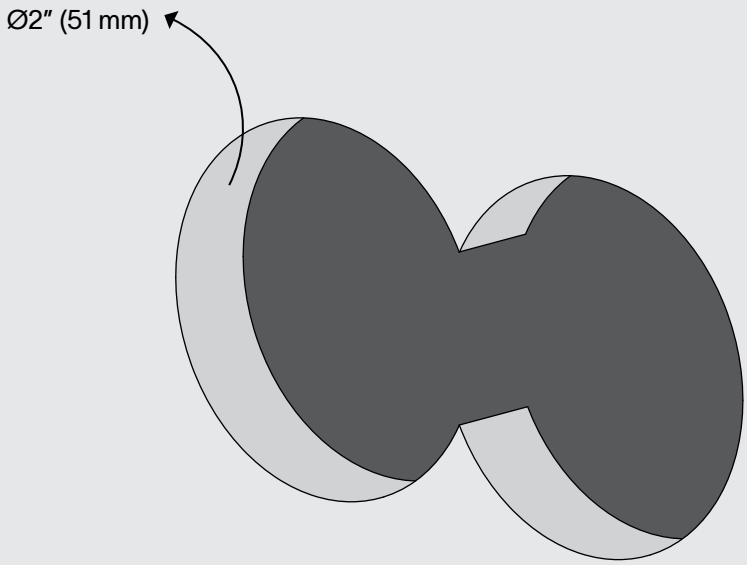

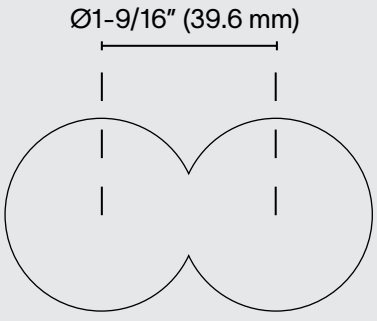


Drill two Ø2″ holes with a center distance of 1-9/16″.

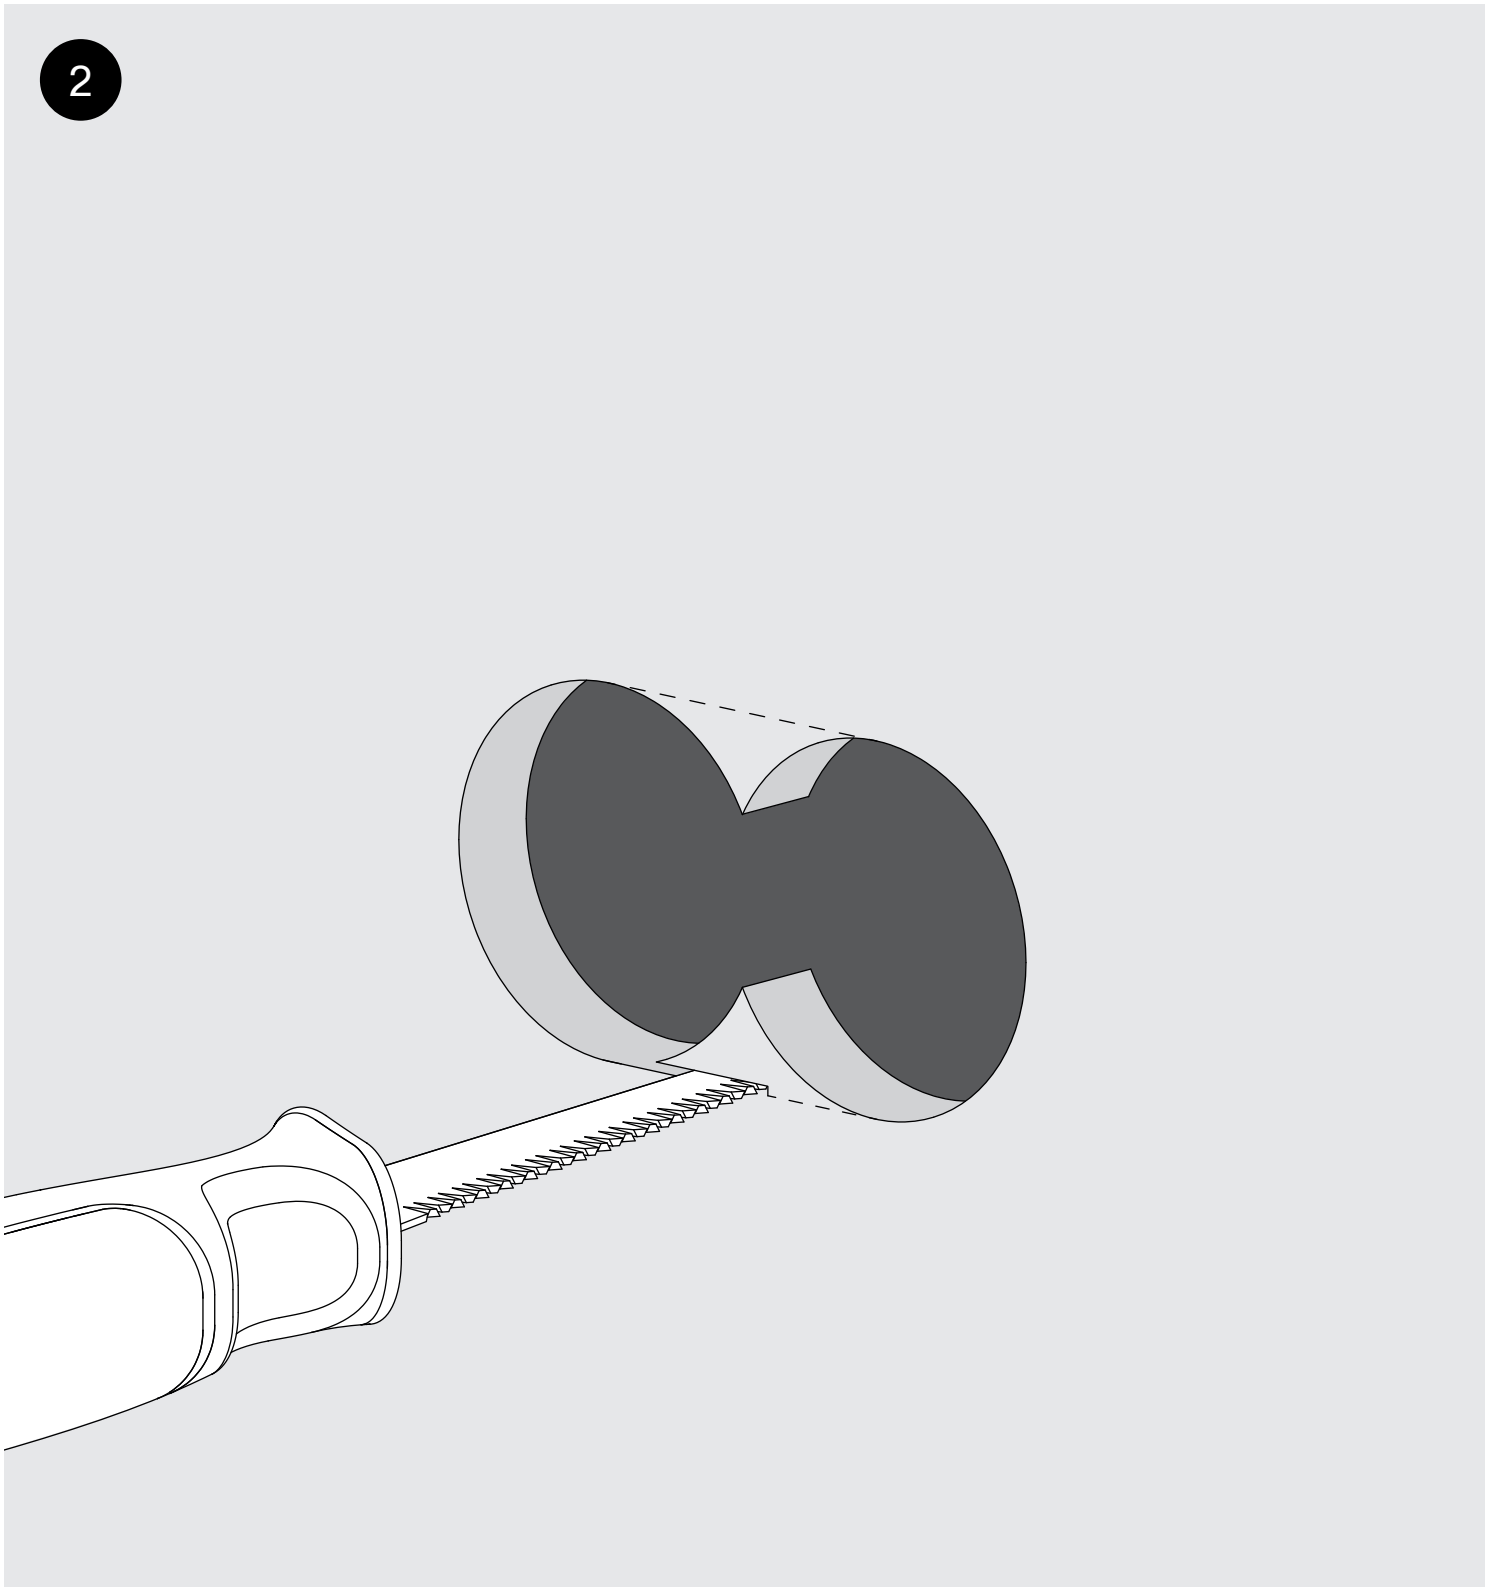


Make 2 straight cuts that touch the top and bottom of the holes.

3

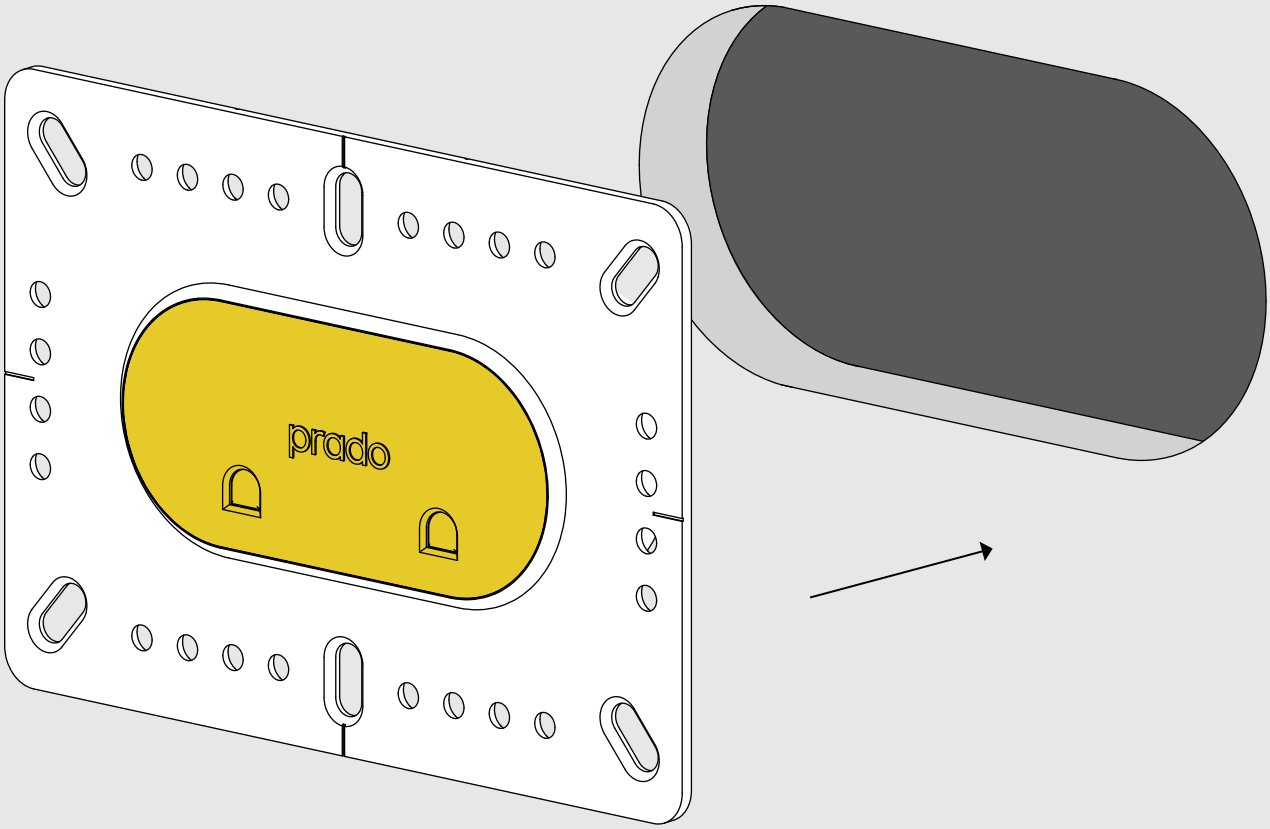


Insert the mud plate in the hole.

4

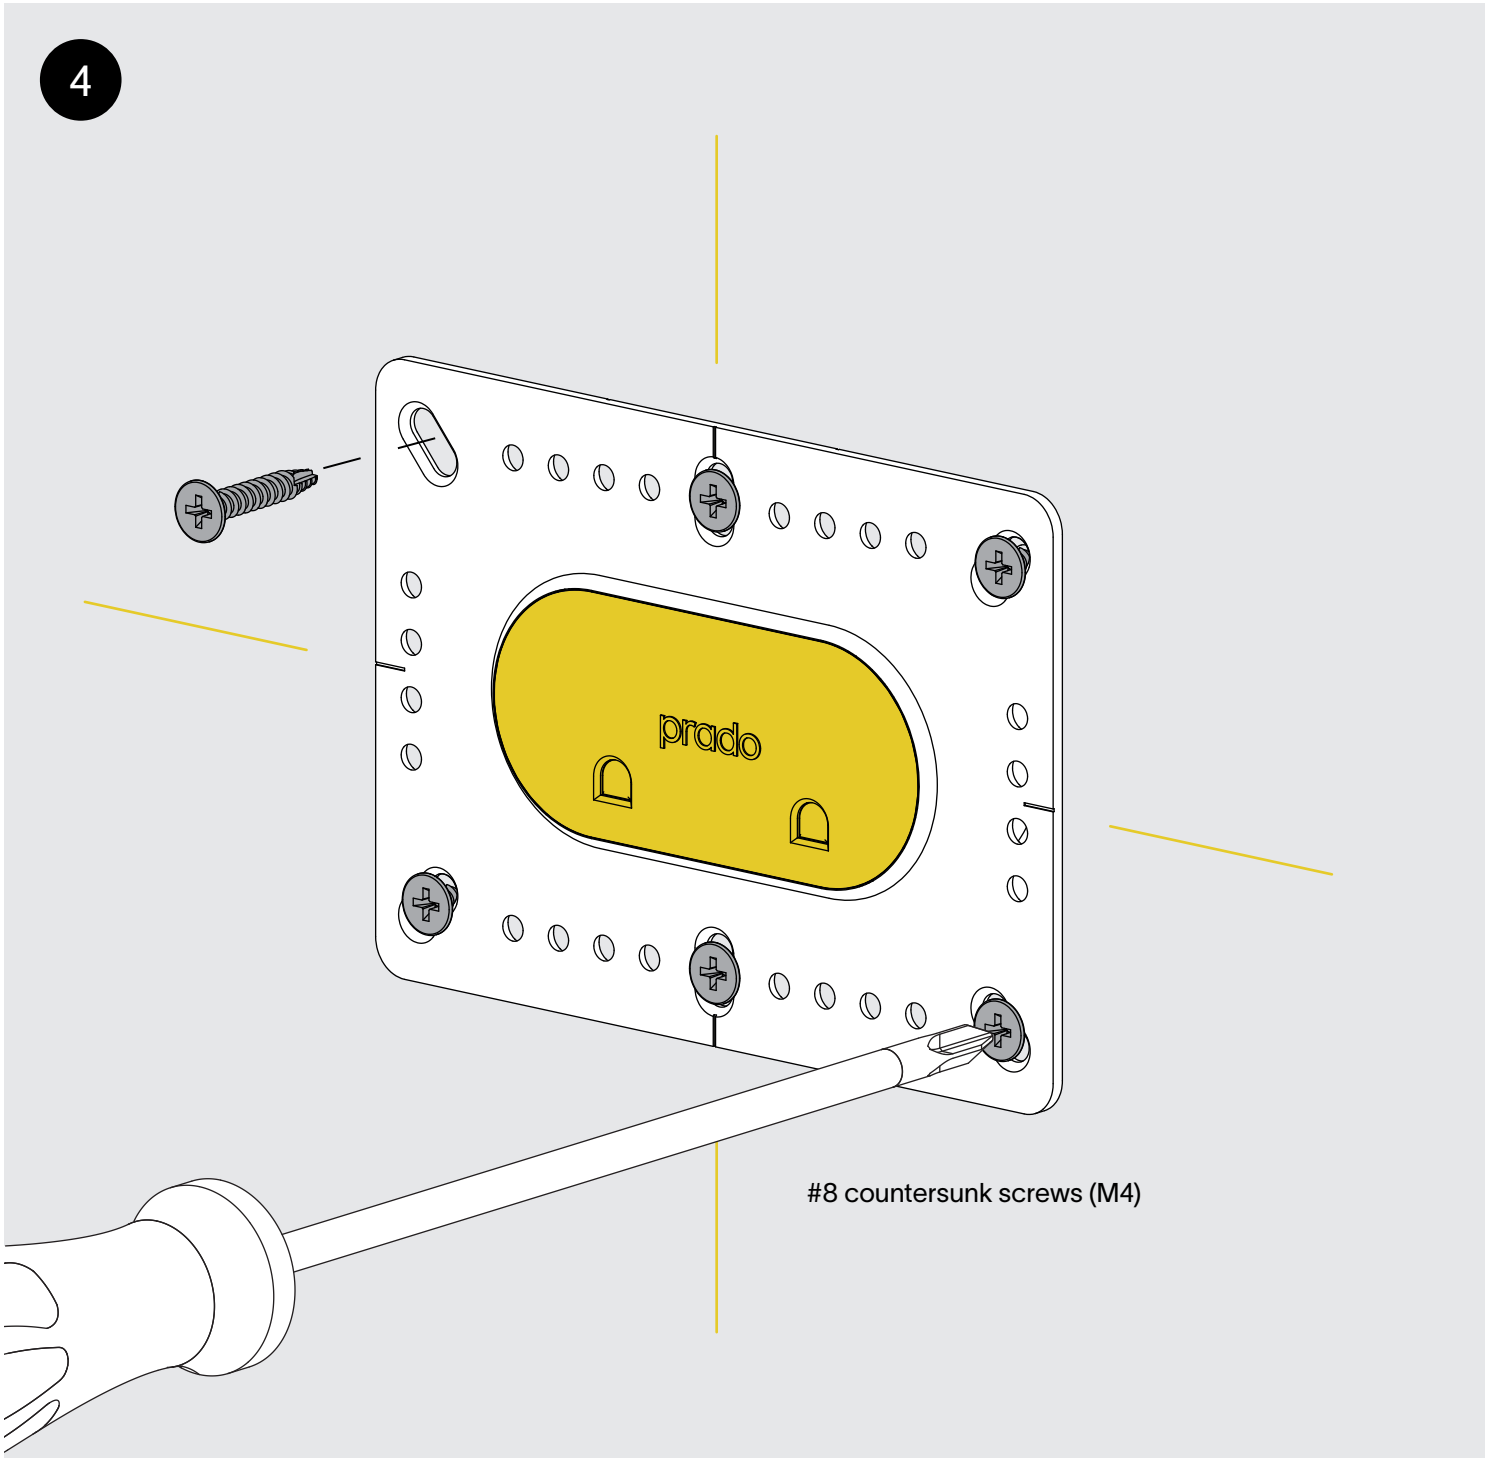


Securely fasten the mud plate to the drywall. Screw into a solid surface (e.g., wood or metal stud) behind the drywall or use heavy-duty drywall anchors rated for at least 50 lbs. The installer is responsible for ensuring optimal attachment and verifying that the chosen method supports the load.

5

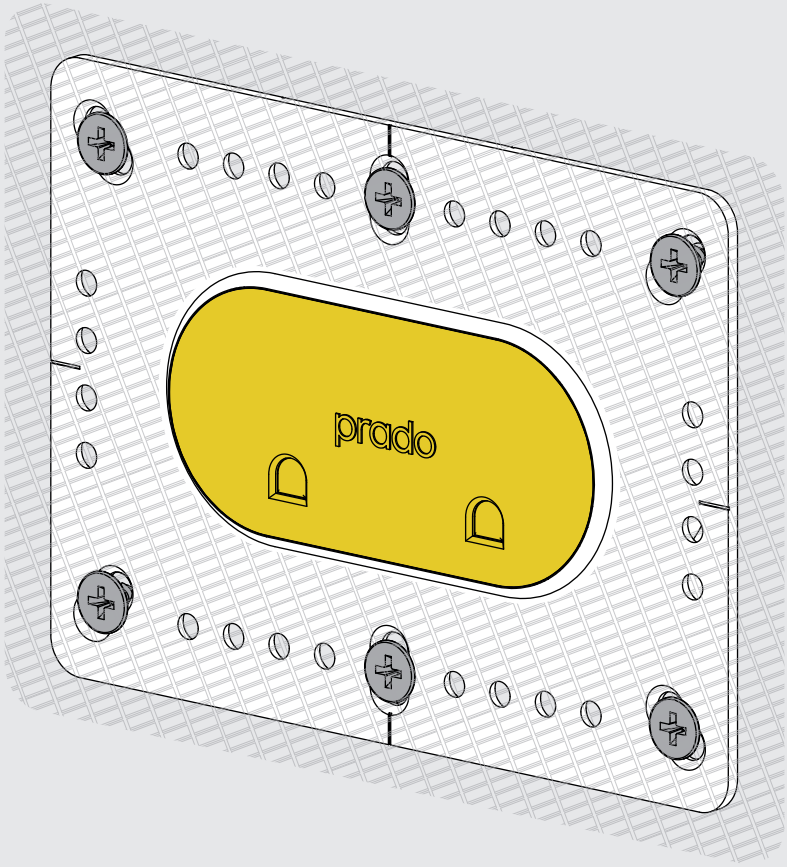


Use a fiberglass mesh tape for optimal plaster adhesion.

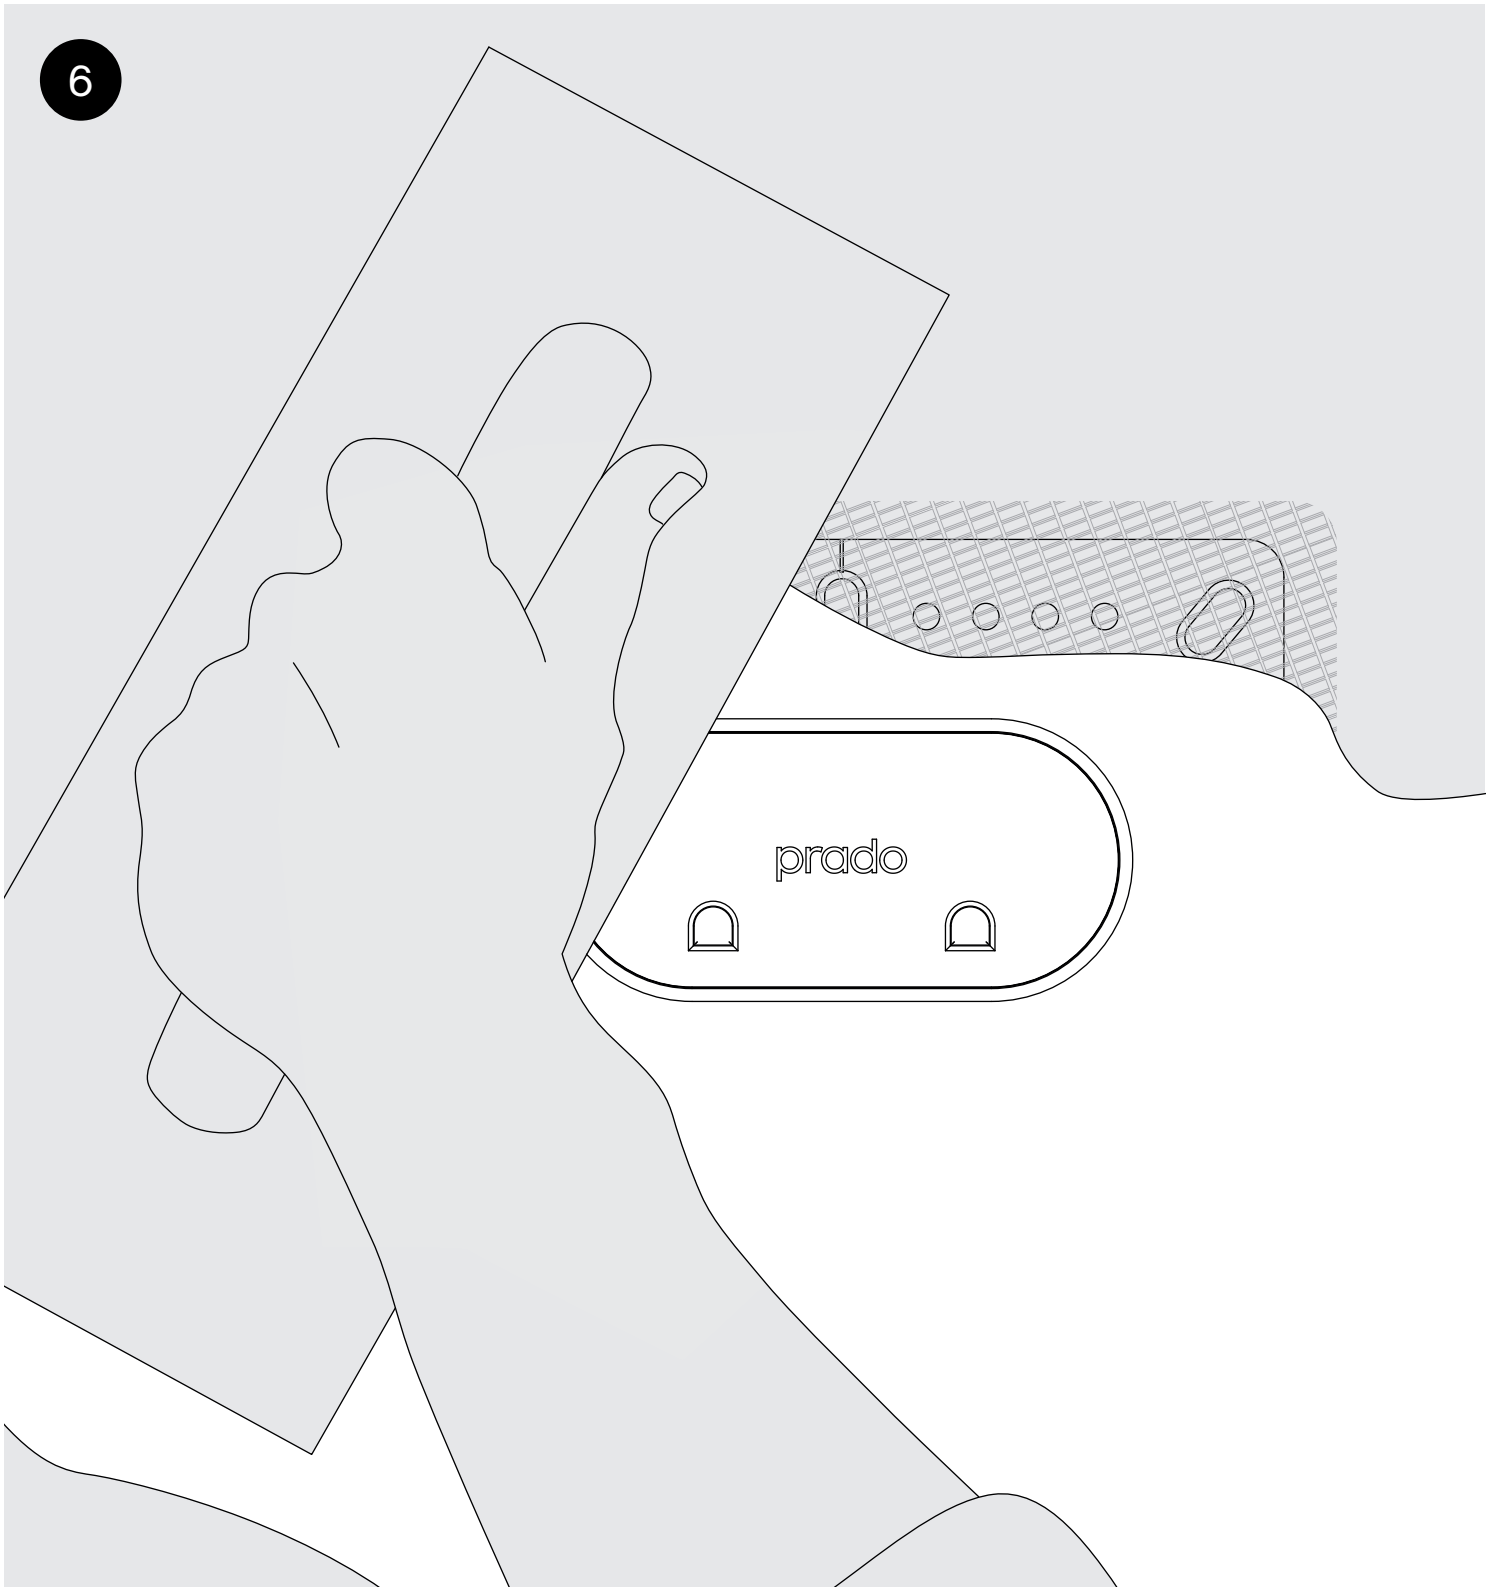

Excercise caution while plastering, do not damage the plate.
Keep the plaster lid inside the mud plate while plastering.

7

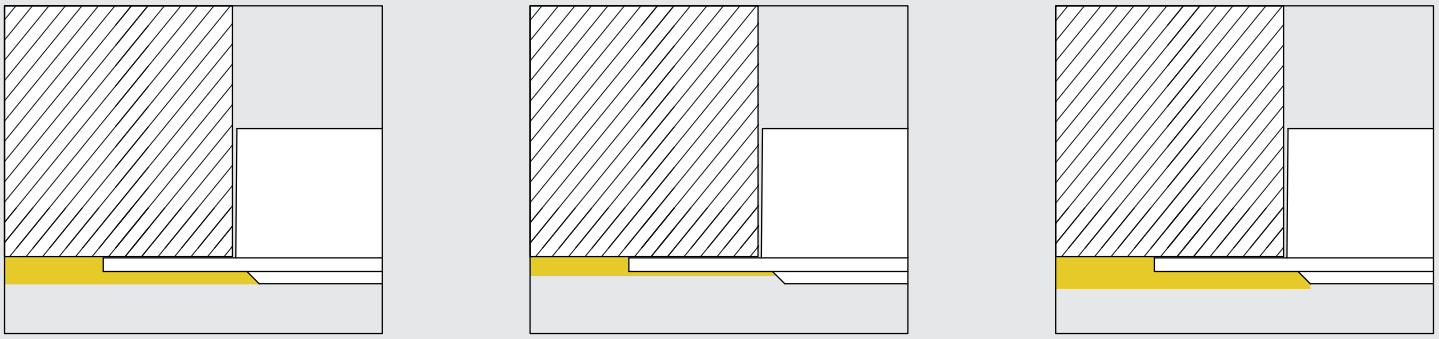

perfect amount of plaster ✓

not enough plaster ✗

too much plaster ✗

Make sure not to touch the edge of the plate while sanding.

thank you for choosing prado

C ETL US LISTED
Intertek
5029983

CONFORMS TO UL STD. 498
CERTIFIED TO CSA STD. C22.2#42

Installation must be done by skilled professionals only and instructions must be followed at all times. Warranty will not apply in case of wrongful use or if unskilled personnel attempts to repair a product.