
wallwash | trimless


installation instruction

1

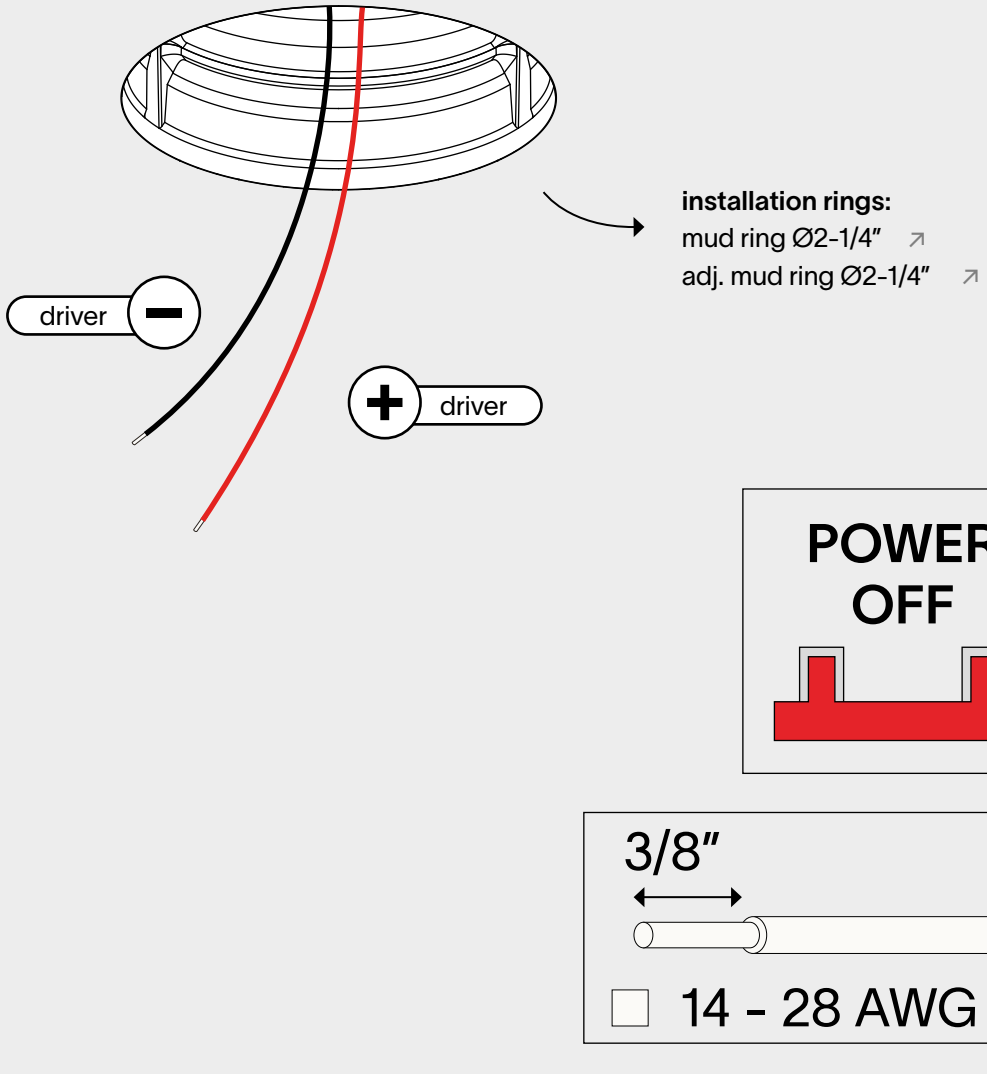


The recommended distance from the wall is 1/4 to 1/3 of the ceiling height, the same distance is also recommended as the spacing between the luminaires.


2

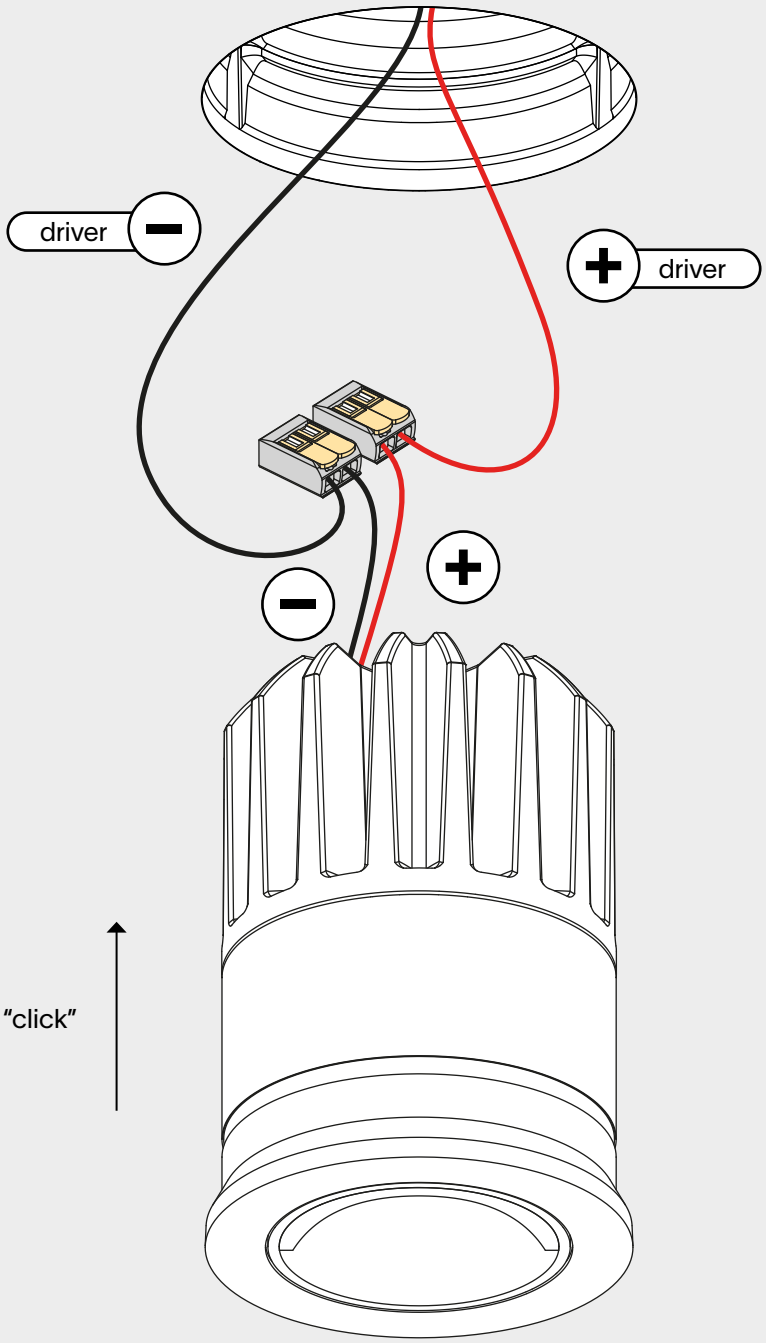


Connect the wires with wago connectors. For serial connection, respect polarity. Combine with a prado LED-driver.

3

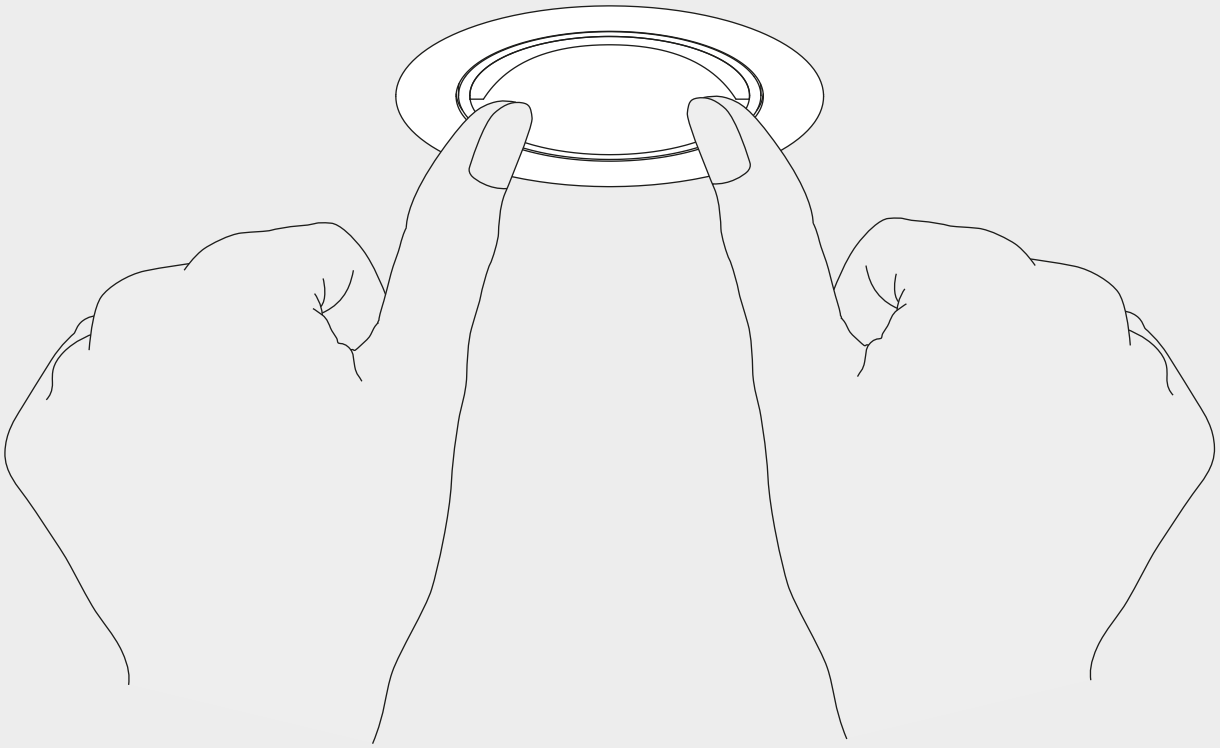

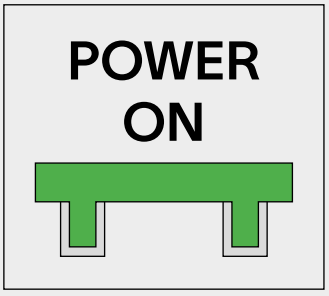

Point the luminaire towards the wall. Turn the power back on.

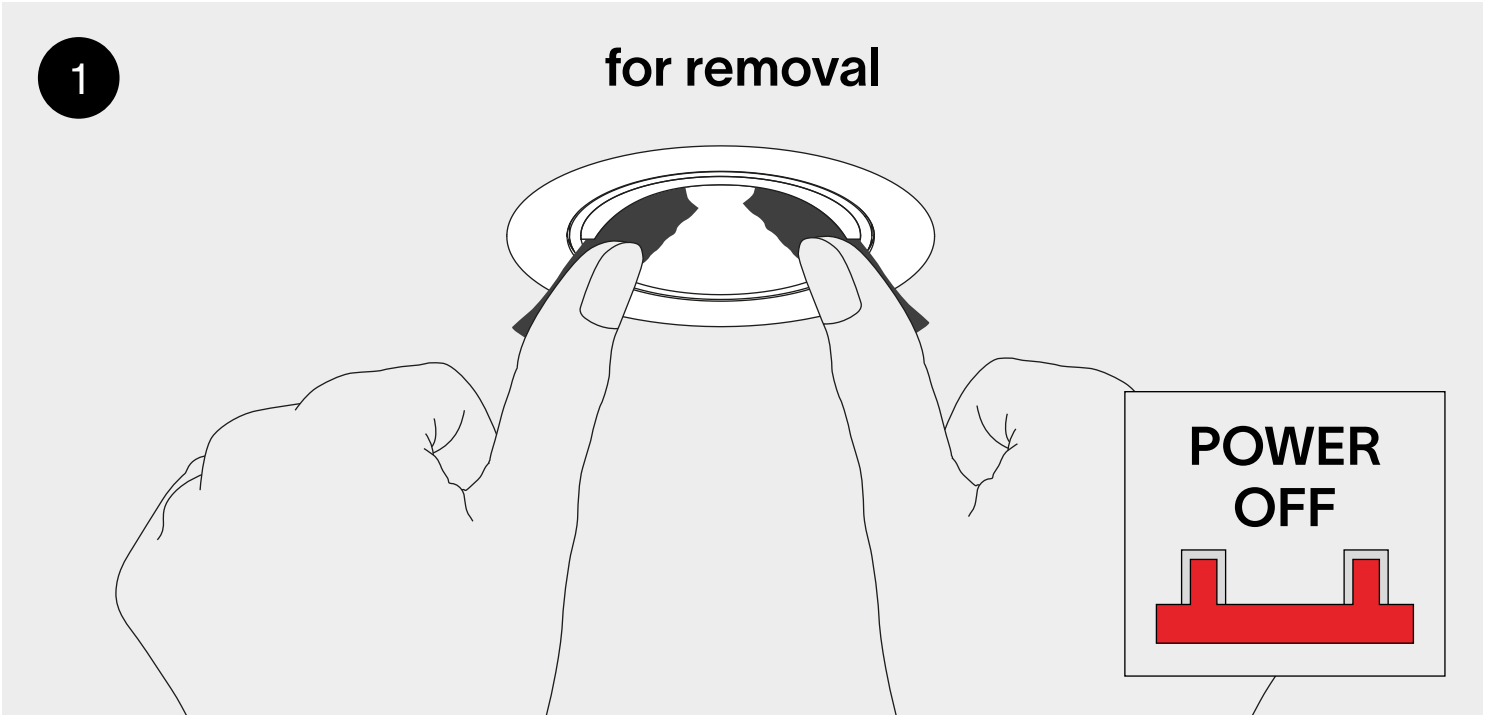

In case maintenance would be needed, the luminaire can be removed from the plaster ring without doing any damage by using duct tape. Make sure the luminaire has cooled down before using the duct tape.

thank you for choosing prado

CERTIFIED
SAFETY US-CA
E543420

prado.com

Installation must be done by skilled professionals only and instructions must be followed at all times. Warranty will not apply in case of wrongful use or if unskilled personnel attempts to repair a product.