

mud ring Ø2-1/4″
installation instruction

1

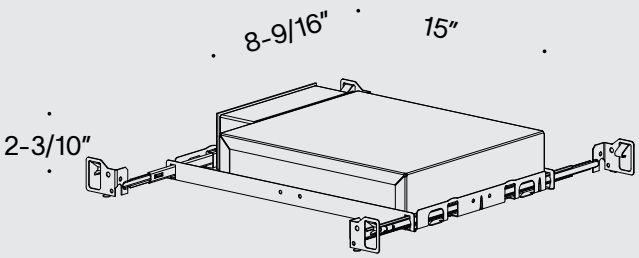


housing

IC AT

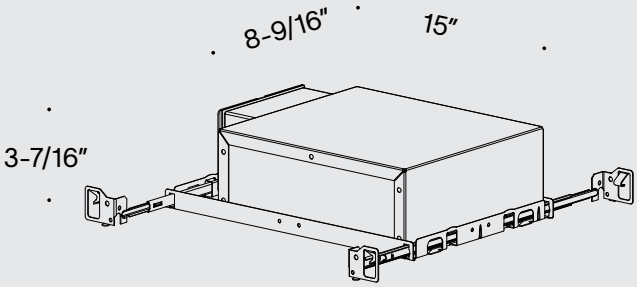


housing

IC AT

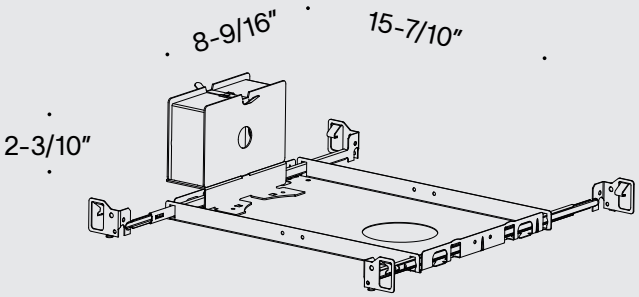

housing

NIC

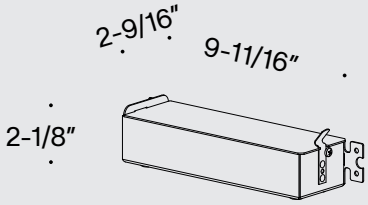


remodel

IJB


Install the appropriate IC/driver box.

2

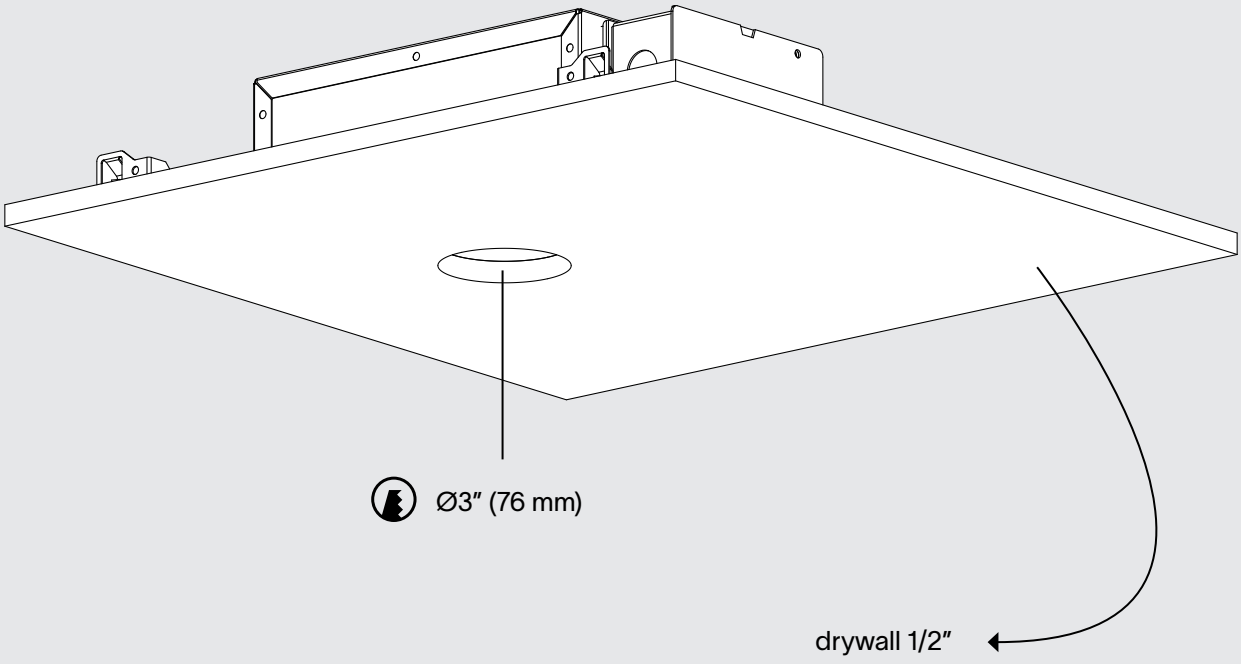


Install the drywall (thickness 1/2″) with a round hole (Ø3″).


3

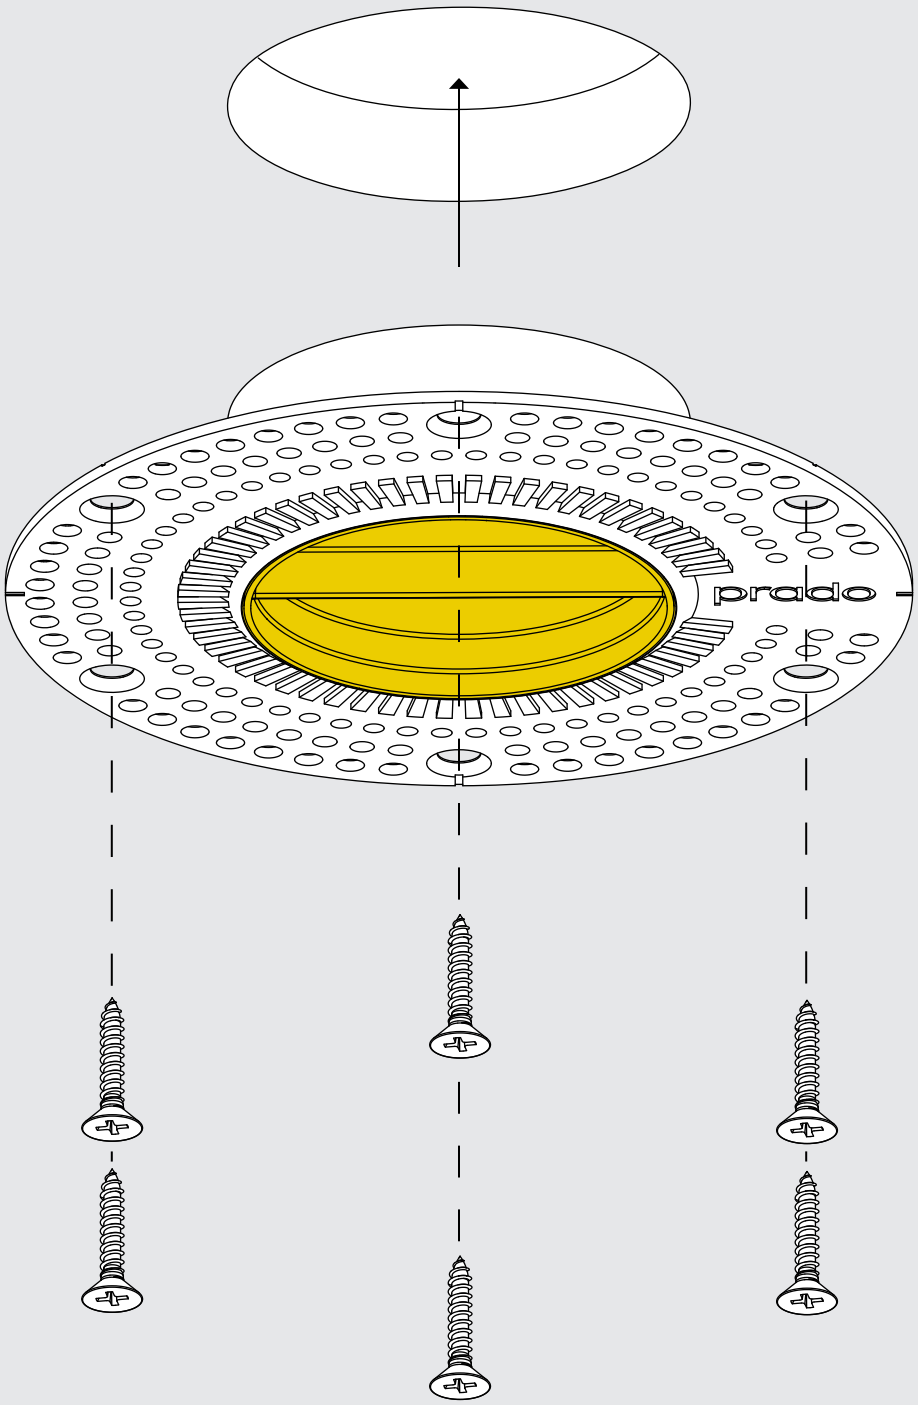


Install the mud ring and securely fasten it with glue or the appropriate screws on a screw-fast surface. It’s the installers responsability to ensure optimal attachment.

4

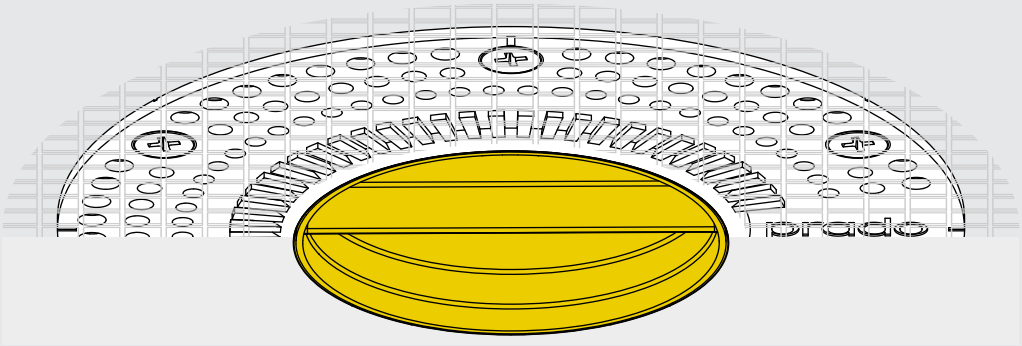


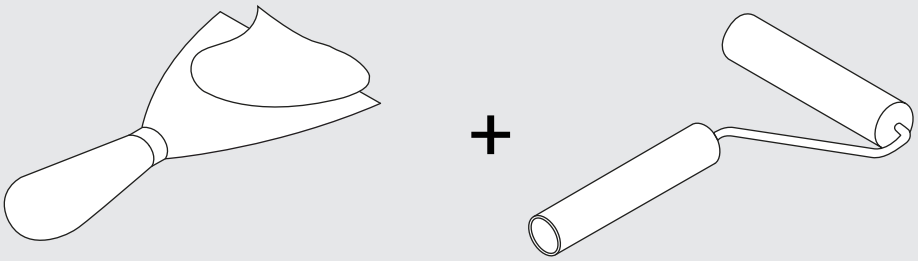

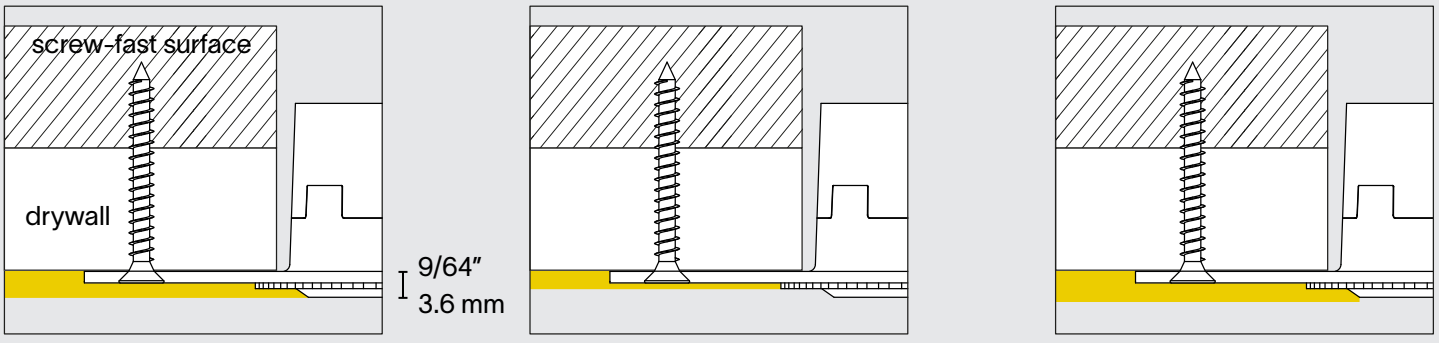

Excercise caution while plastering, do not damage the ring. Keep the plaster lid inside the mud ring while plastering. Use a fiberglass mesh tape for optimal plaster adhesion. Make sure not to touch the edge of the ring while sanding.

5

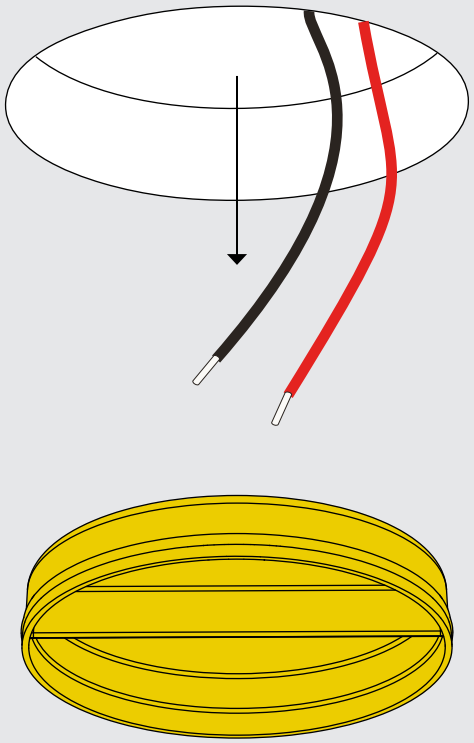

Remove the plaster lid before installing the fixture. Any residue needs to be removed without damaging the edges of the ring.

thank you for choosing prado

UL CERTIFIED
SAFETY US-CA
E543420

prado.com

Installation must be done by skilled professionals only and instructions must be followed at all times. Warranty will not apply in case of wrongful use or if unskilled personnel attempts to repair a product.