
retrofit plaster ring fix 3.0


installation instruction

1

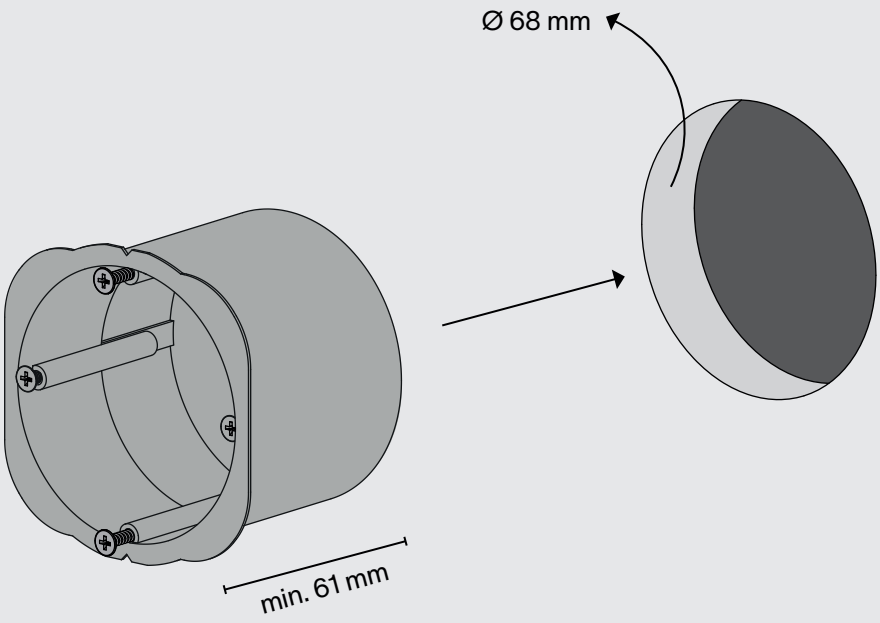


Drill a Ø 68 mm hole and install the junction box in the wall.


or

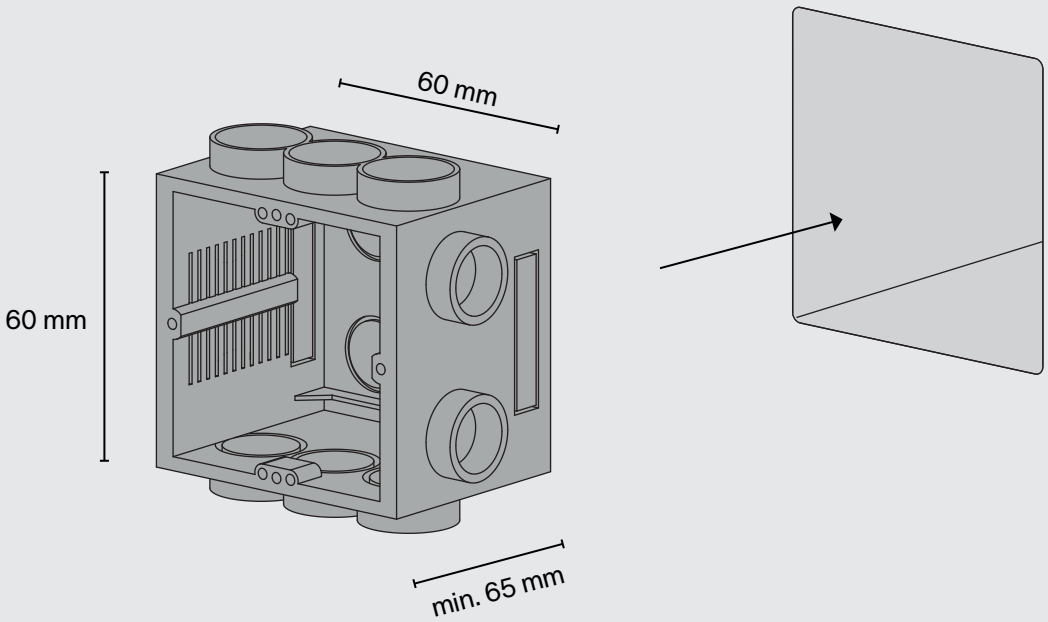

2

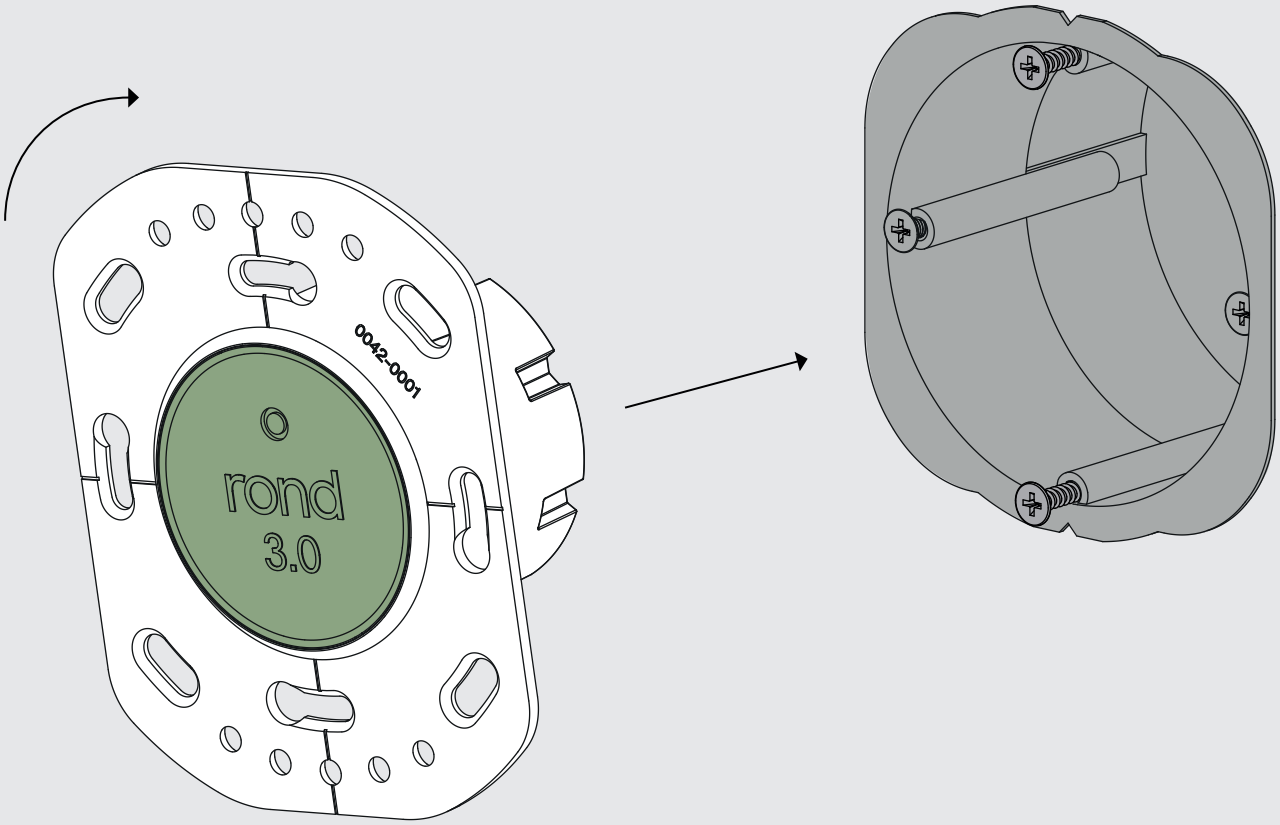


Insert the plaster ring in the junction box and give it a twist.

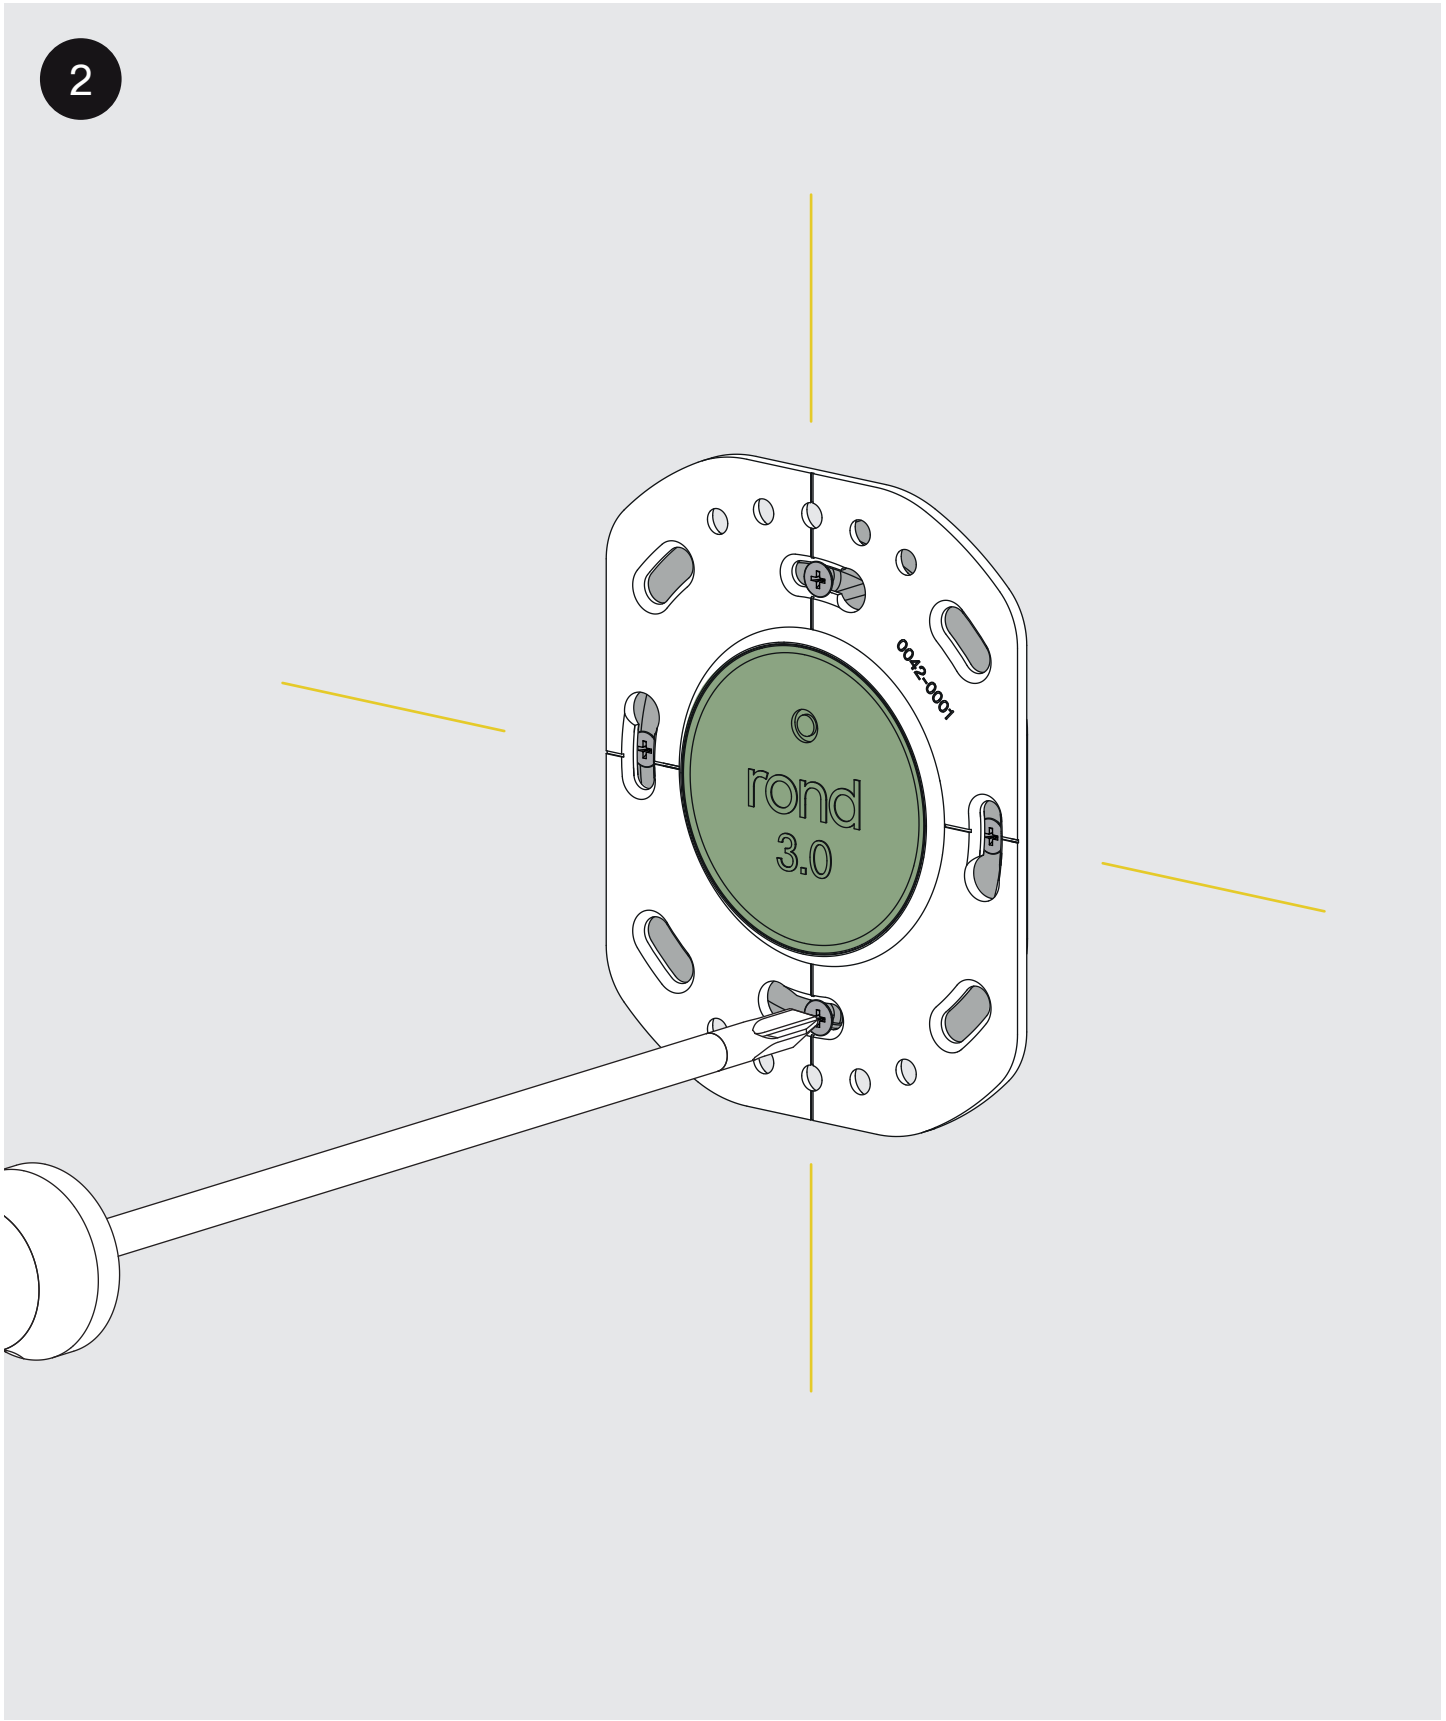

Level and secure the plaster ring to the junction box using the appropriate screws.

4

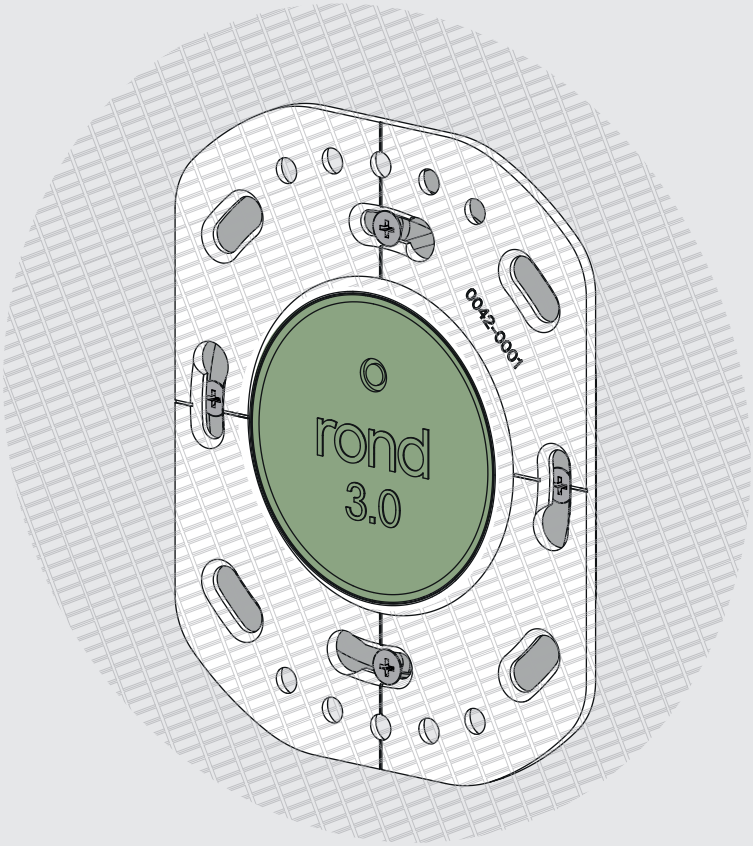


Use a fiberglass mesh tape for optimal plaster adhesion.



Excercise caution while plastering, do not damage the ring.
Keep the plaster lid inside the mud ring while plastering.

6

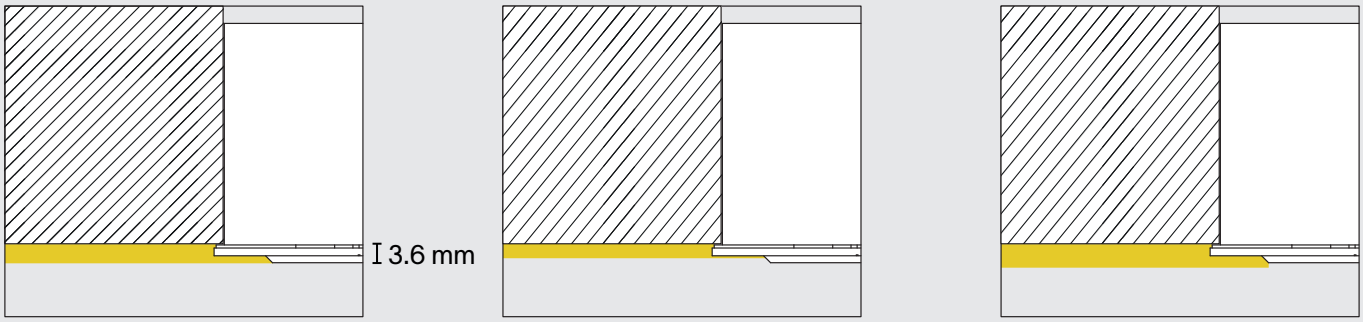

Make sure not to touch the edge of the plate while sanding.

thank you for choosing rond

---

rond.io

Installation must be done by skilled professionals only and instructions must be followed at all times. Warranty will not apply in case of wrongful use or if unskilled personnel attempts to repair a product.