

prado


clt ring jack
installation instruction

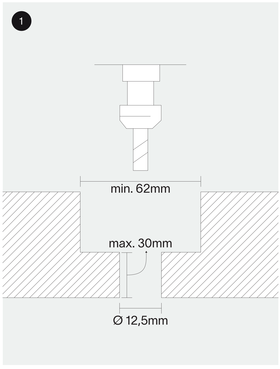

Drill a round hole with the above dimensions.

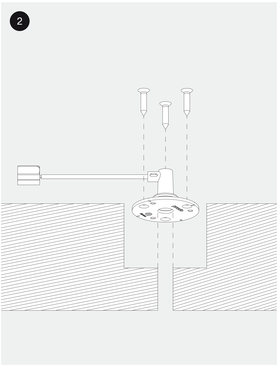


fasten the clt ring with the appropriate screws and make sure the kit is well positioned

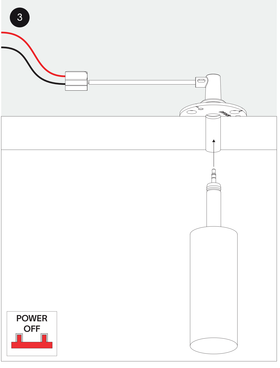


make the electrical connection and test it before closing the ceiling. Do not plug or unplug the fixure while power is on

Important Installation Note – Prevent LED Glow
To avoid unwanted LED glow, do not run AC cables alongside the DC cables coming from the LED driver. This can cause residual voltage, resulting in faintly glowing LEDs.
Note: Once the jack plaster ring or CLT ring jack is installed, it is no longer possible to add the capacitor. Be sure to install it during the initial wiring phase.

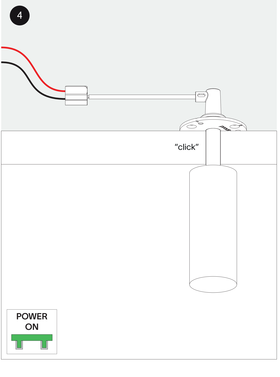

turn power on after plugging in the fixure

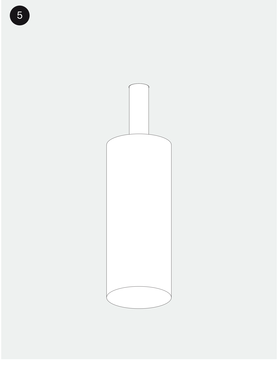

thank you for choosing prado

prado.com

Installation must be done by skilled professionals only and instructions must be followed at all times. Warranty will not apply in case of wrongful use of if unskilled personnel attempts to repair a product.