

plaster ring Ø38
installation instruction

1

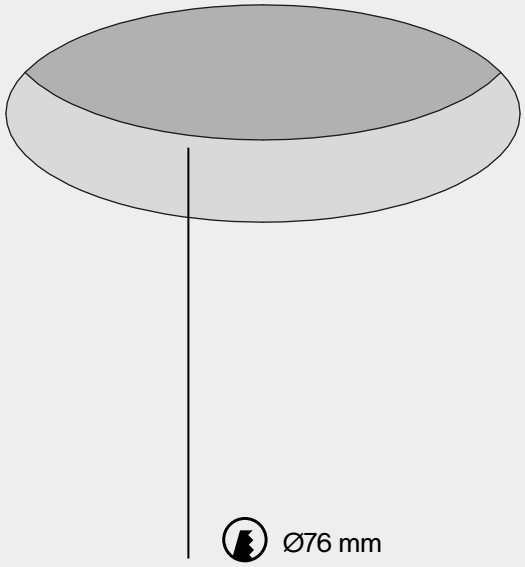


Cut a round hole (Ø76 mm). Consult the chosen luminaire tech specs for required height and free air dimensions.

2

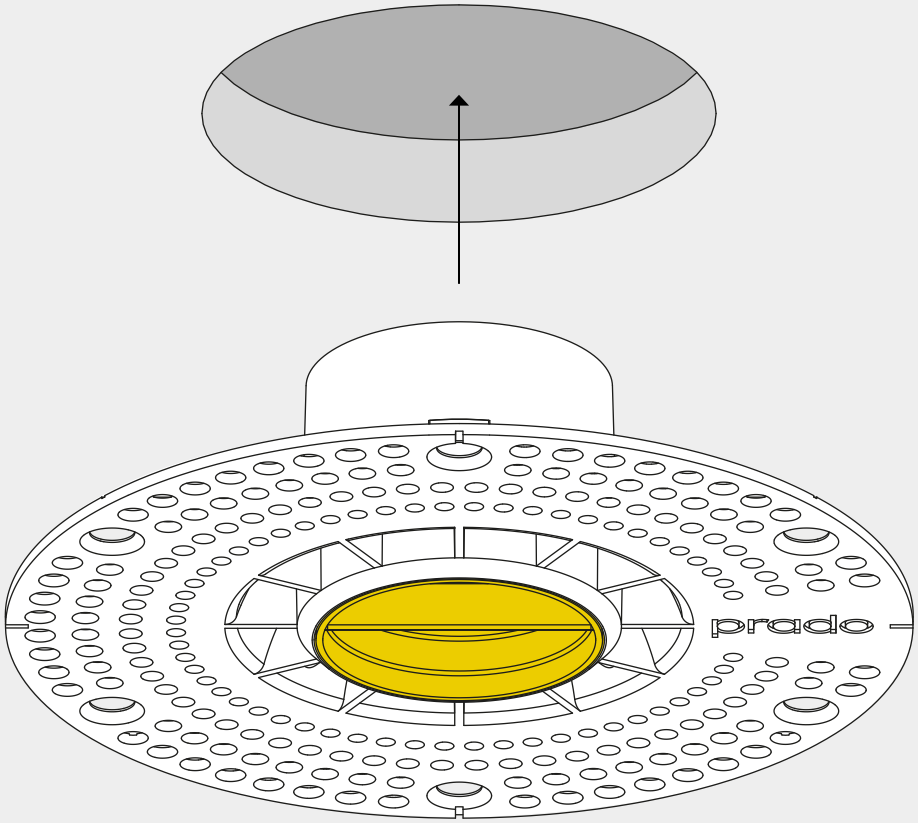


Insert the plaster ring ...


3

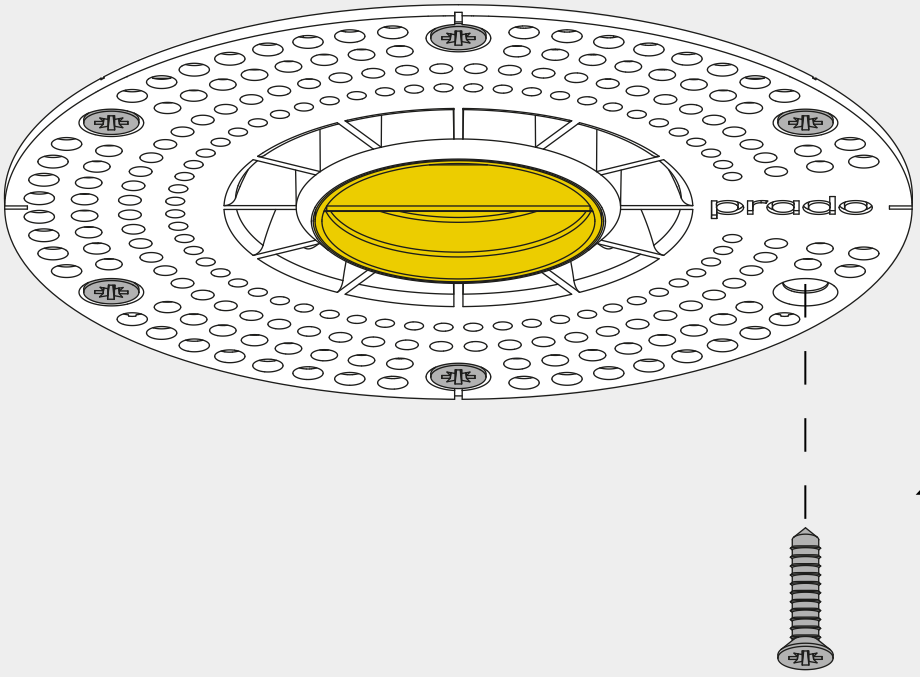


... and securely fasten it with glue or the appropriate screws on a screw-fast surface. The attachment must be able to obtain a static load of 5 kg. It’s the installers responsability to ensure optimal attachment.

4

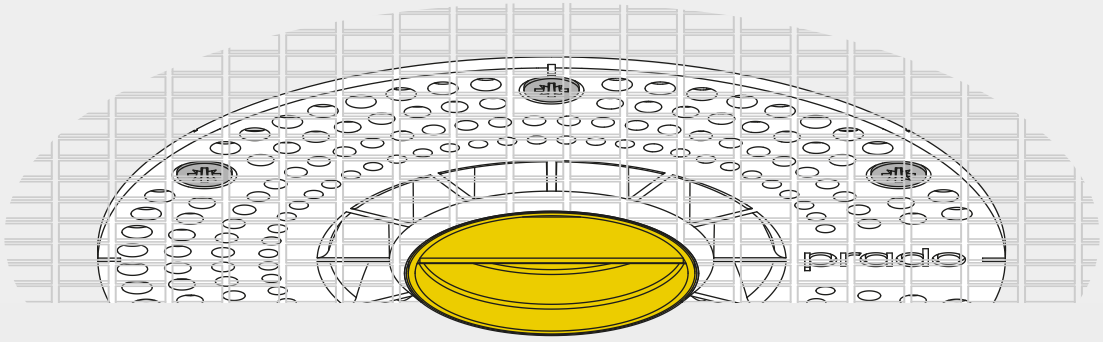

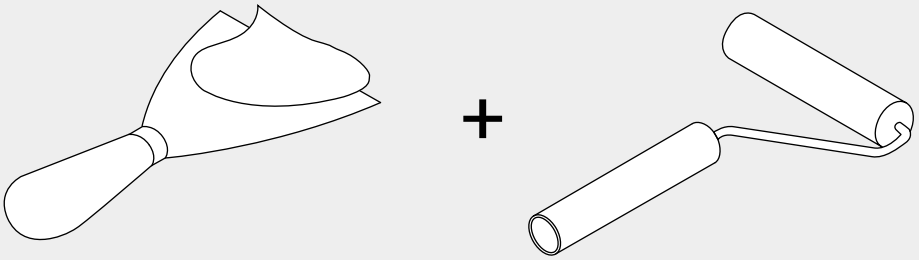


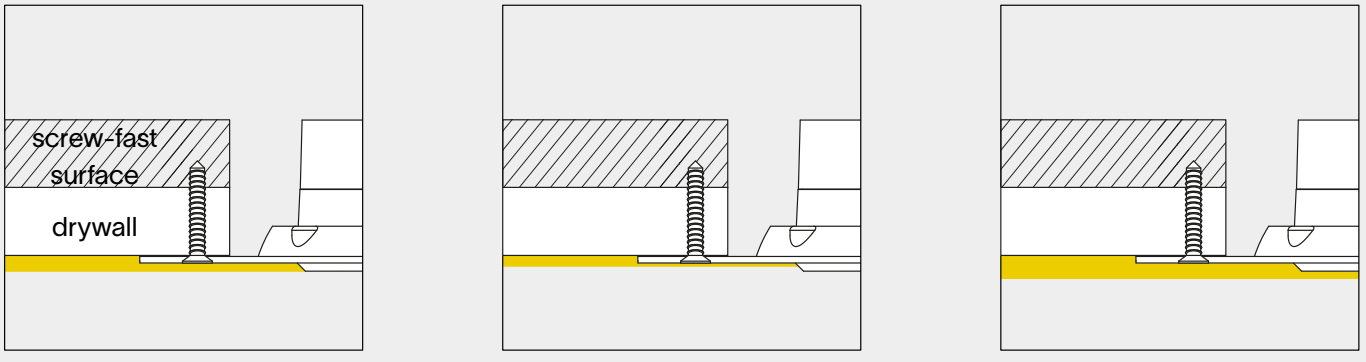

perfect amount of plaster ✓ not enough plaster ✗ too much plaster ✗

Excercise caution while plastering, do not damage the ring.
Keep the plaster lid inside the plaster ring while plastering.
Use a fiberglass mesh tape for optimal plaster adhesion.
Make sure not to touch the edge of the ring while sanding.

5

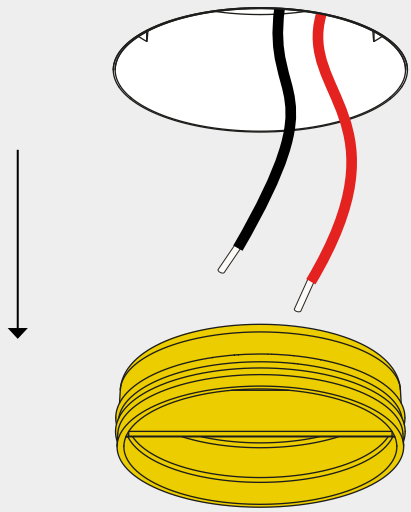

Remove the plaster lid before installing the fixture. Any residue needs to be removed without damaging the edges of the ring.

thank you for choosing prado

prado.com

Installation must be done by skilled professionals only and instructions must be followed at all times. Warranty will not apply in case of wrongful use or if unskilled personnel attempts to repair a product.