


surface spot mini
installation instruction

1

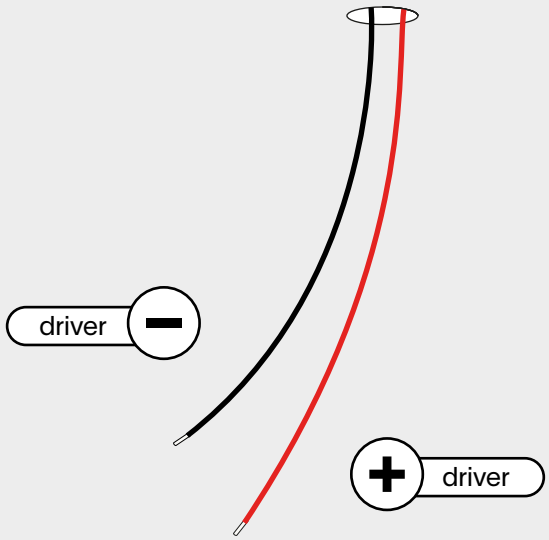


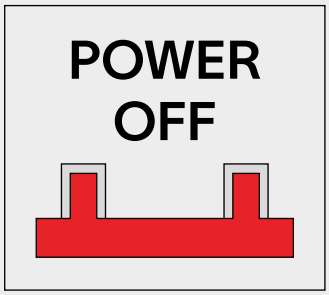


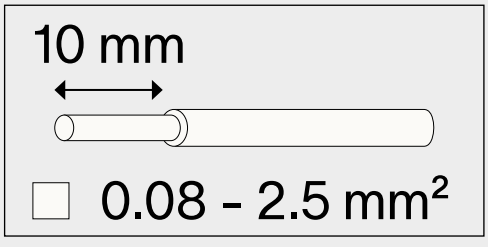

Turn the power off.


2

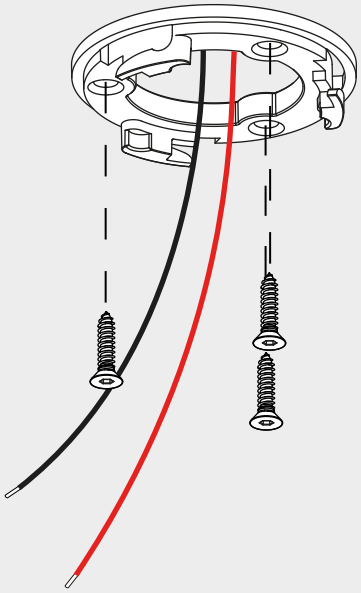

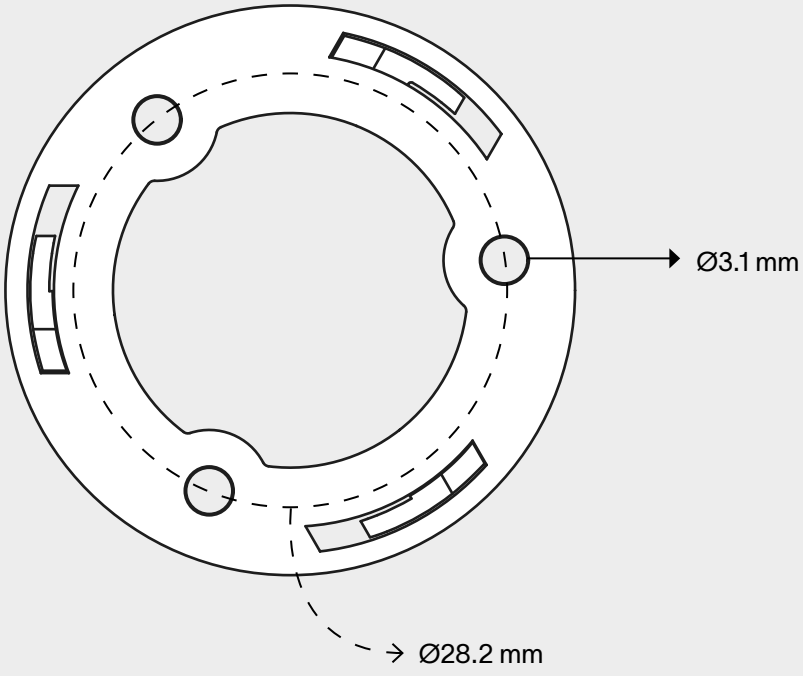


Fix the mounting plate on the ceiling with appropriate screws on a screwfast surface.

3

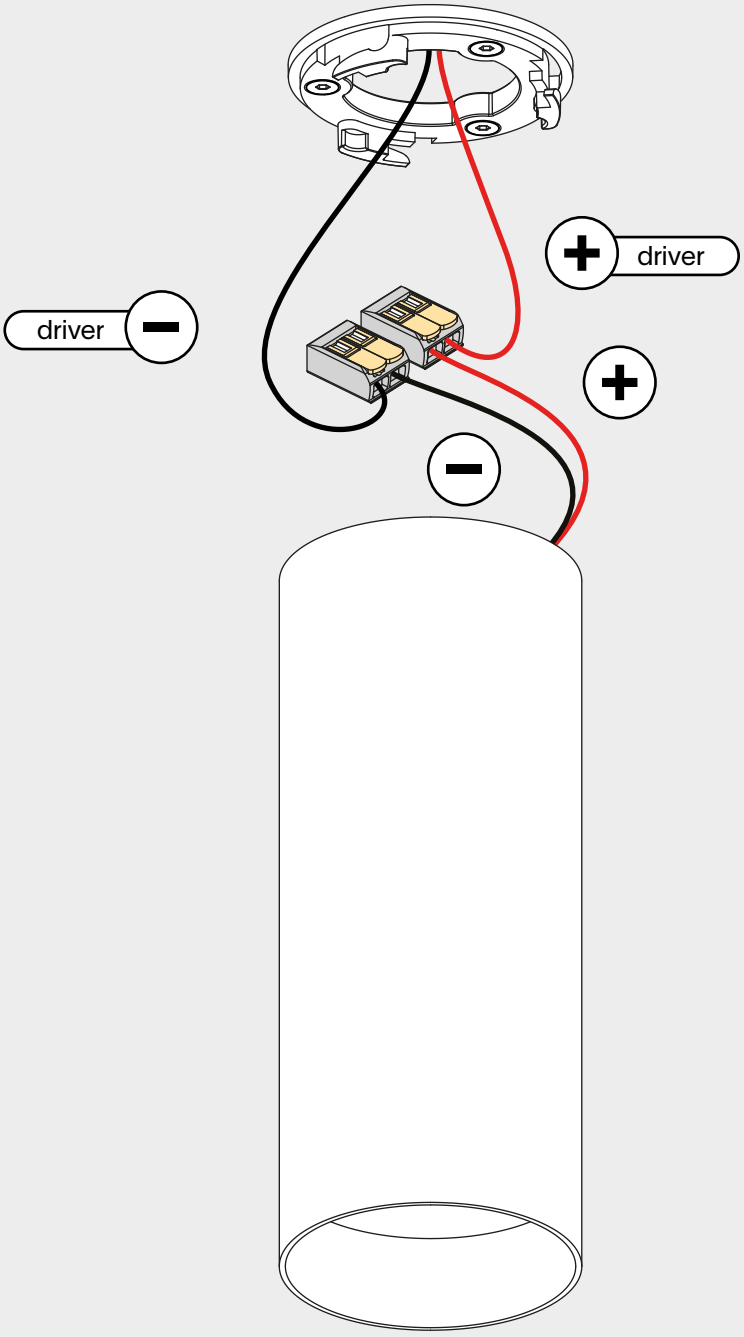


Connect the wires with wago connectors. For serial connection, respect polarity. Combine with a prado LED-driver.

4

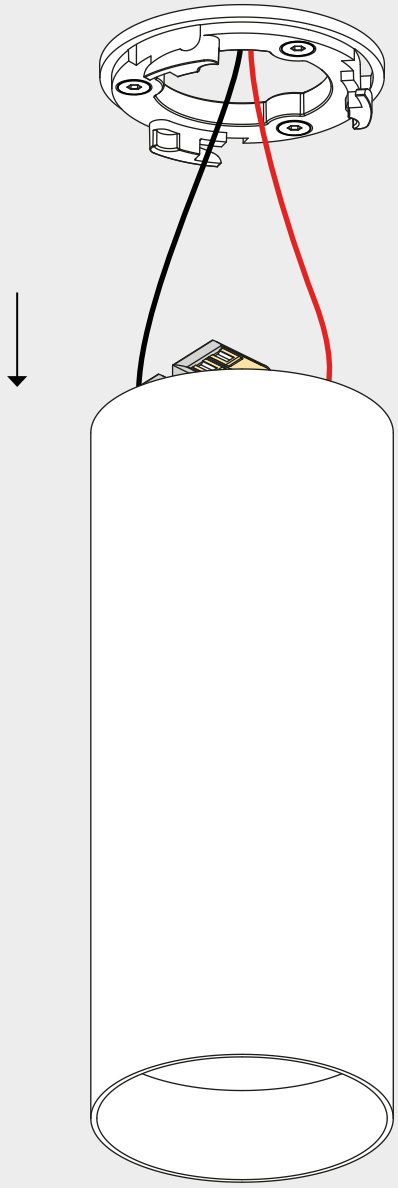


Push the wago connectors into the surface spot.


5

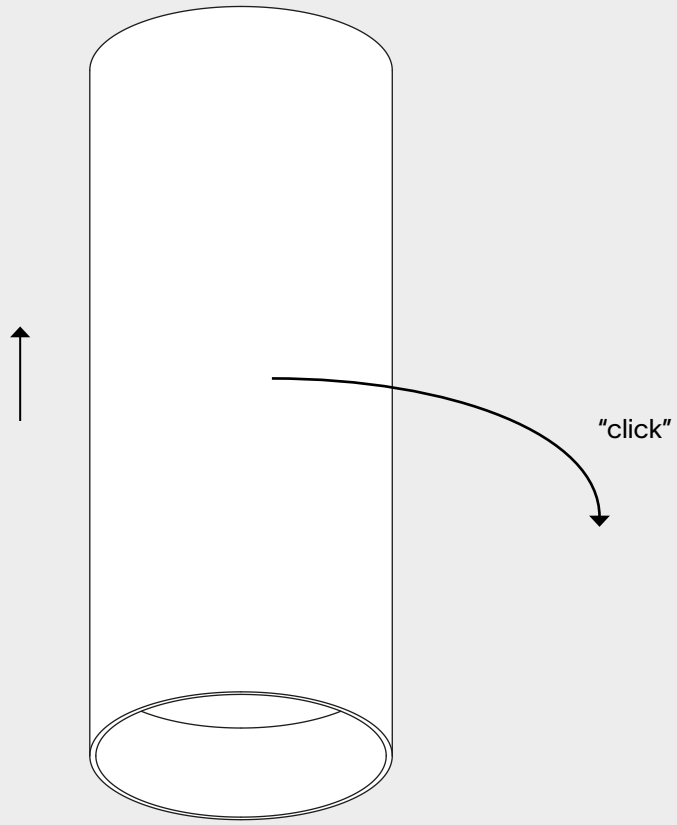

Slide the luminaire over the mounting plate and turn clockwise until it clicks.


6

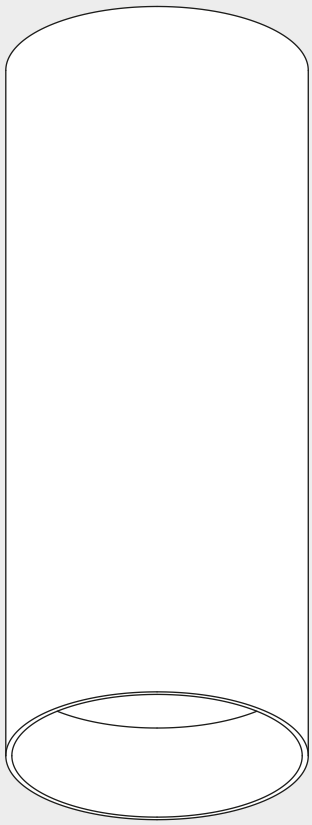


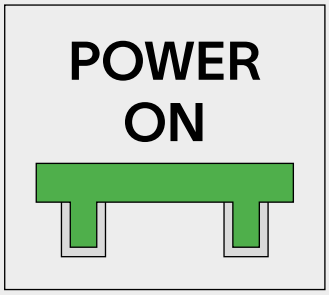

Turn the power back on.

thank you for choosing prado





prado.com

Installation must be done by skilled professionals only and instructions must be followed at all times. Warranty will not apply in case of wrongful use or if unskilled personnel attempts to repair a product.