

trim spot adjustable
installation instruction

1

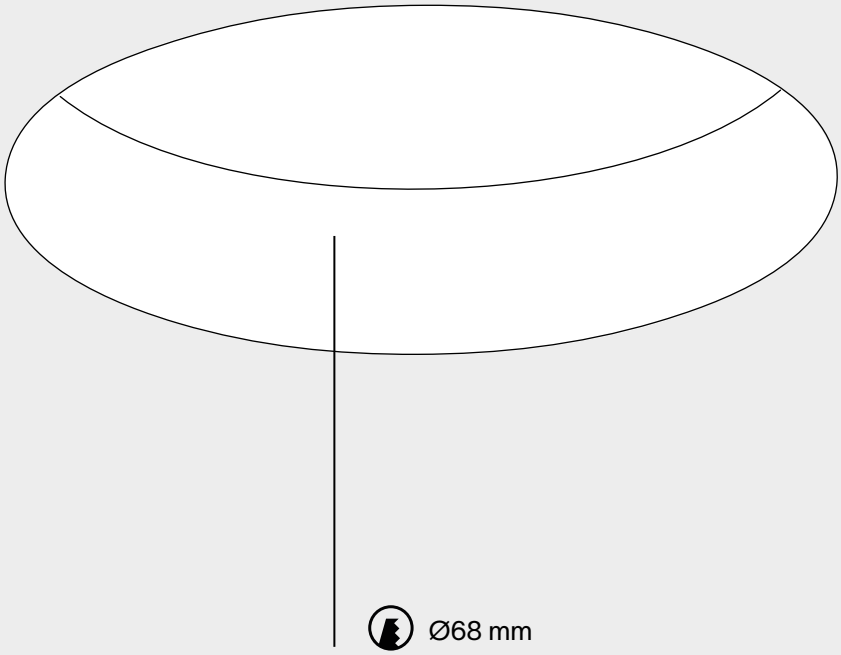



Cut a round hole (Ø68 mm). Consult the chosen luminaire tech specs for required height and free air dimensions.

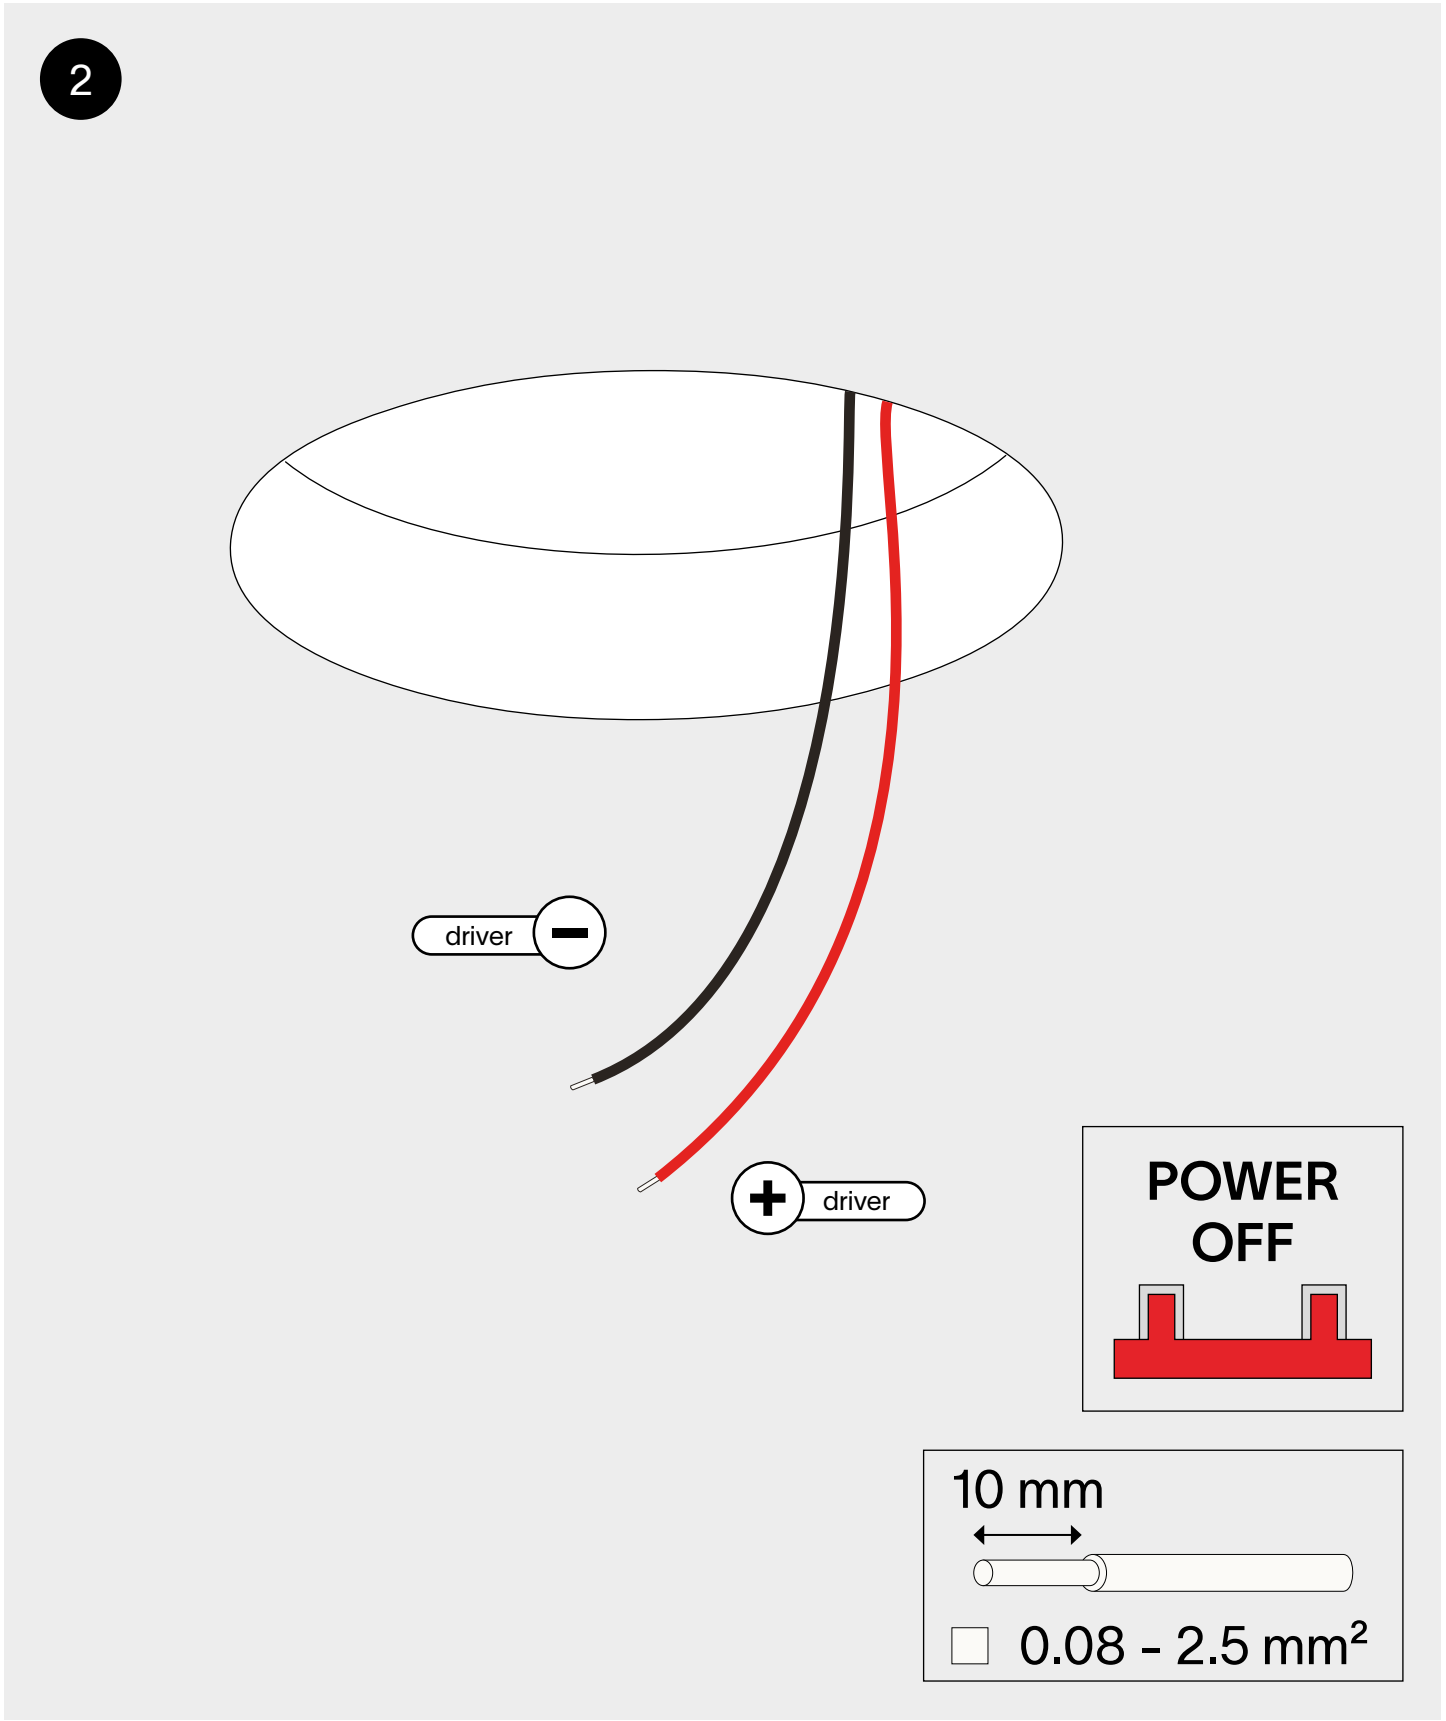

Turn the power off.


free air dimensions

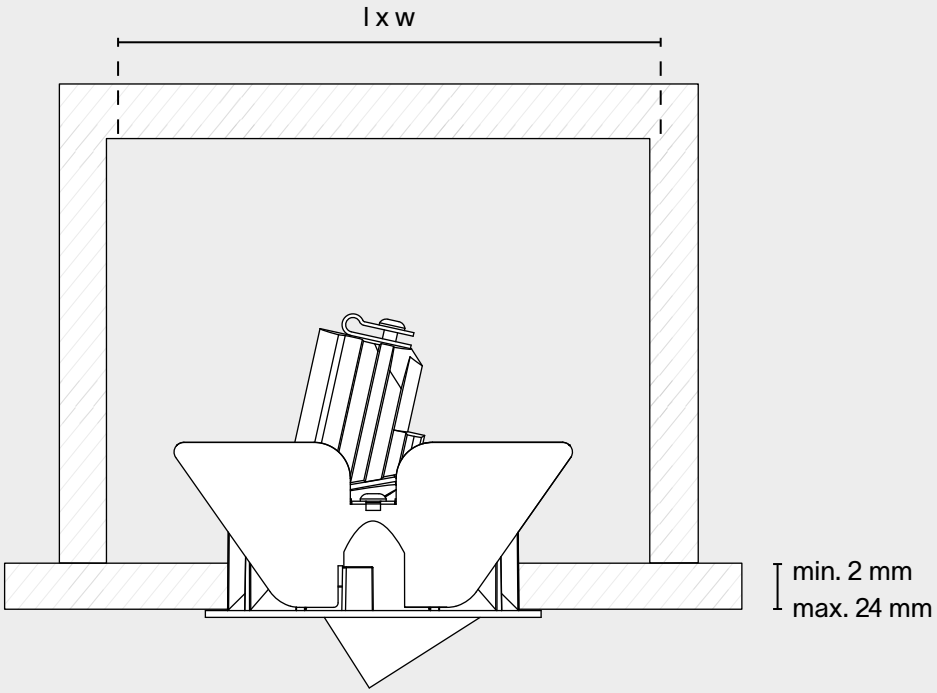

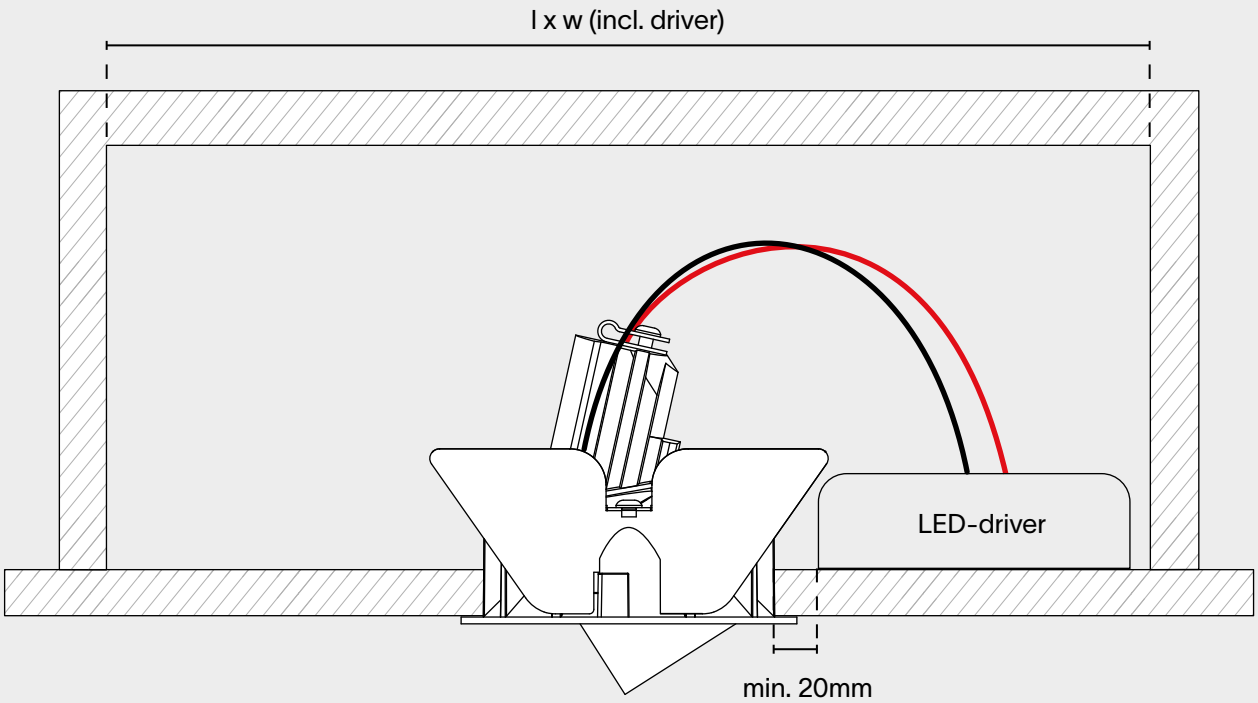


constant current (mA)	l x w (mm)	l x w incl. driver (mm)
350	100 x 100	200 x 200
500	200 x 200	250 x 250

3

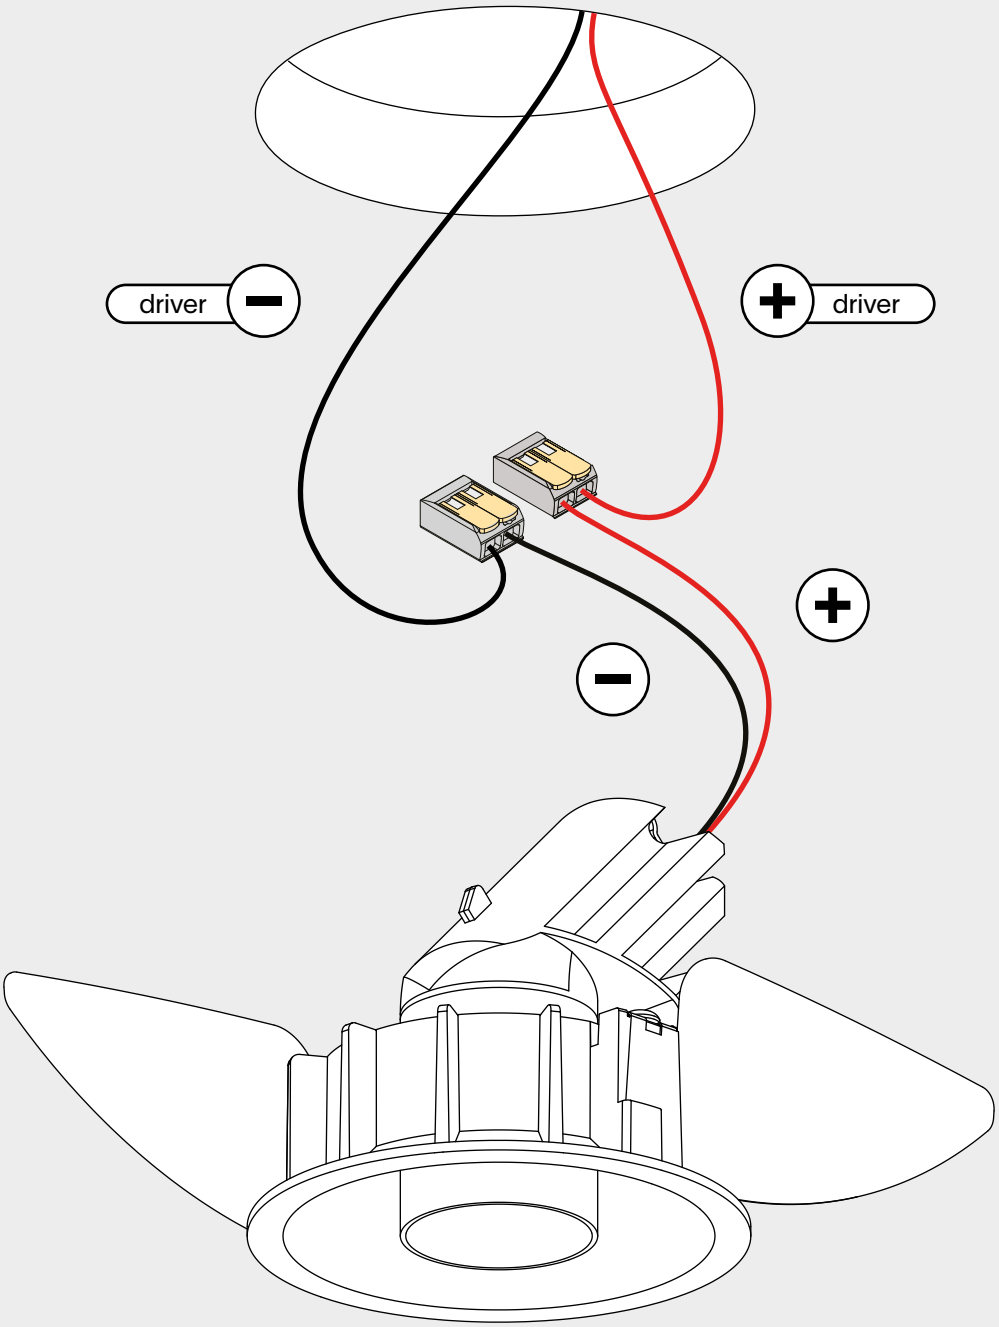


Connect the wires with wago connectors. For serial connection, respect polarity. Combine with a prado LED-driver.

4

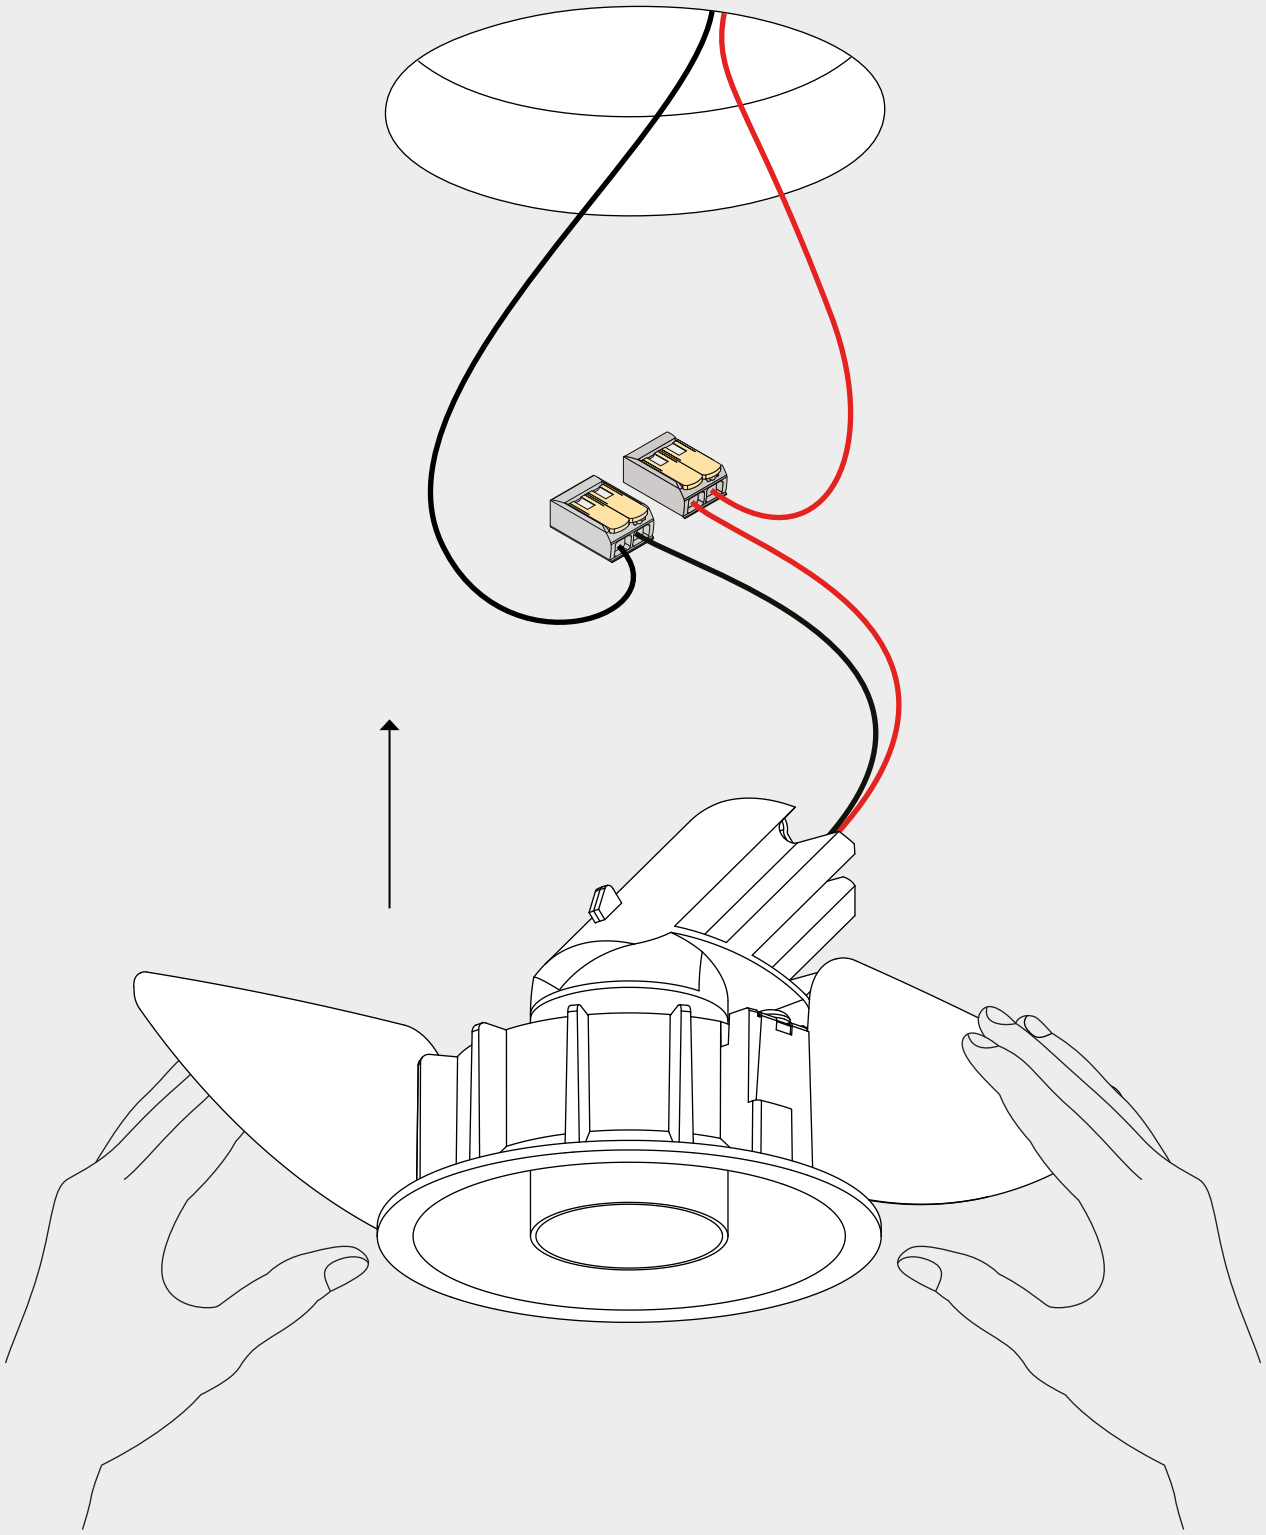

Bend over the springs and push the luminaire into the ceiling.

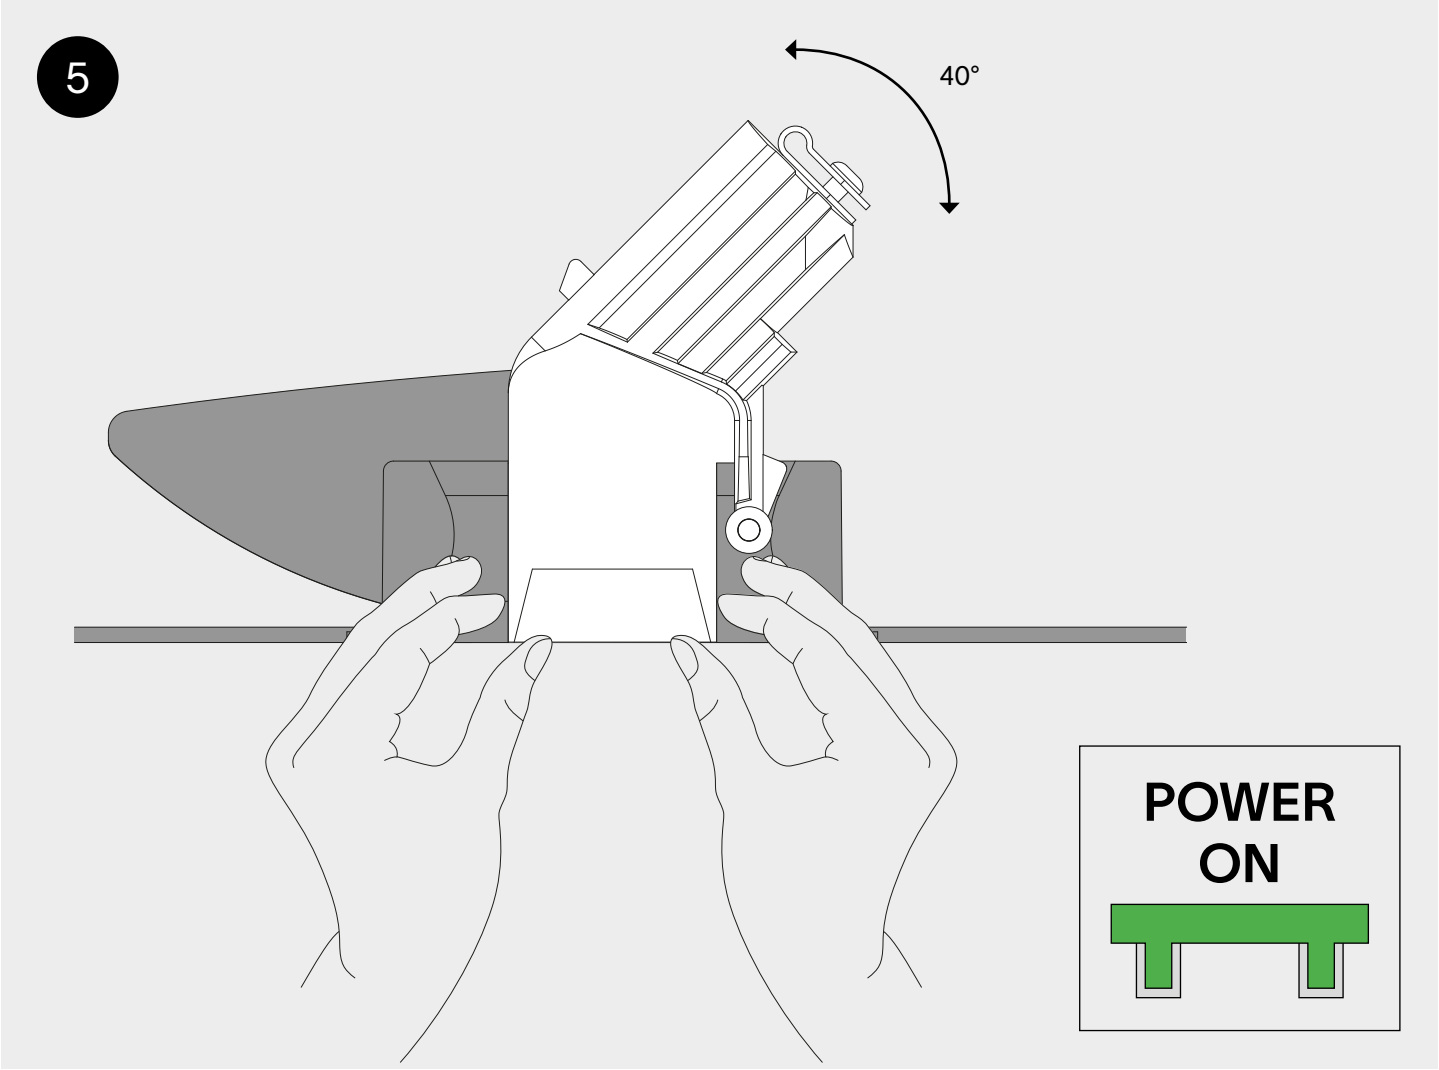

Tilt the luminaire as desired. Turn the power back on.

thank you for choosing prado

IP65

prado.com

Installation must be done by skilled professionals only and instructions must be followed at all times. Warranty will not apply in case of wrongful use or if unskilled personnel attempts to repair a product.