

rond 2.0 push button | potential-free
installation instruction


1

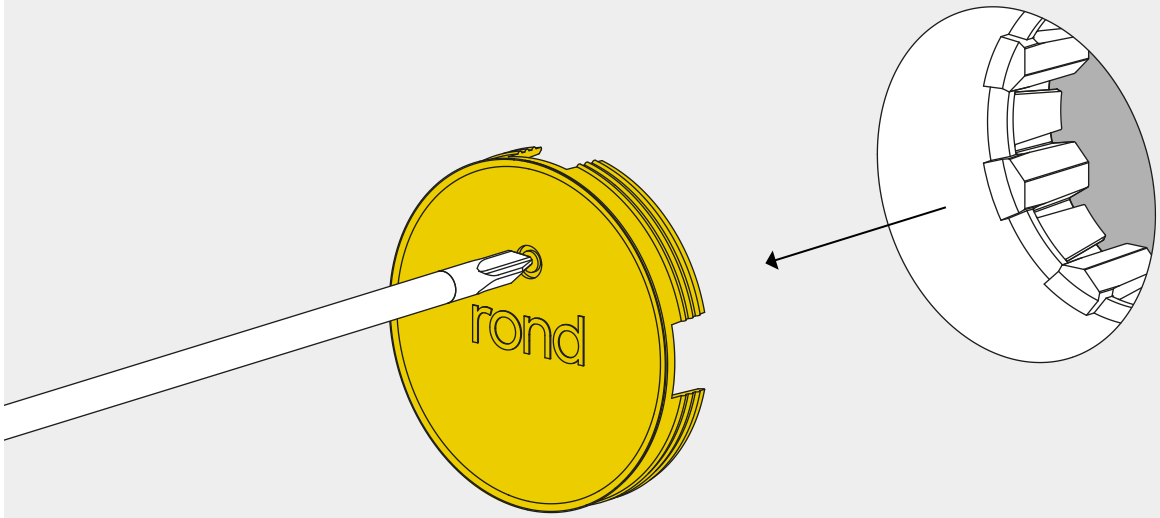

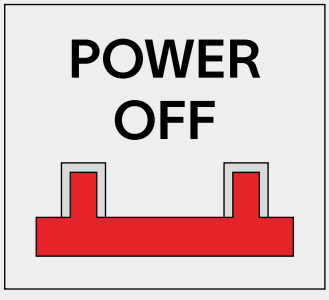


Remove the plaster lid.


2

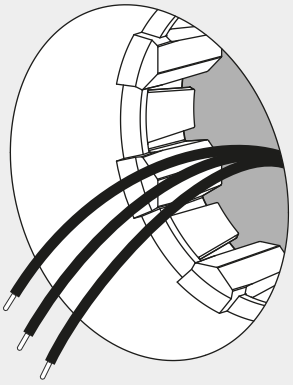


Pull the wires through.

3

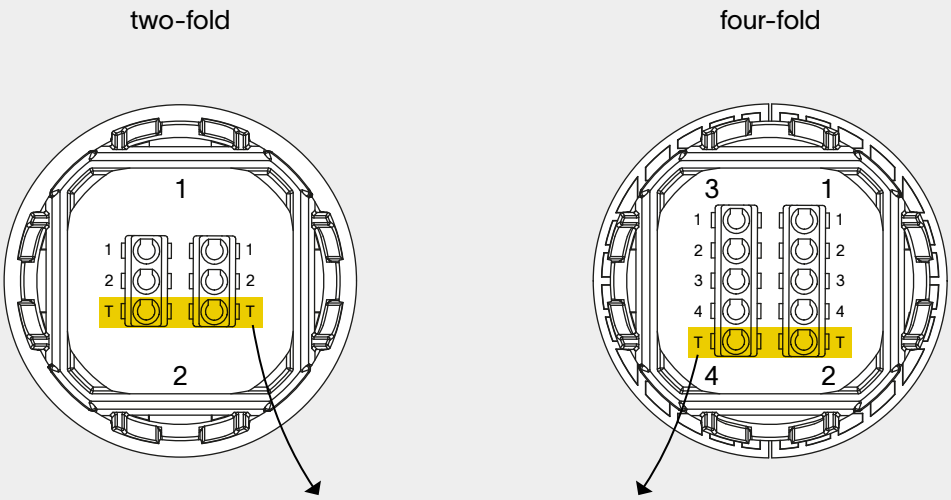


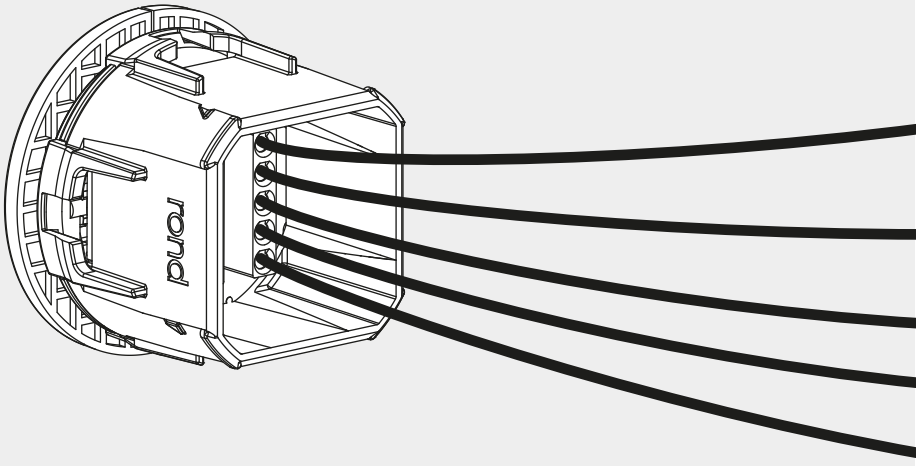

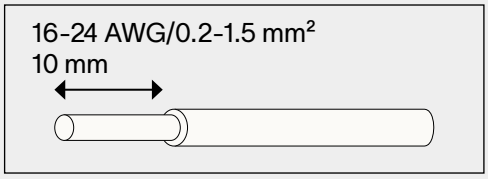

Attach the wires to the PF push button.


dimmer model scheme

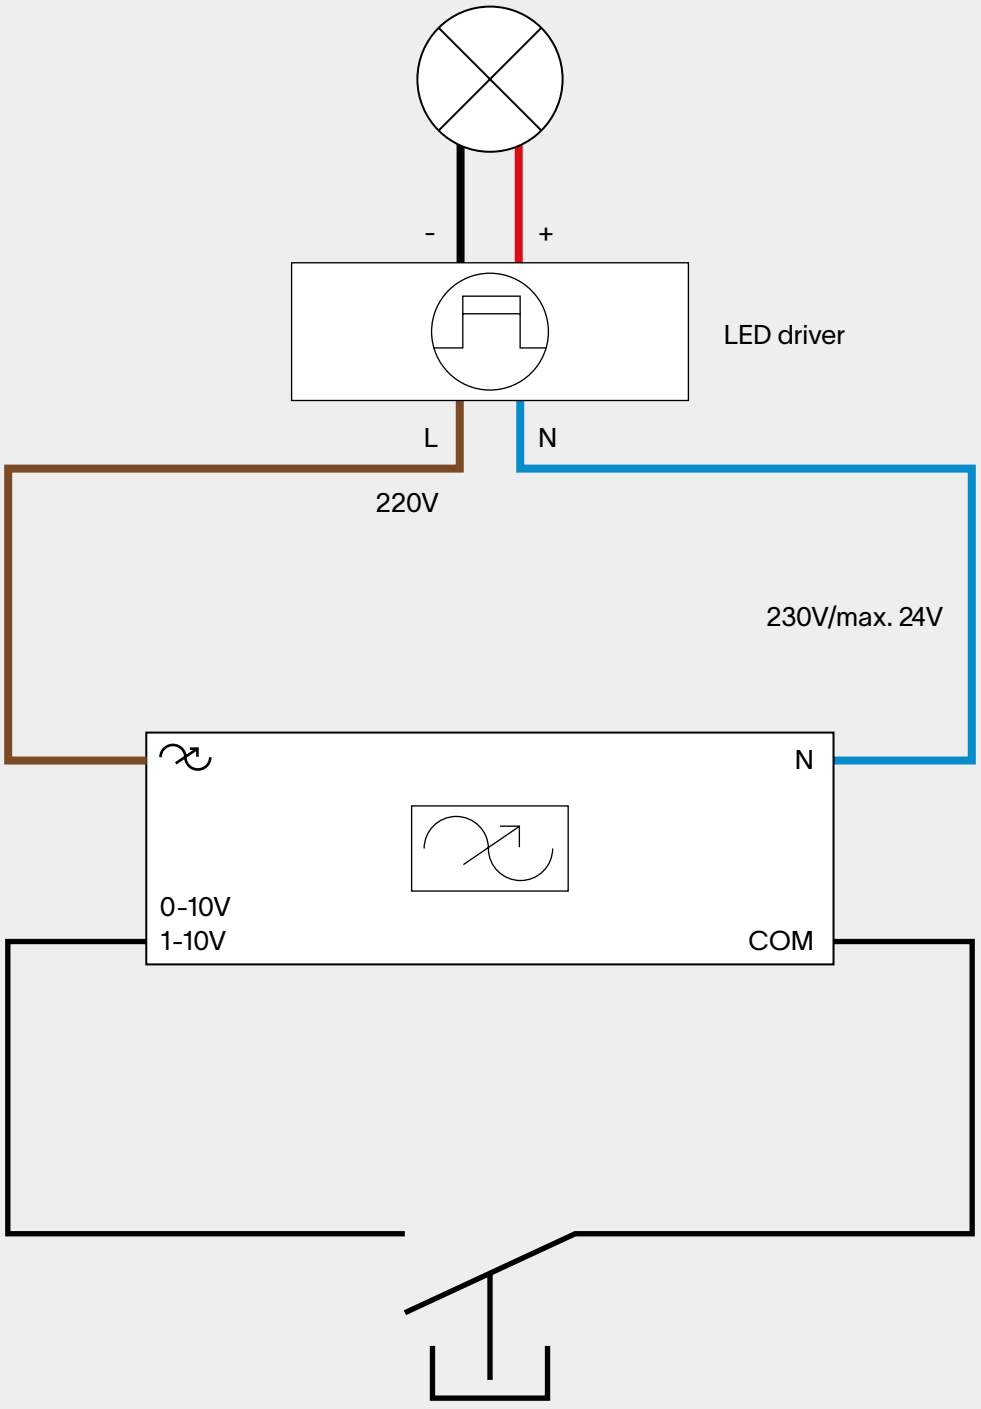


push button rond - 1 input

Universal dimmer with control voltage-free push button.
Push button galvanically isolated from the mains voltage.

teleruptor model scheme

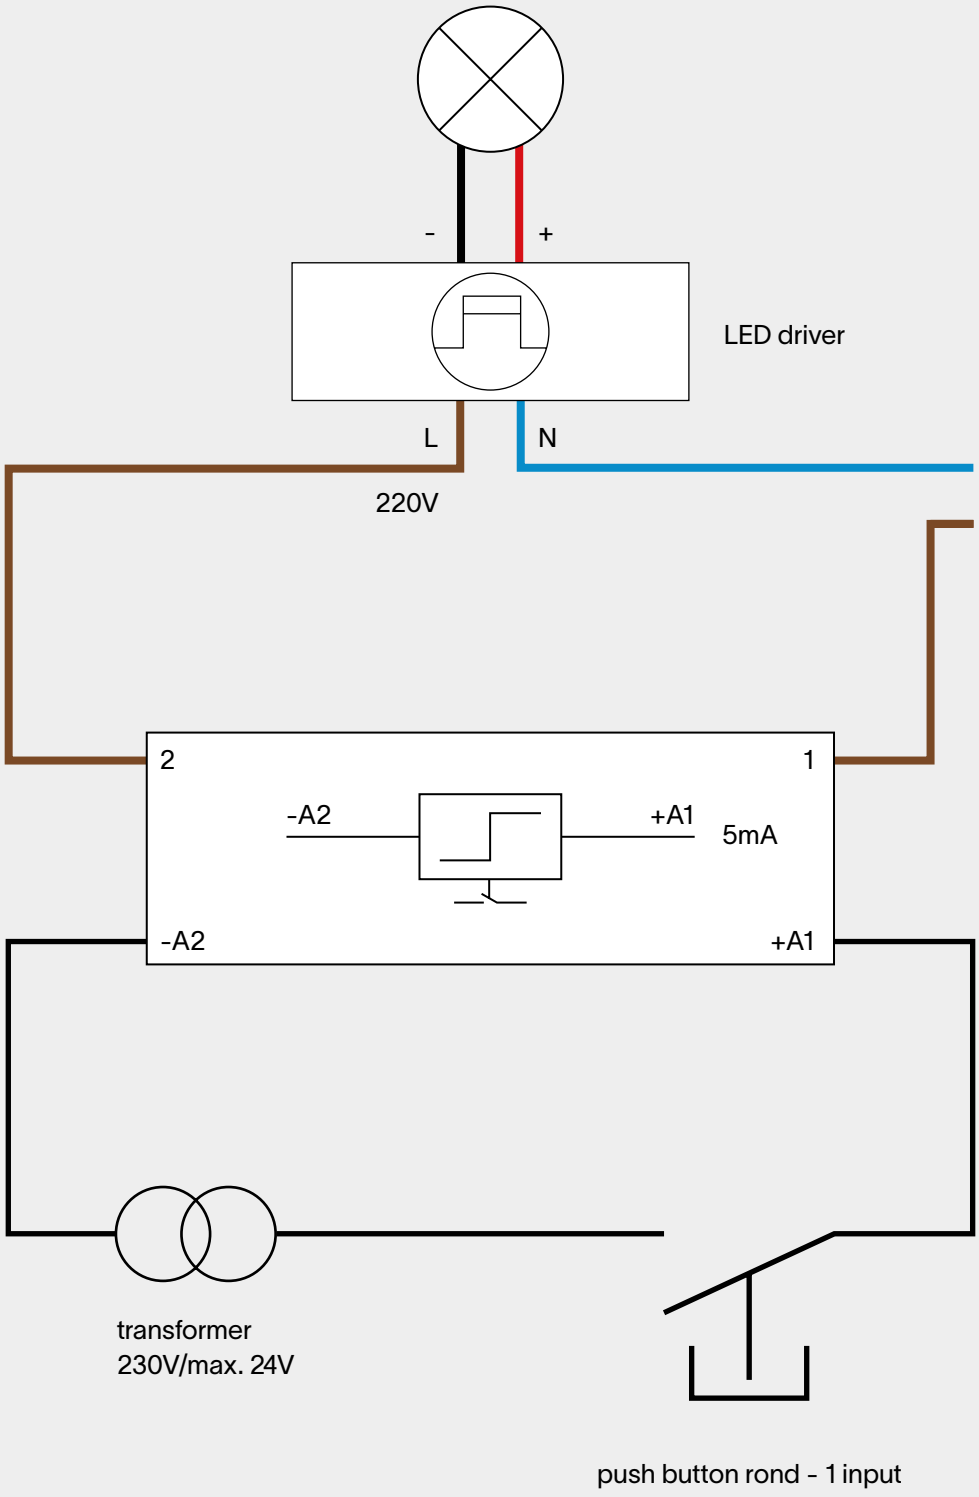


4

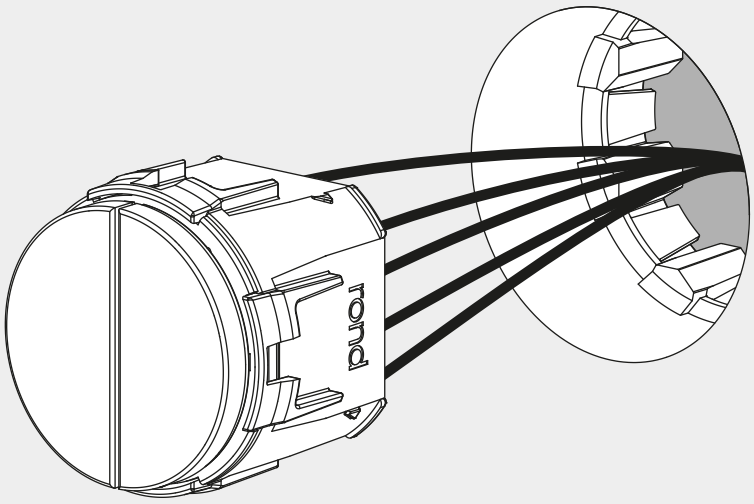



Push the PF push button into the retrofit plaster ring or multifit/backfit holder.

5

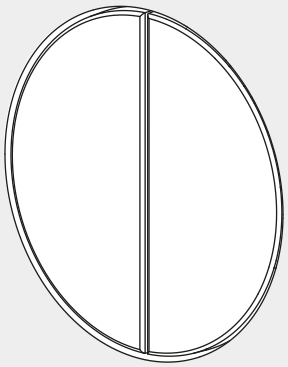

with small trim ring

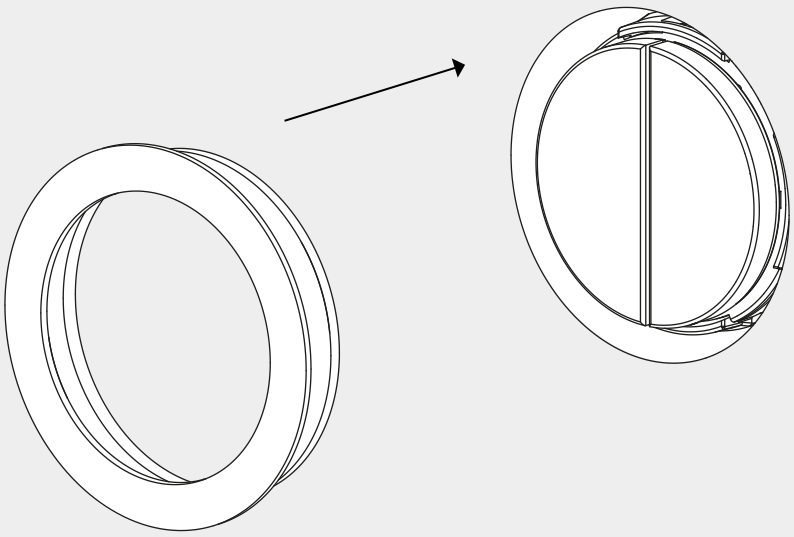


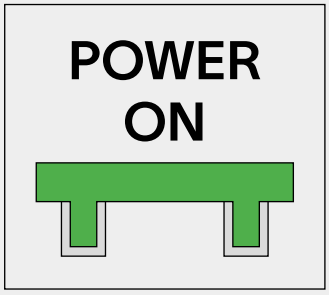


Install the small trim ring.

1


for removal

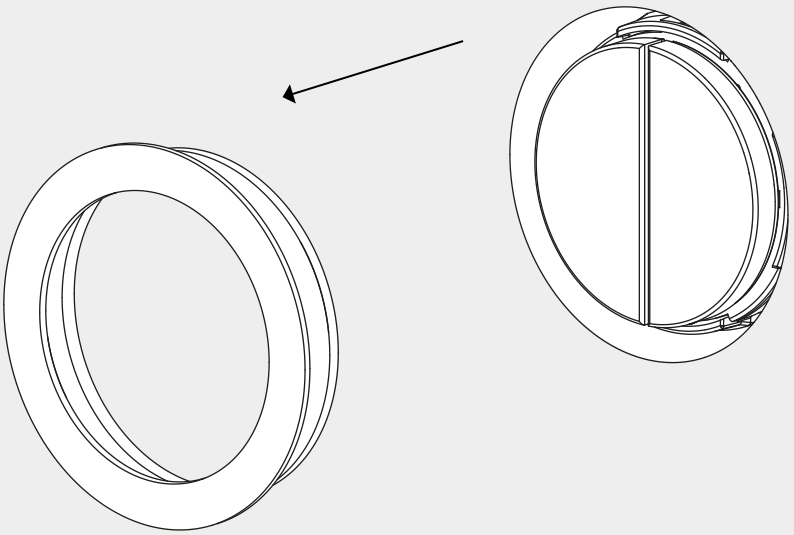

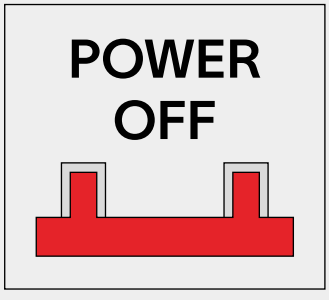


Remove the showring with a flat screwdriver.

2

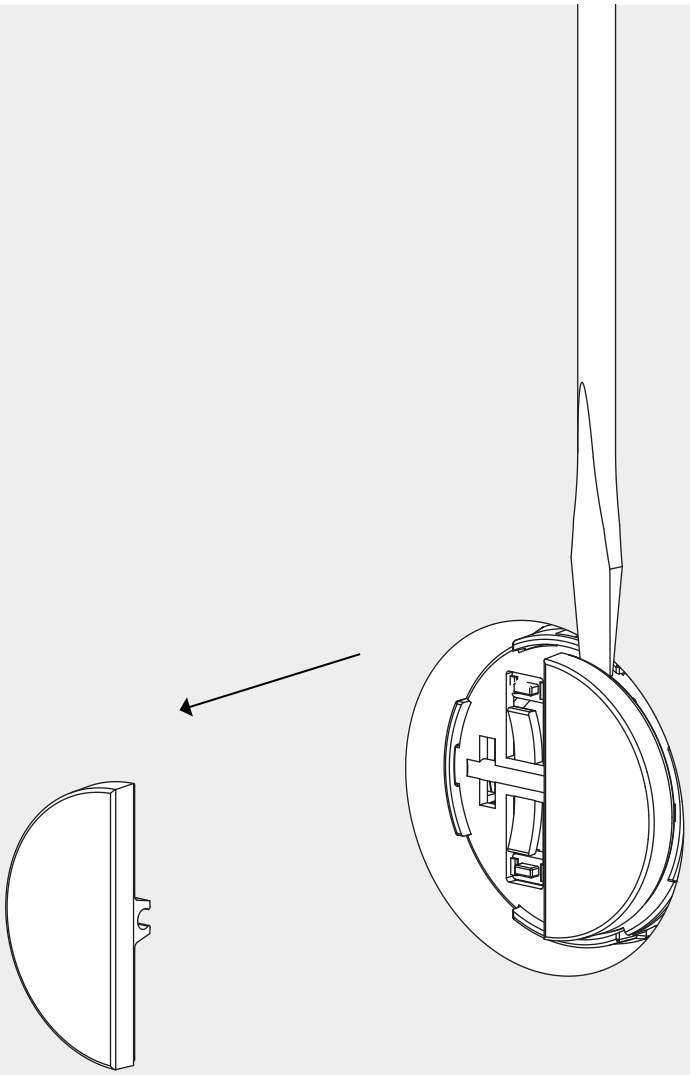


Now also remove the buttons with a flat screwdriver.

3

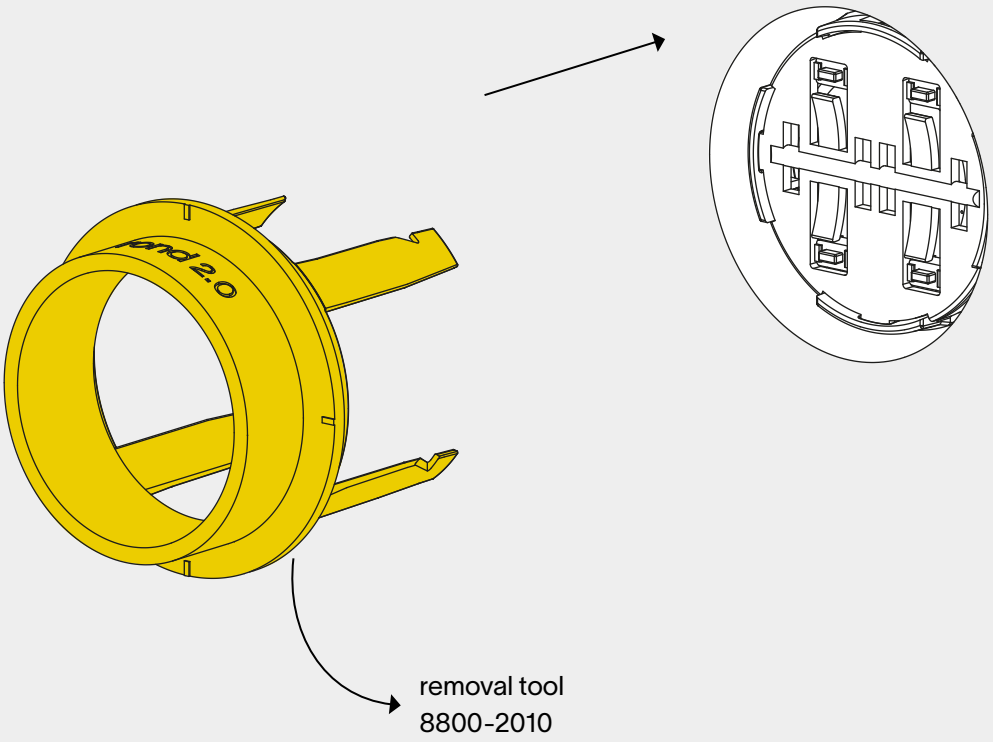


Put the removal tool into the PF push button.

4

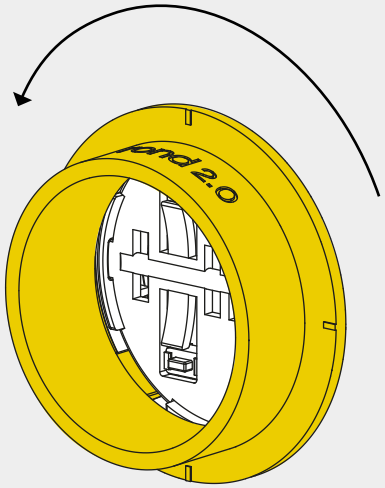

Give it a twist counterclockwise, ...

5

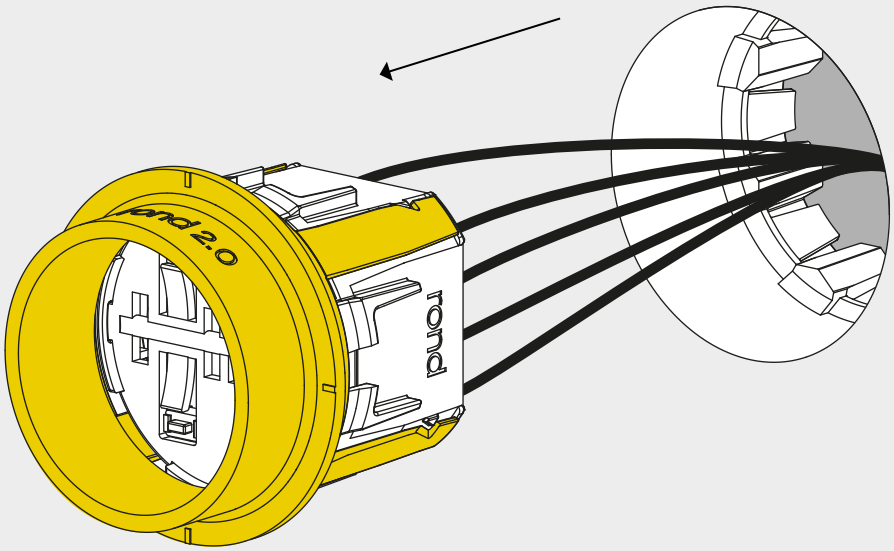

... and pull out the PF push button.

thank you for choosing rond

Installation must be done by skilled professionals only and instructions must be followed at all times. Warranty will not apply in case of wrongful use or if unskilled personnel attempts to repair a product.