

backfit holder 2.0
installation instruction

1

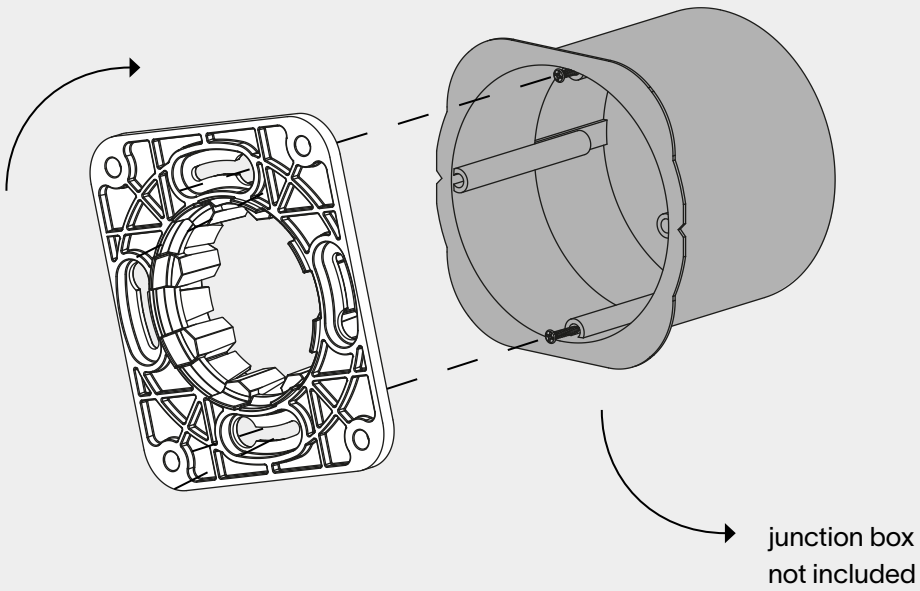


Place the backfit holder on top of the junction box, give it a twist, and tighten the screws.

2

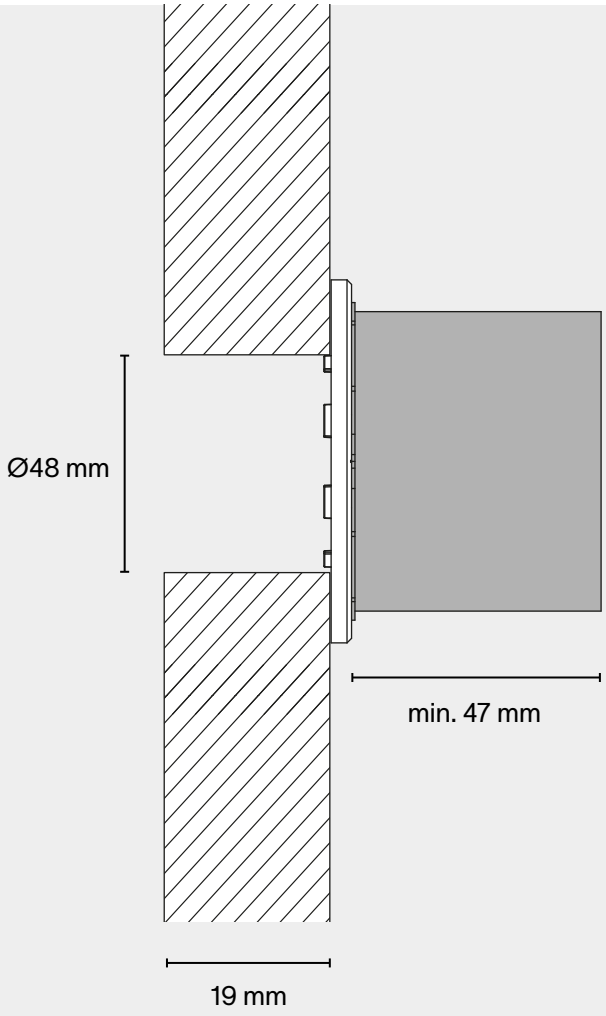


for 2 or more

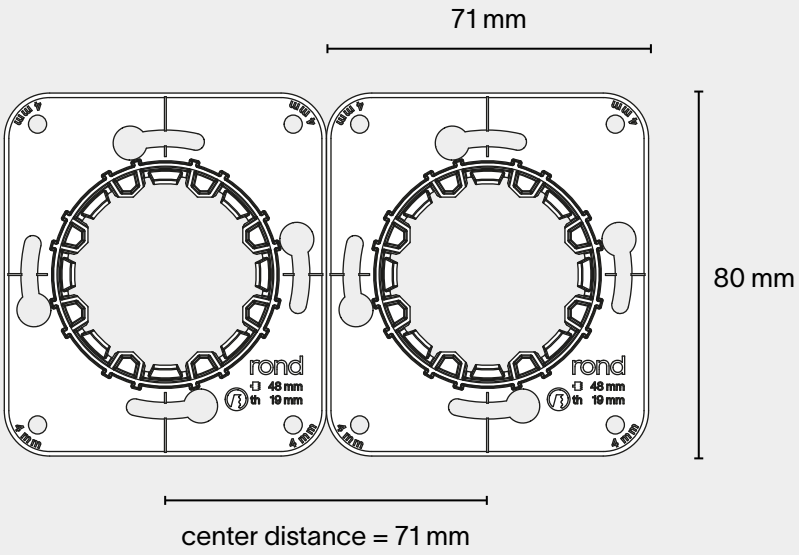

Drill a Ø48 mm hole and install the junction box with backfit holder to the back of the wall with the appropriate screws (max. screw length < panel thickness).

3a


if > 19 mm
machine down

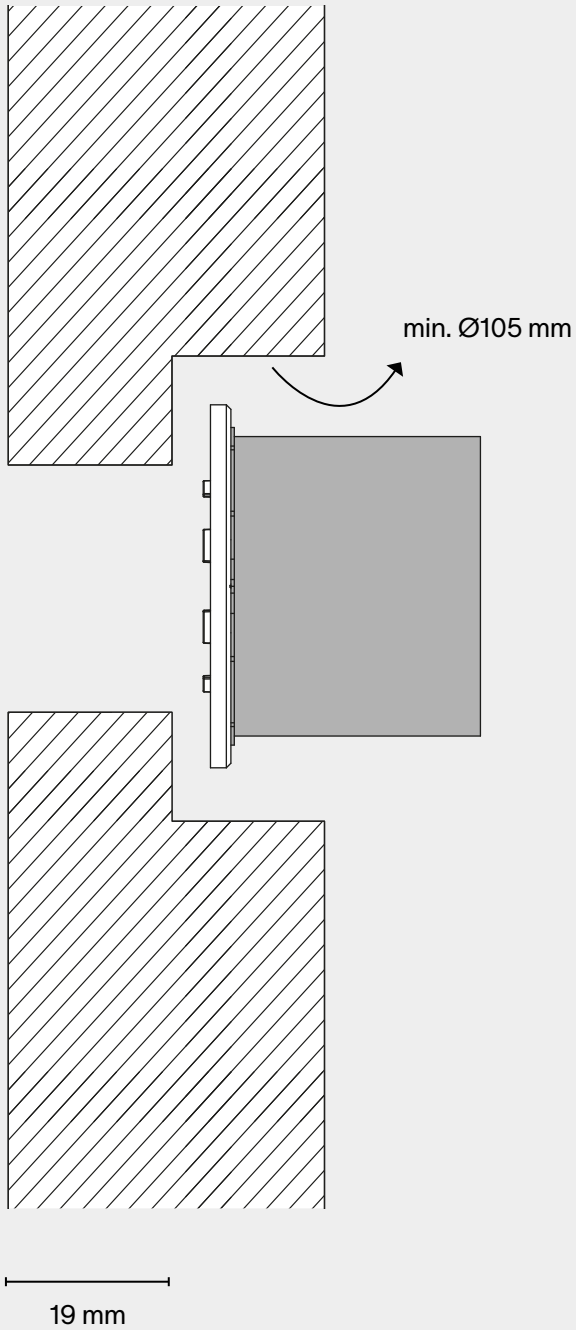

If the finish material thickness is thicker than 19 mm, machine down (Ø105 mm) the material to achieve the correct total depth (19 mm).


3b

if < 19 mm
use spacer plate

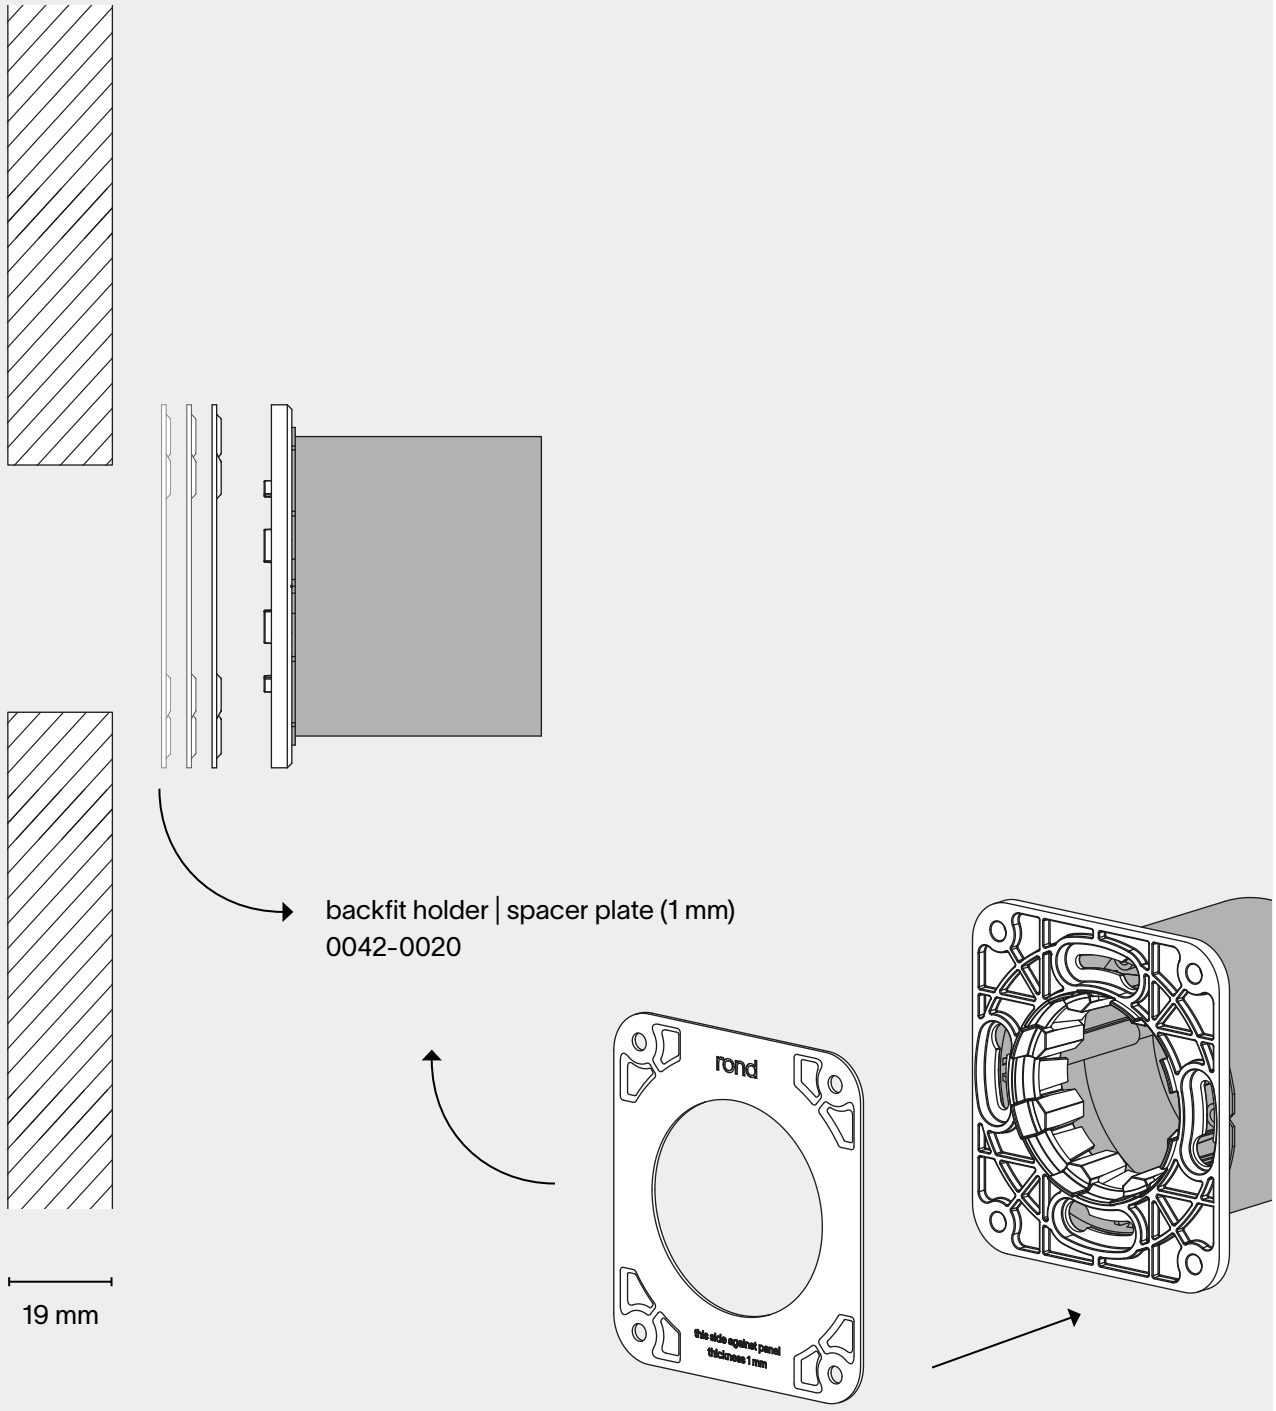


If the finish material thickness is thinner than 19 mm, add one or more backfit holder spacer plates (per 1 mm) to achieve the correct total depth (19 mm).

4

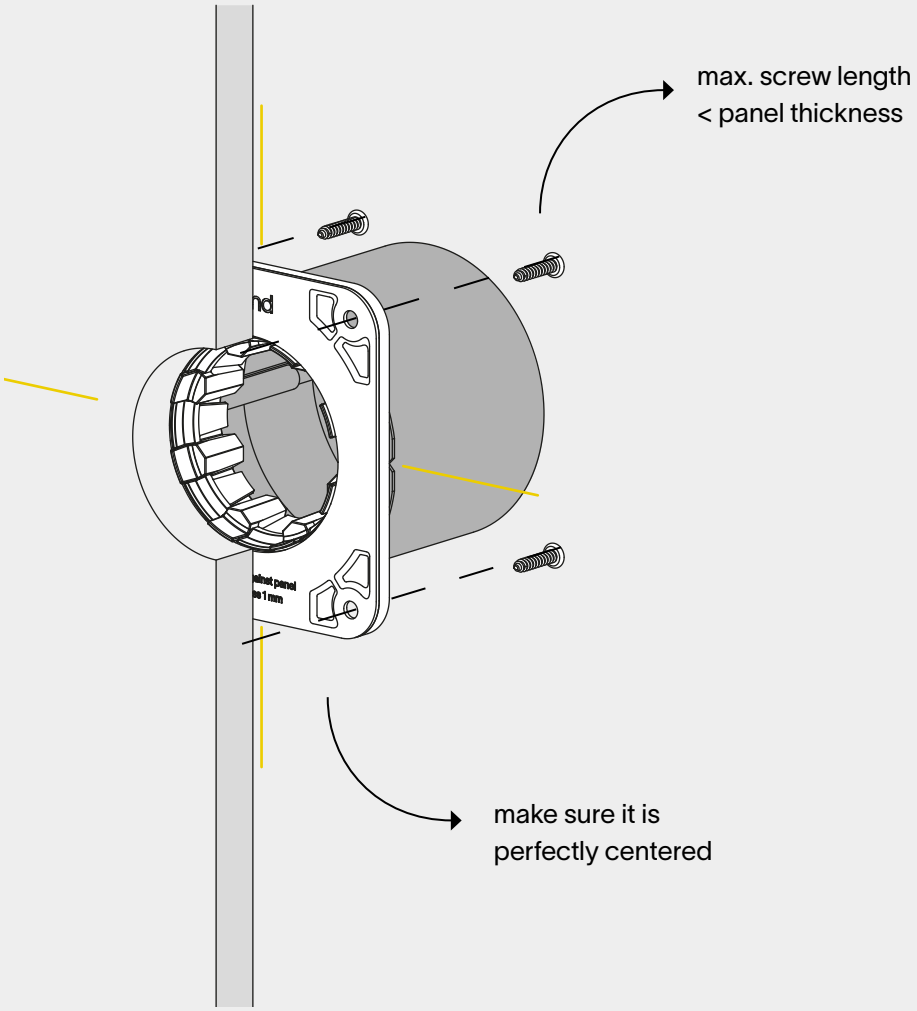

Fasten the junction box with backfit holder (and backfit holder spacer plate(s)) at the back of the material. Screw on a screwfast surface with the appropriate screws (or use the appropriate glue, compatible with both the panel material and backfit holder material (PP + 30%GF)).

5

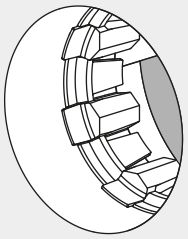

Follow the socket installation manual. The backfit holder is compatible with rond 2.0 sockets, switches, push buttons, USB-C module & data ports module.

thank you for choosing rond

Installation must be done by skilled professionals only and instructions must be followed at all times. Warranty will not apply in case of wrongful use or if unskilled personnel attempts to repair a product.