

socket 2.0 retrofit/backfit type E
installation instruction


1

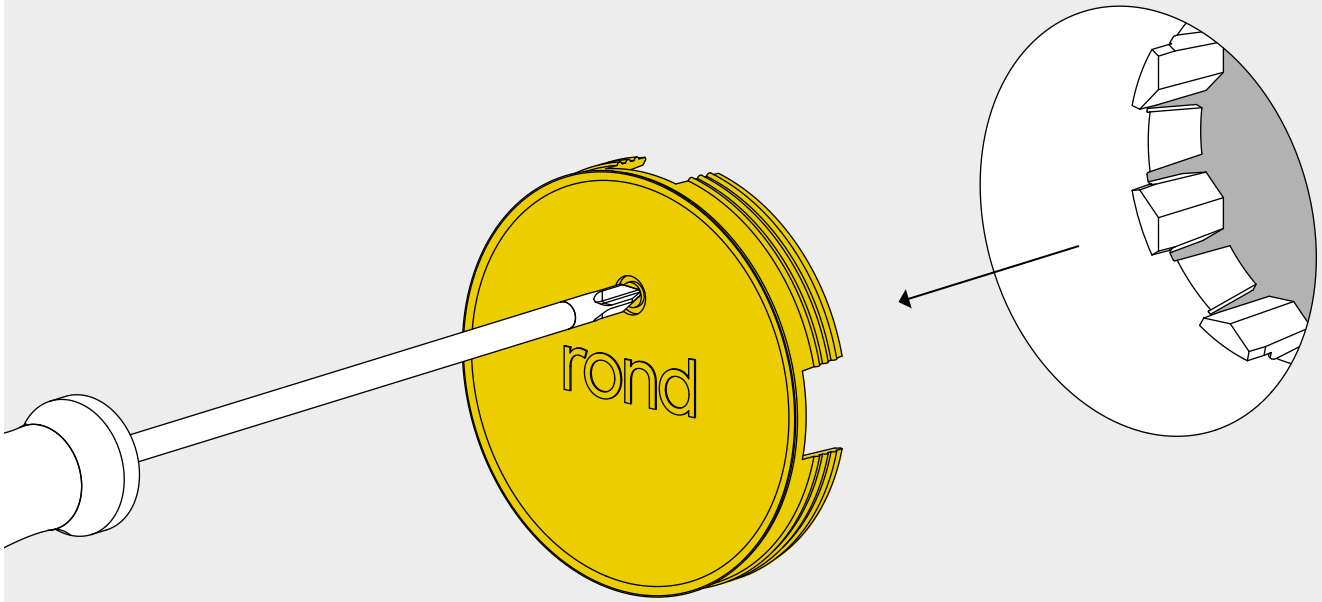

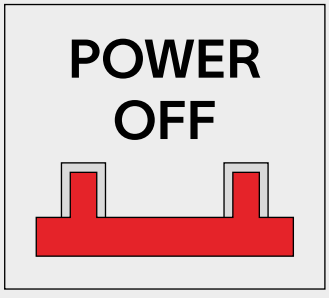


Remove the plaster lid.


2

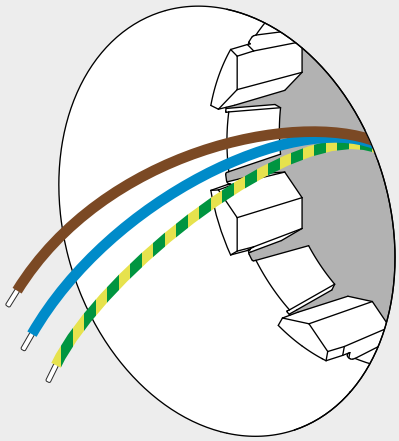

Pull the wires through.


3

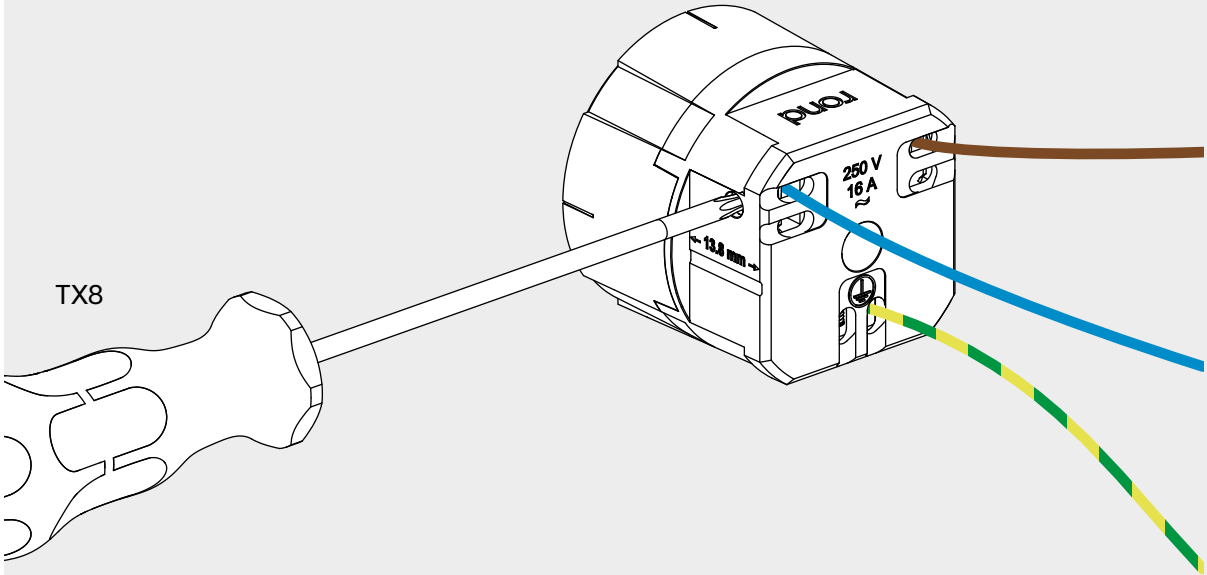

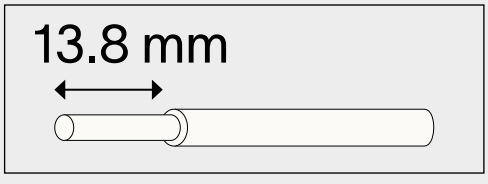


Attach the wires to the socket.

4

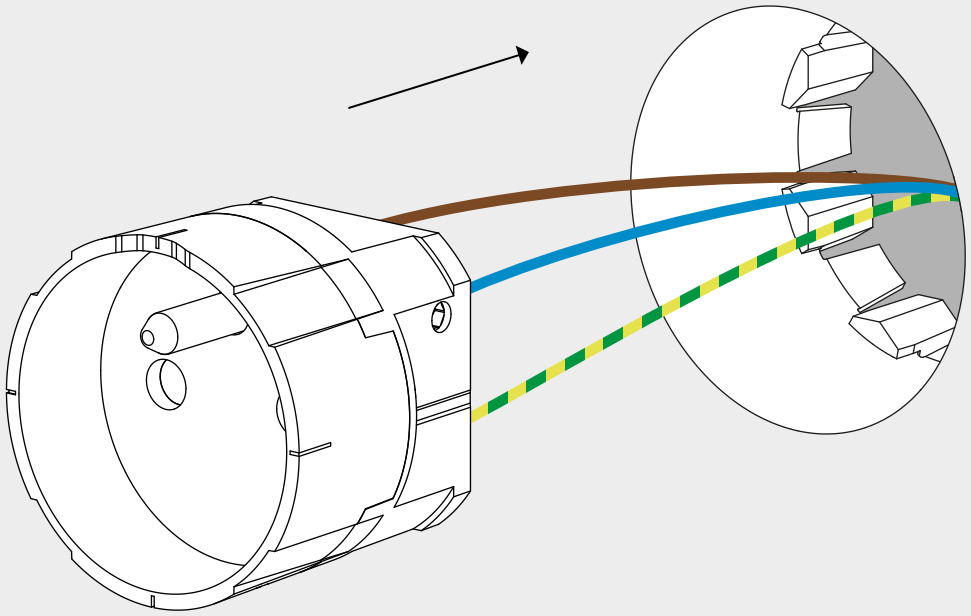


Push the socket into the plaster ring or backfit holder.


5

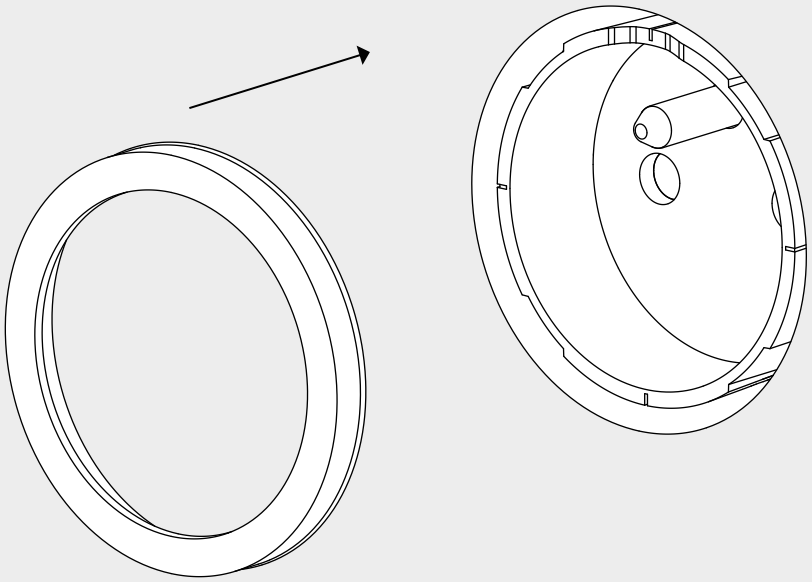

Install the showring.

6

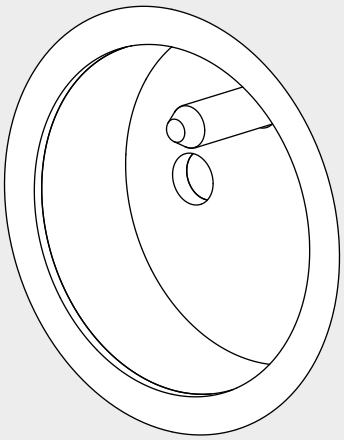


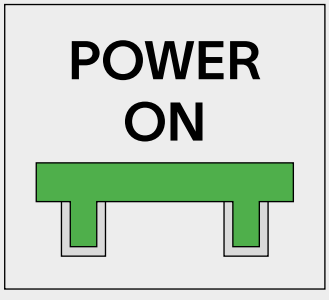

Turn the power back on.


1

for removal

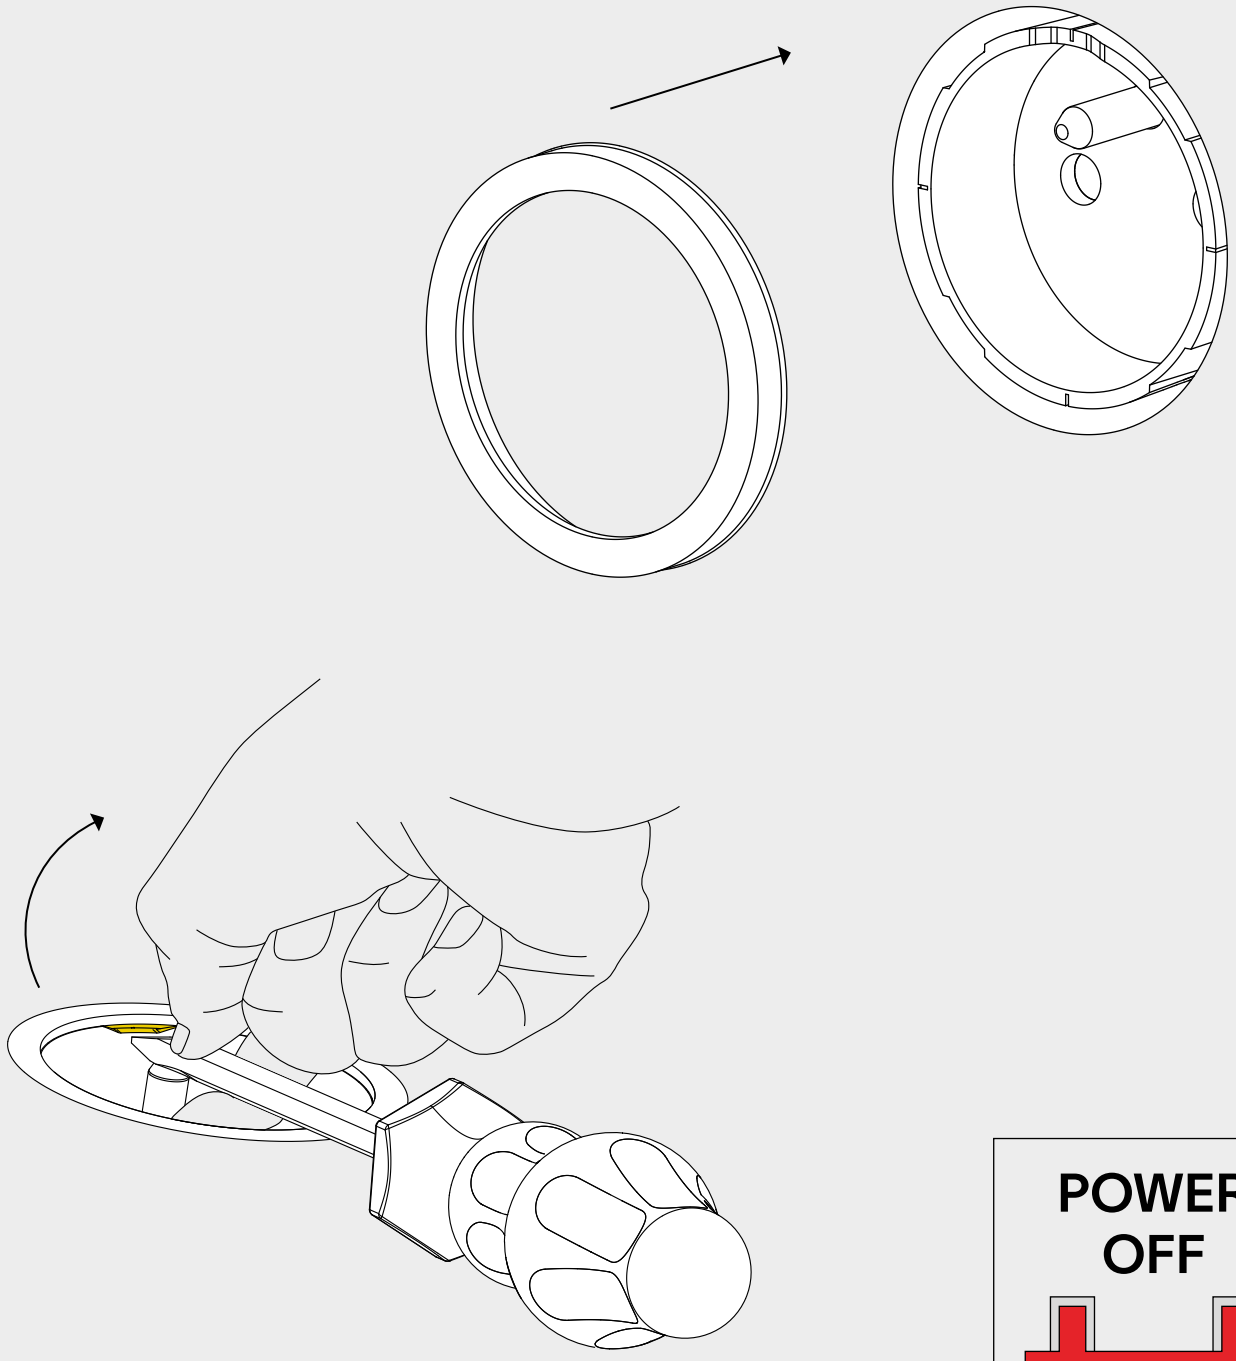


Remove the showring with a flat screwdriver.

2

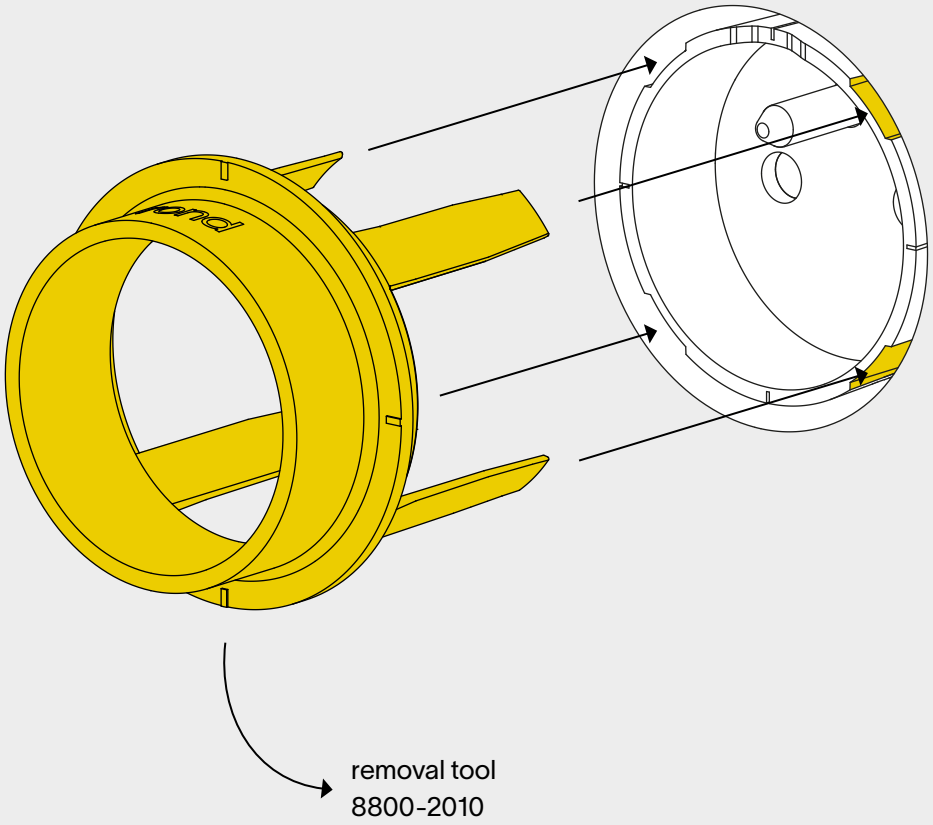


Put the removal tool into the socket.

3

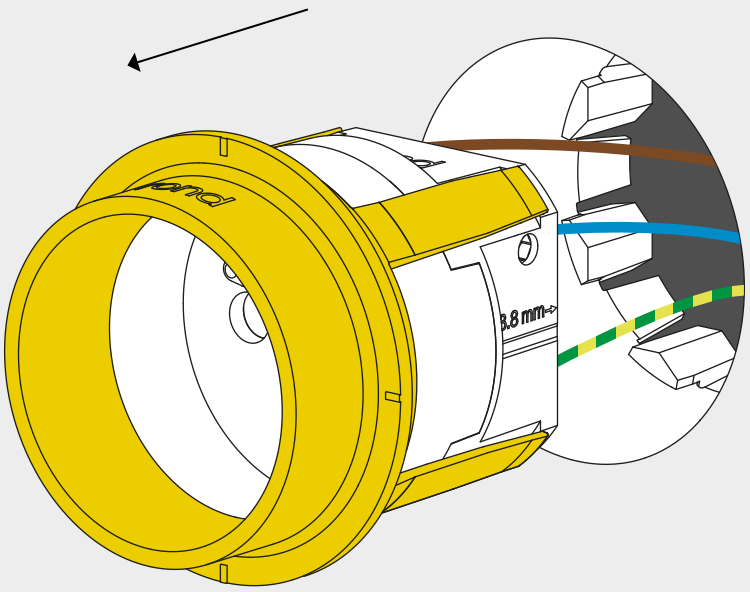

Pull out the socket.

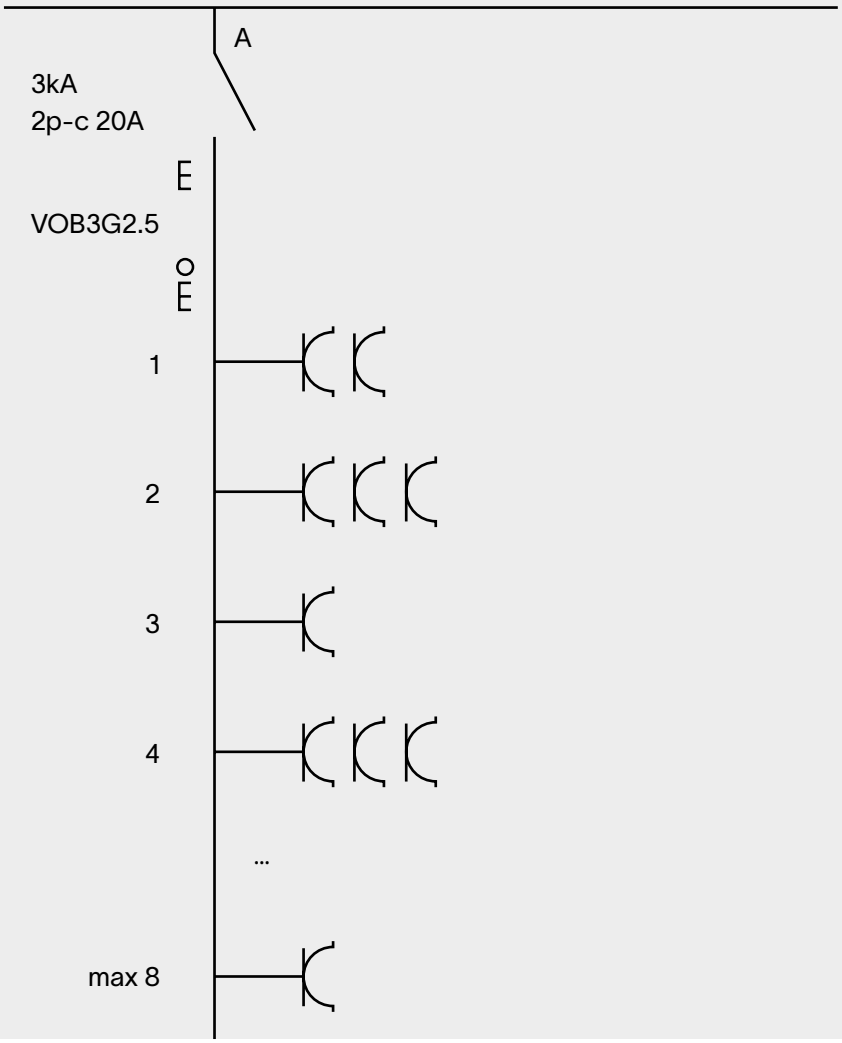

Socket model scheme.

thank you for choosing rond

16
250

Installation must be done by skilled professionals only and instructions must be followed at all times. Warranty will not apply in case of wrongful use or if unskilled personnel attempts to repair a product.