
empty floor box Ø68
installation instruction


1

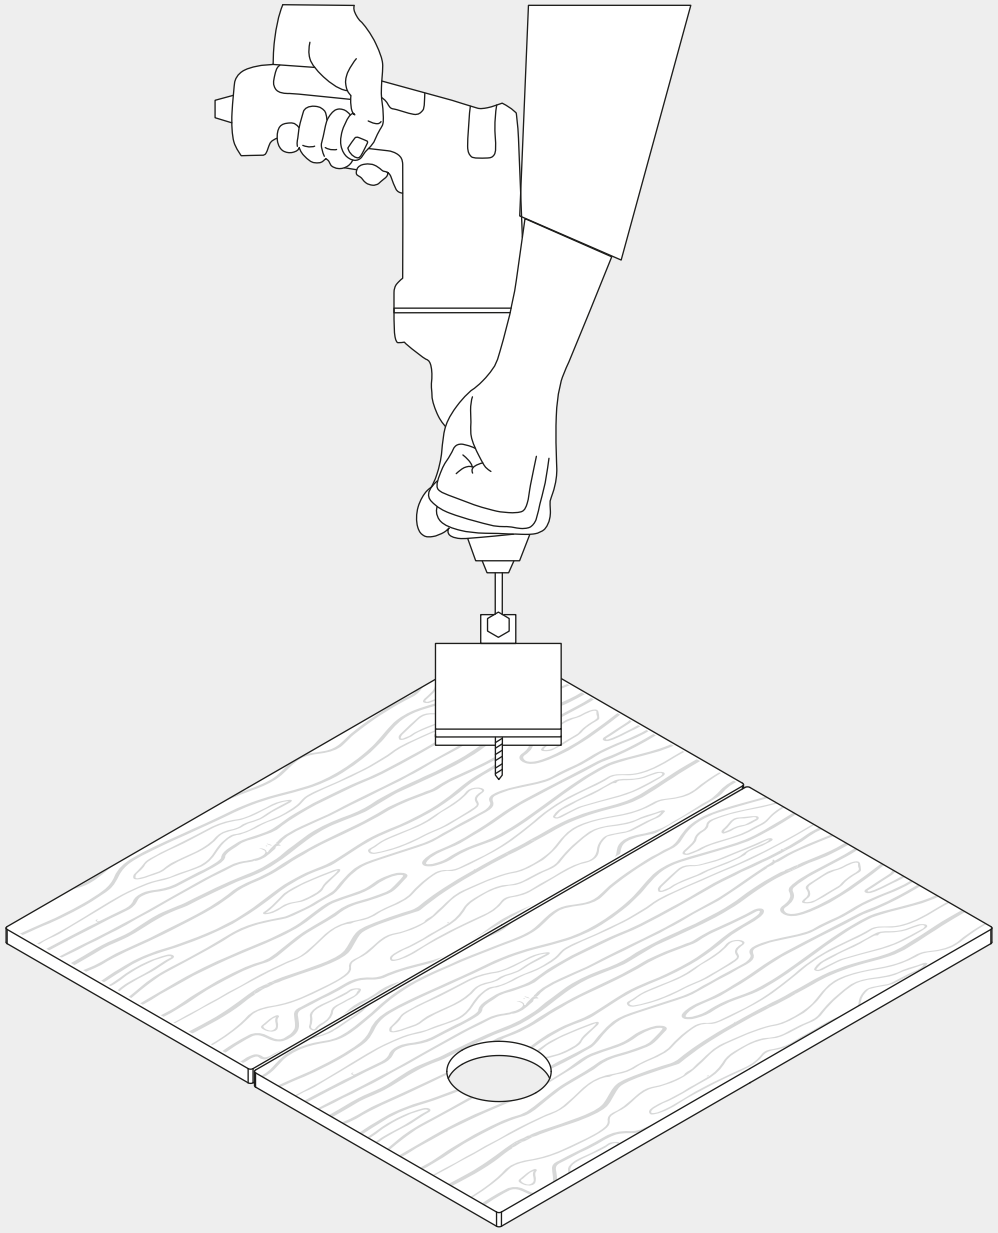


Drill a Ø64 mm hole where the socket has to be located.

2


optional flush mount countersink

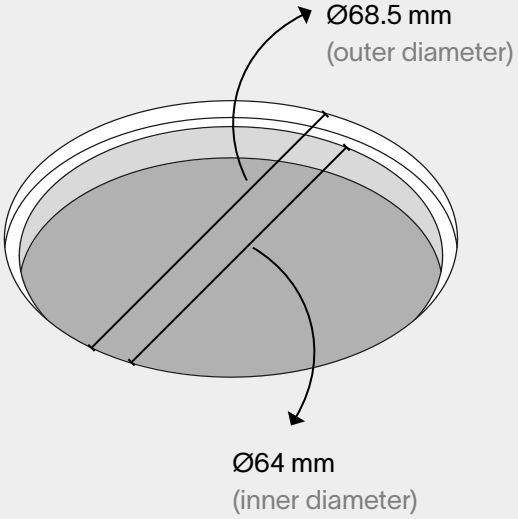

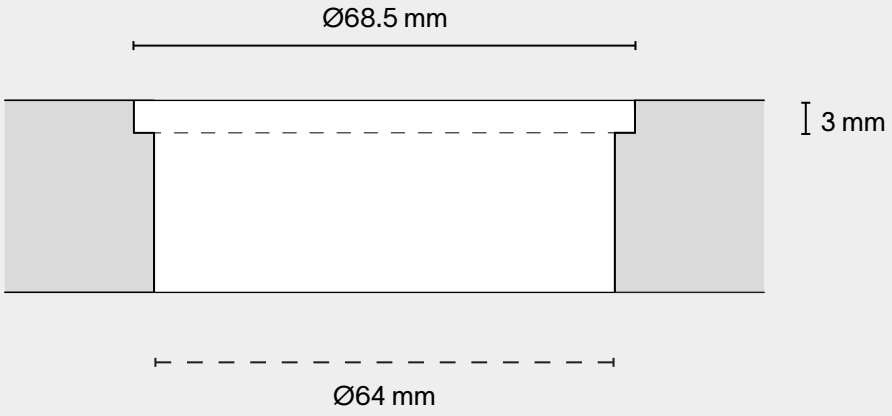


Flush mount countersink.

3

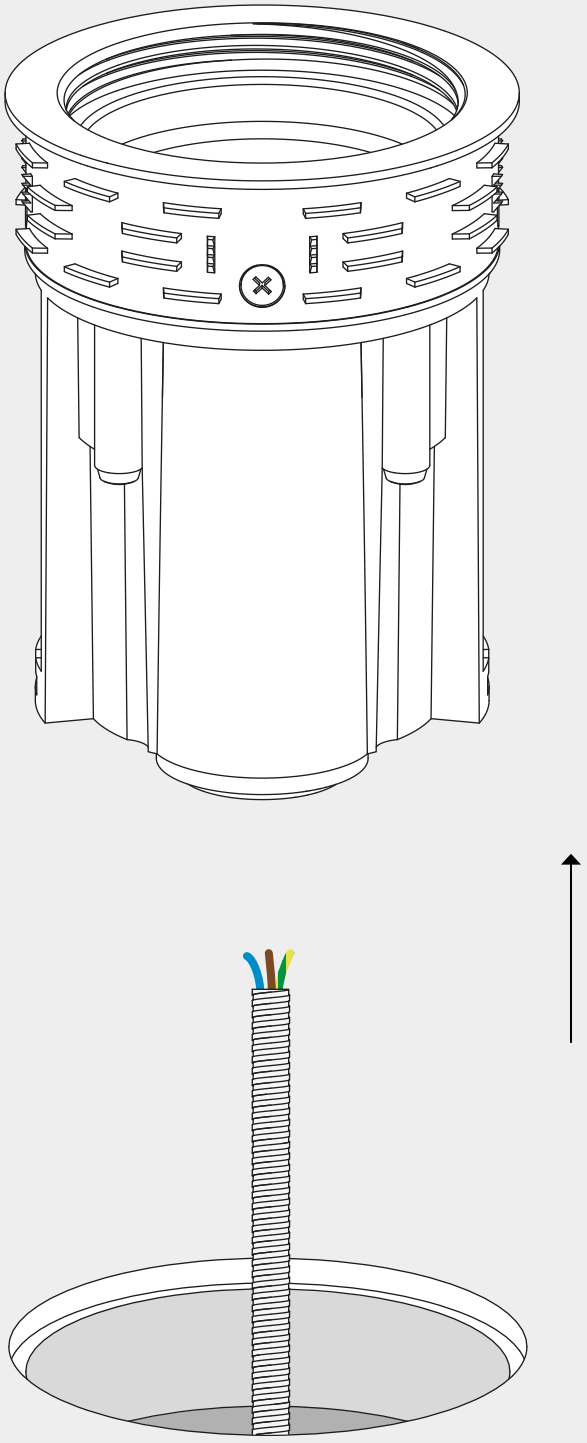


Insert preflex in the floor box - cabling through bottom.

4

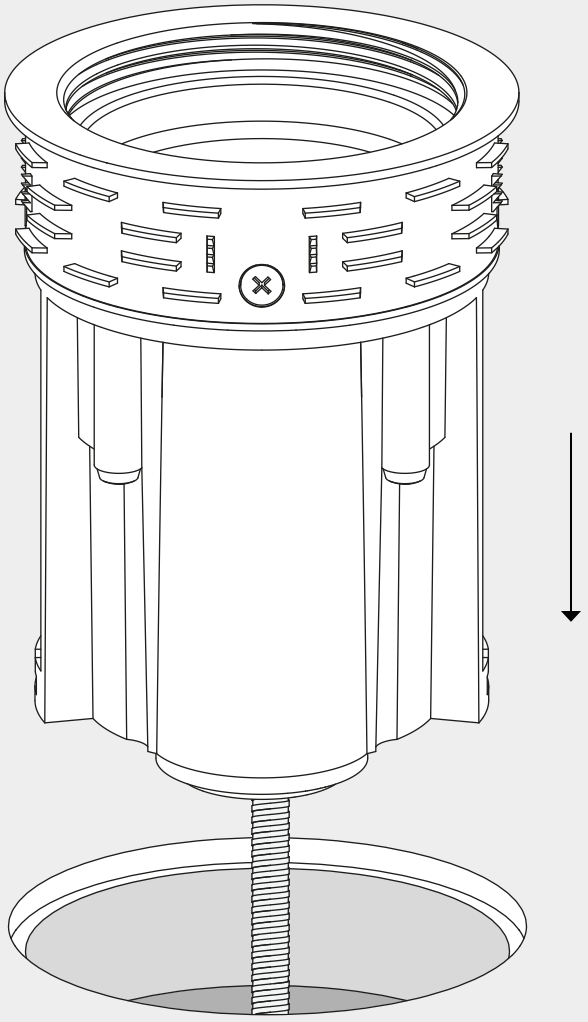


Insert the floor box in the hole.

5

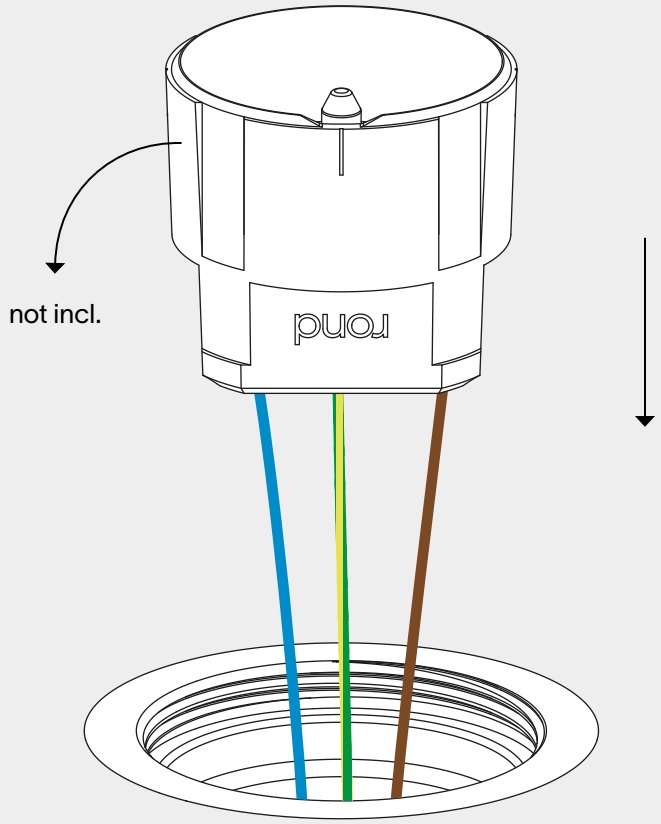


Connect the socket (not incl.) and click it in the holder. Compatible with trimless retro-/backfit type E/F socket modules.

6

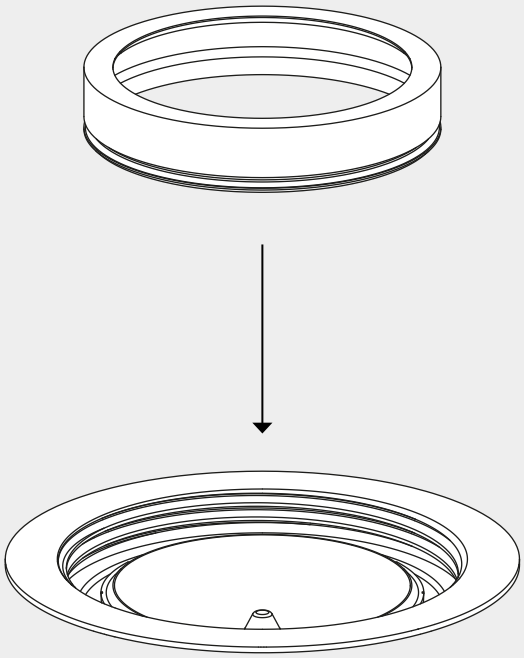


Insert the showring.

7

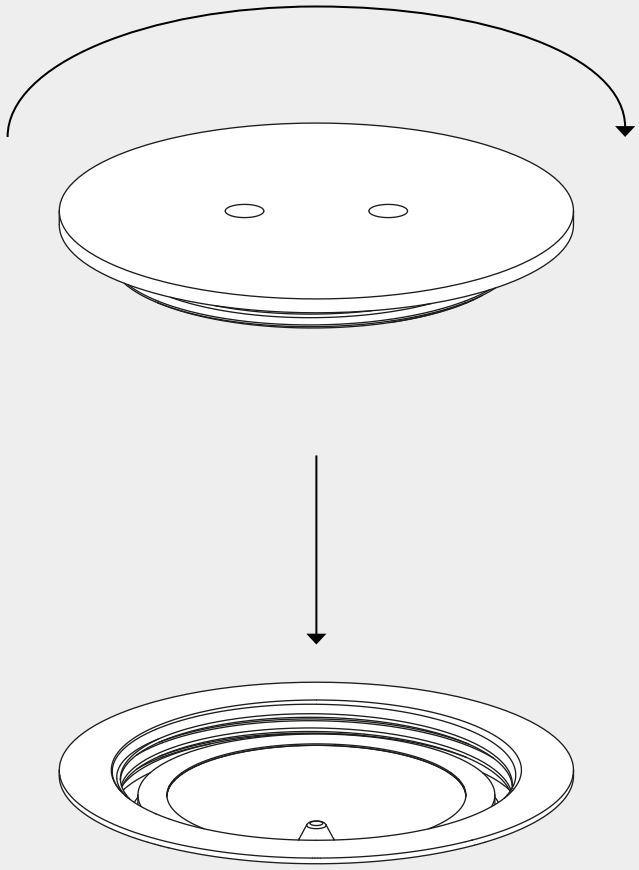

Install the cover plate Ø68 of choice (sold separately).

8

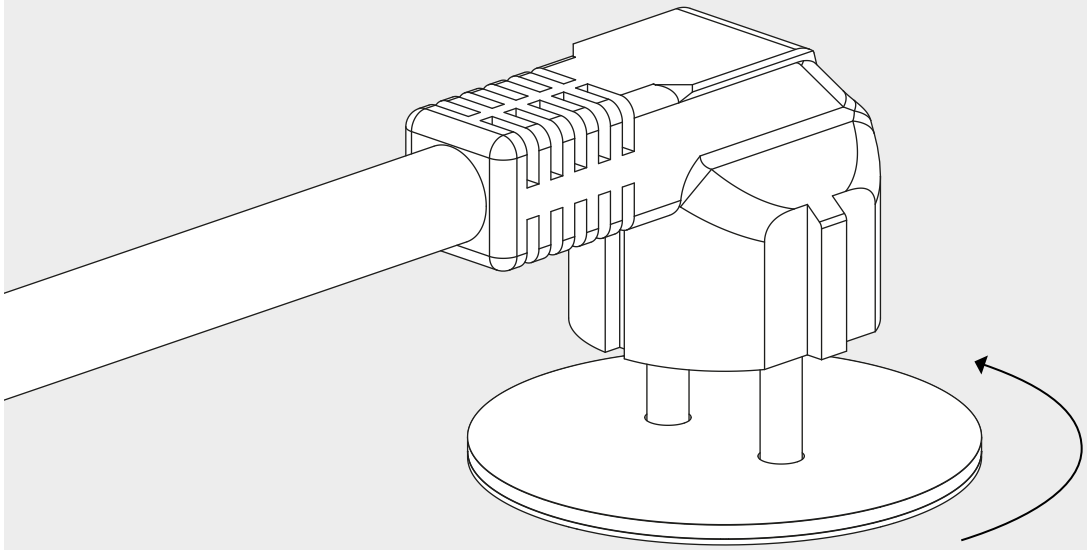

For access, remove the cover plate with a plug.

thank you for choosing rond

Installation must be done by skilled professionals only and instructions must be followed at all times. Warranty will not apply in case of wrongful use or if unskilled personnel attempts to repair a product.