

prado

# unifit outlet corded installation instruction

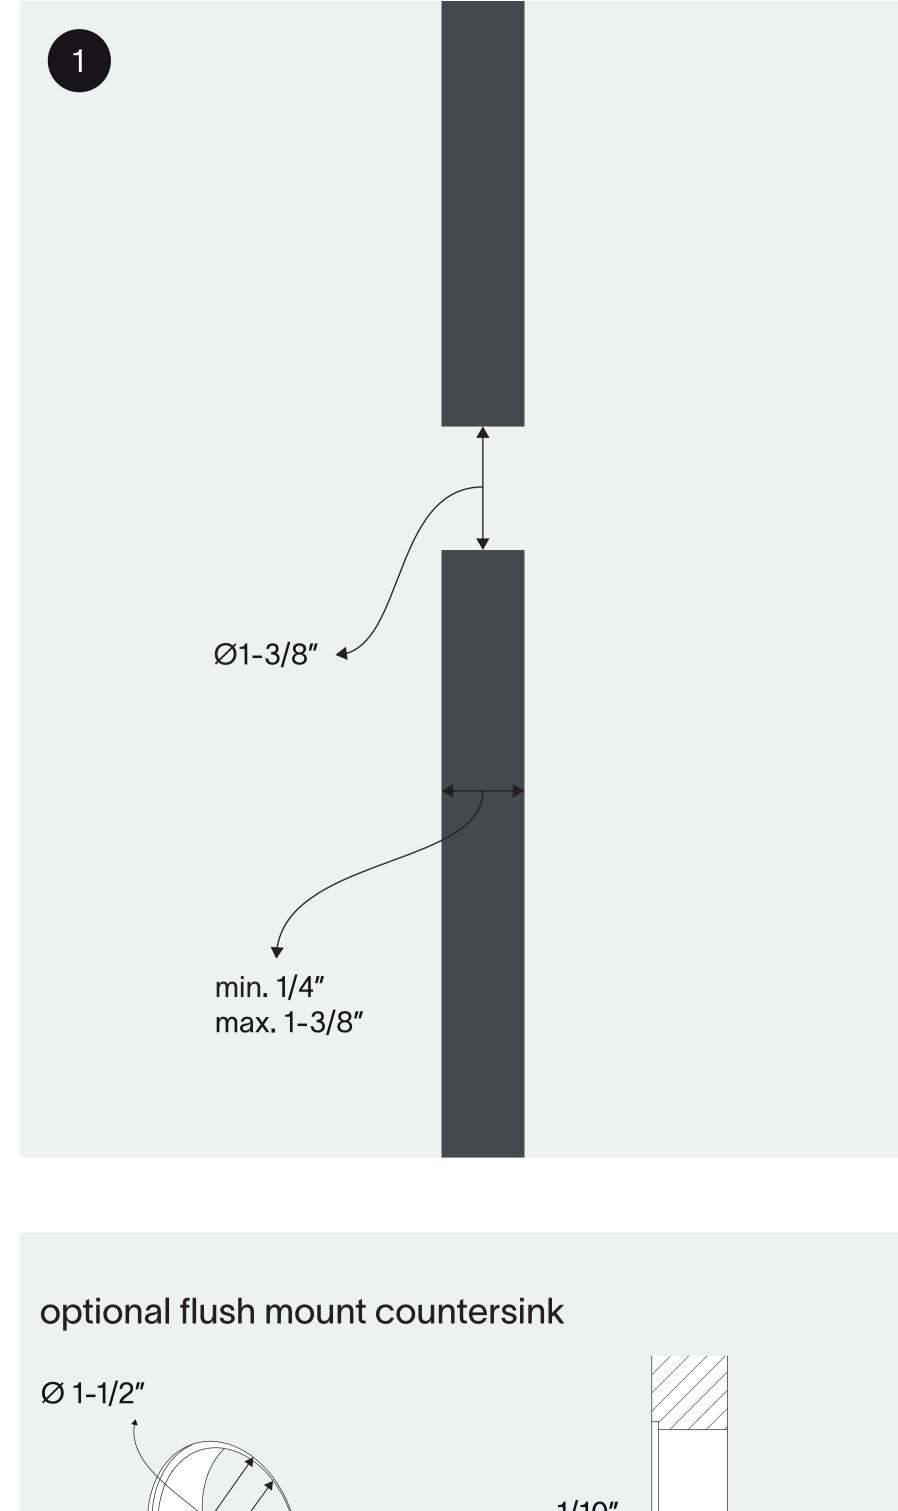

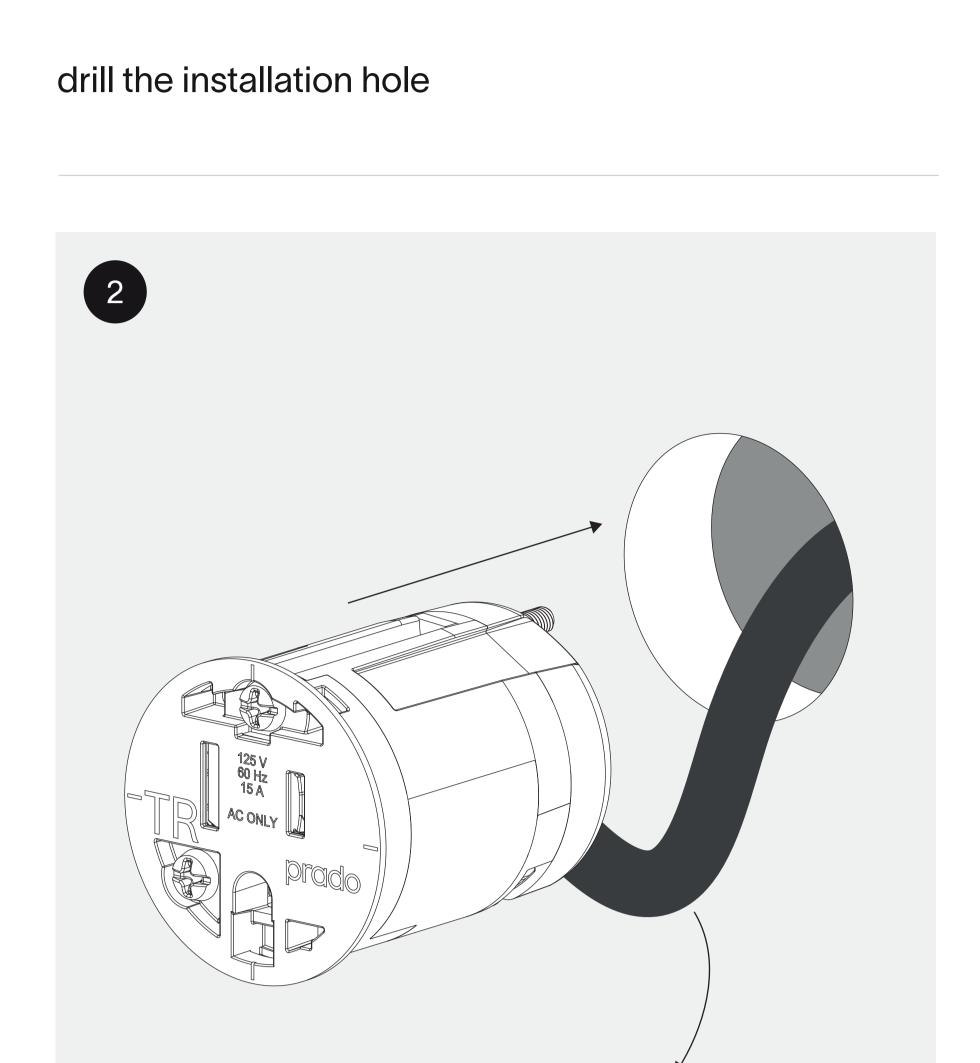

5ft. cable + NEMA 5-15 plug


**POWER** 

**OFF** 

Ø 1-3/8"

insert the outlet in the hole and connect the plug

make sure the power is turned off during installation

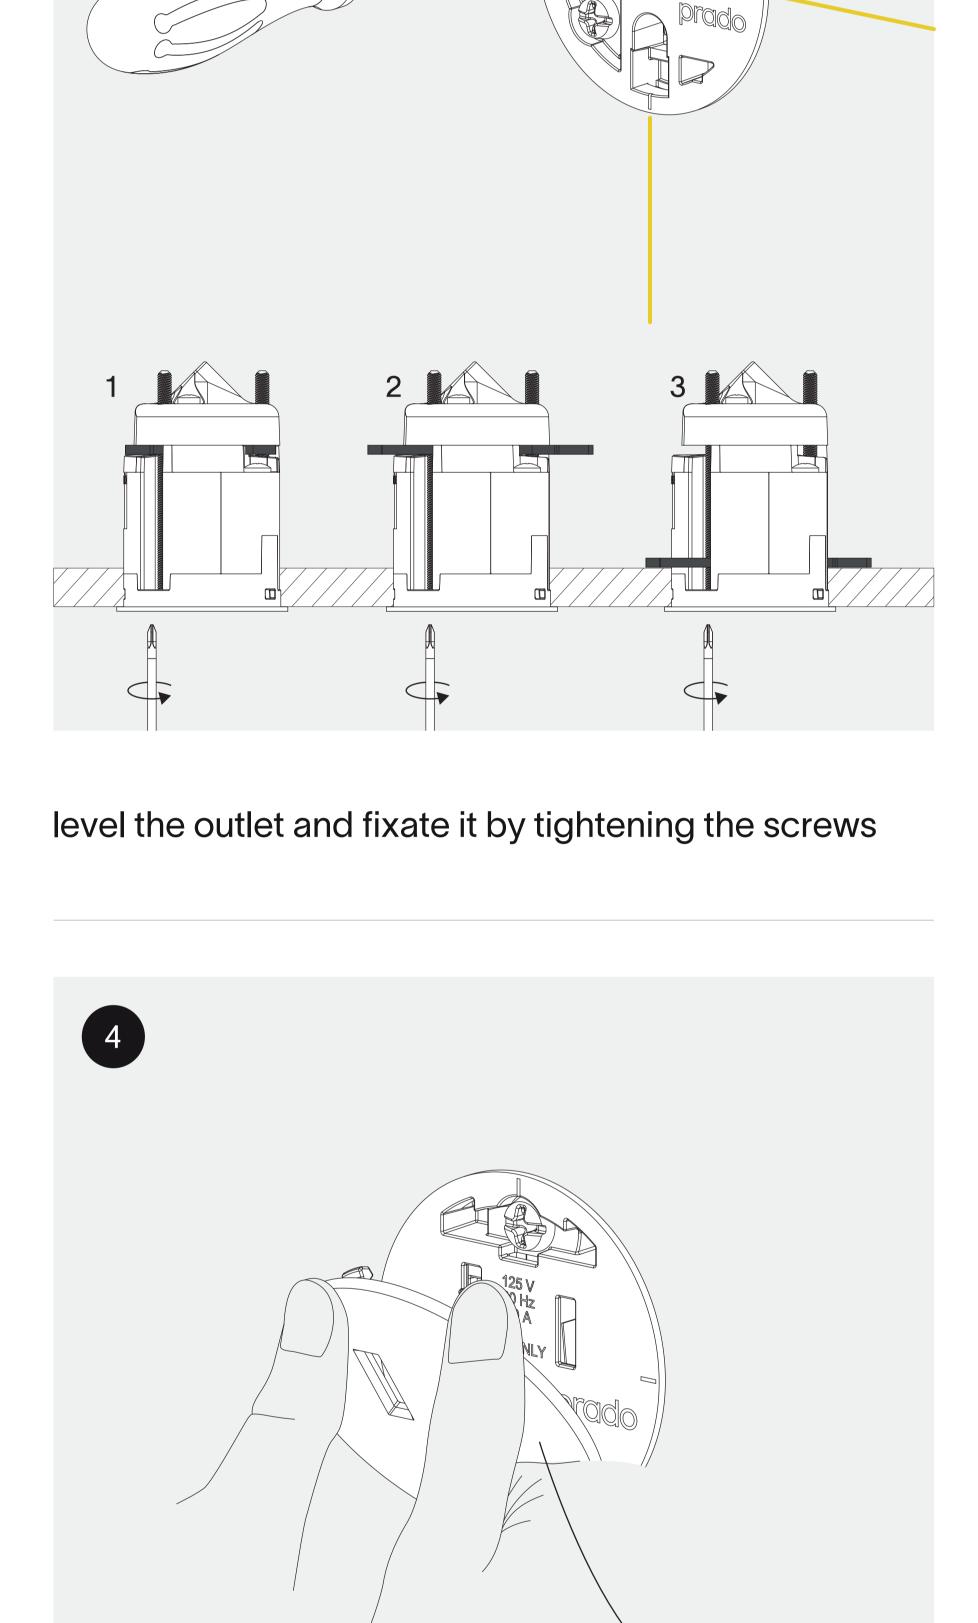


	unifit cover plate sold seperately
finish	SKU
black	9000 - 0020
white	9000 - 0022
sand	9000 - 0024
clay	9000 - 0026
5	


"click"




### for removal

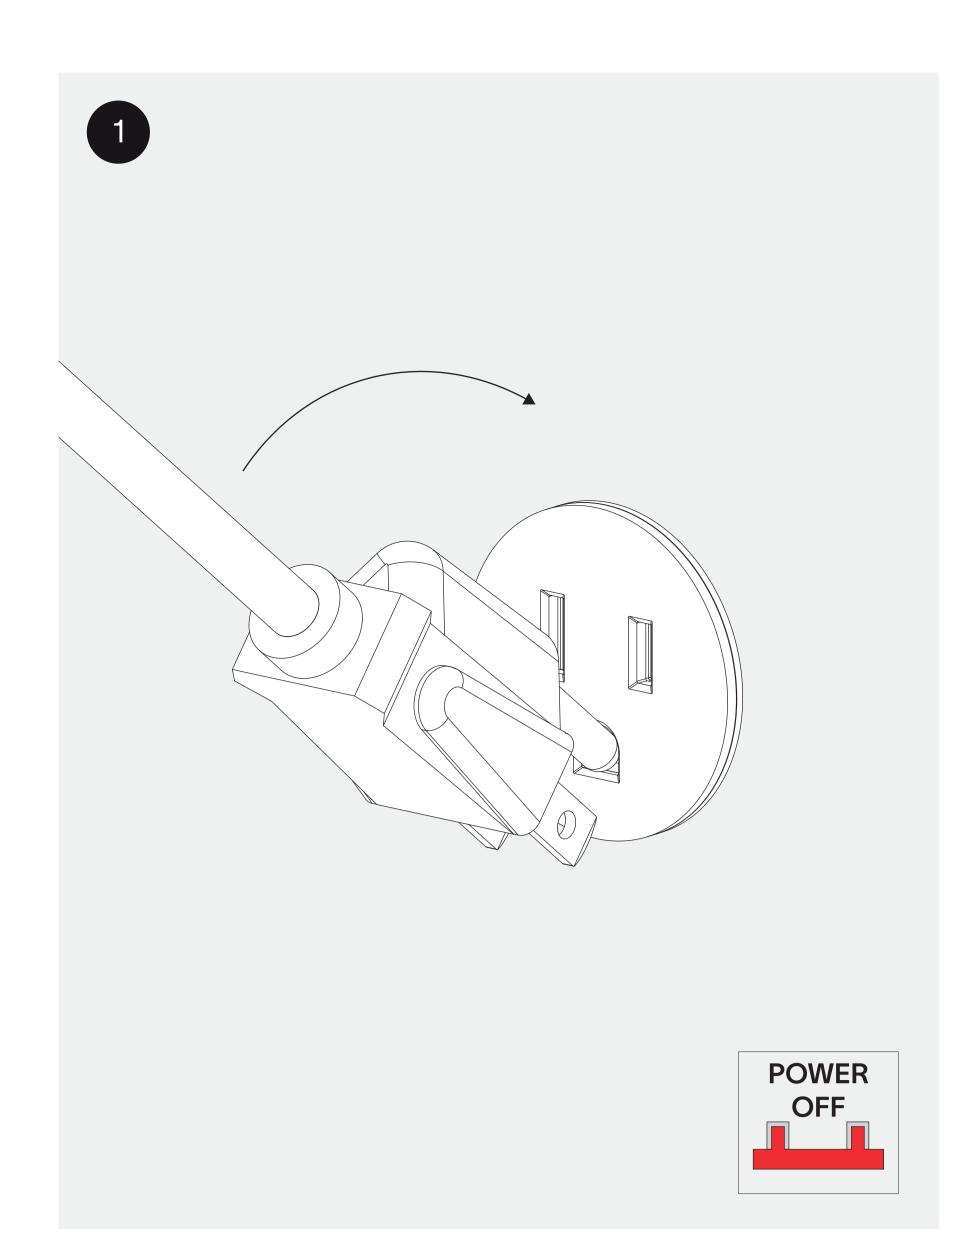

turn the power off before removing the outlet

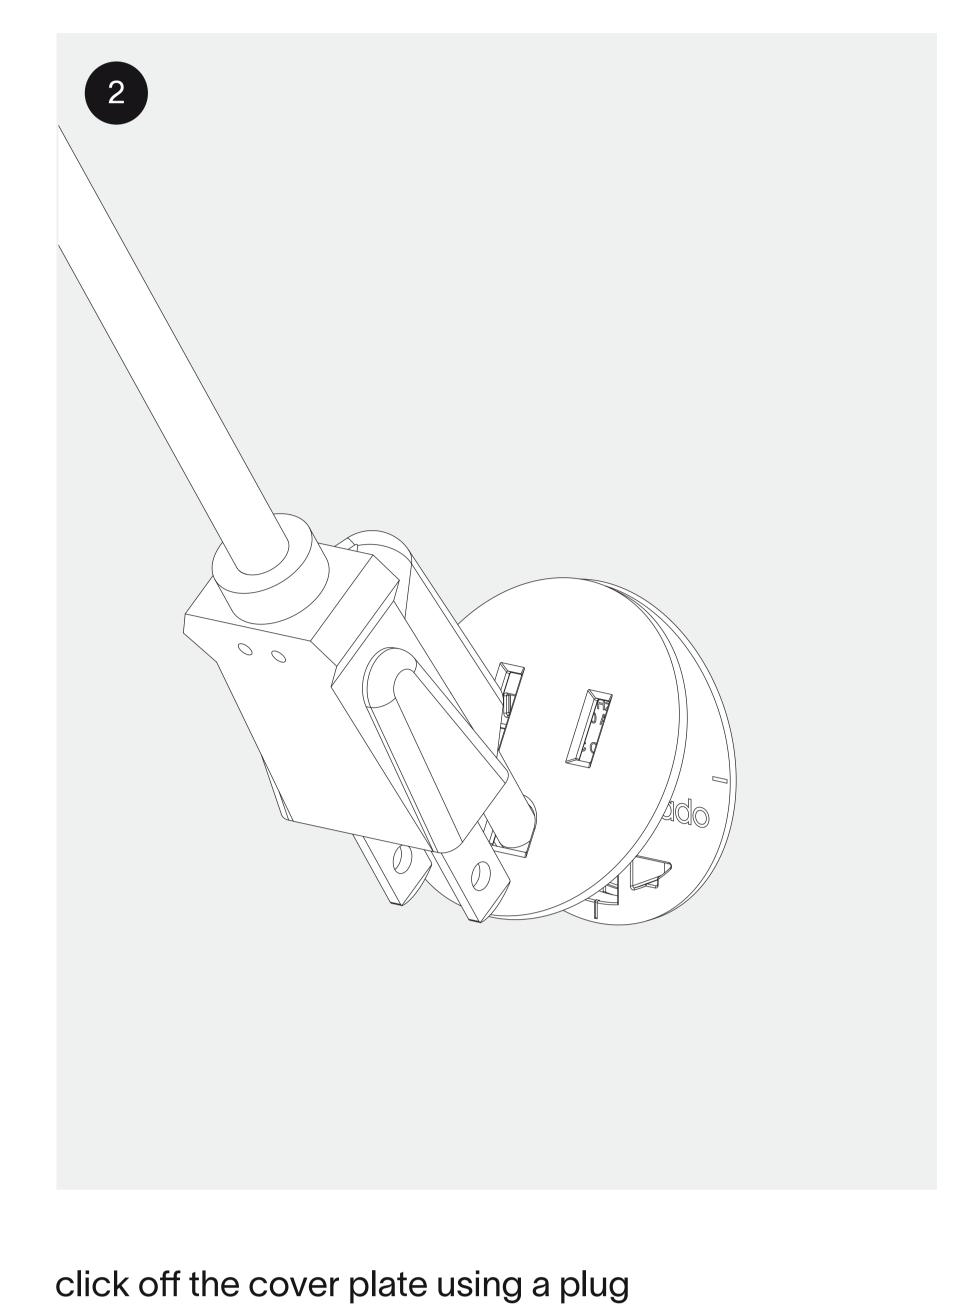

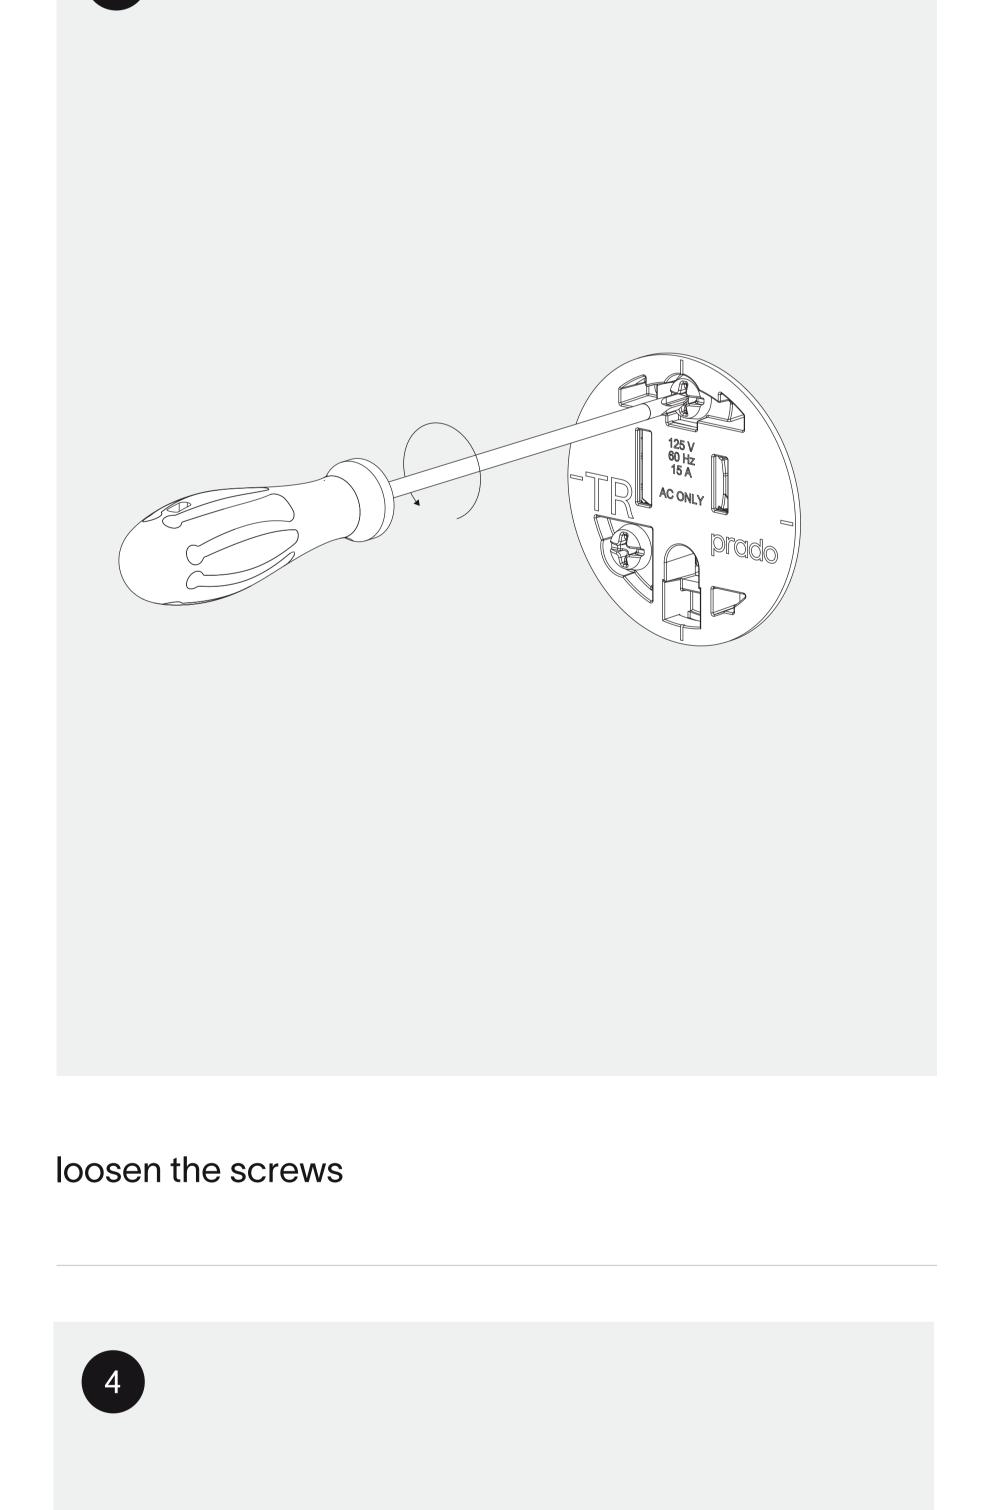

prado

## remove the outlet

thank you for choosing prado



CONFORMS TO UL STD. 498 CERTIFIED TO CSA STD. C22.2#42

### prado.com

support@prado.com - Prado America LLC

Installation must be done by skilled professionals only and instructions must be followed at all times. Warranty will not apply in case of wrongful use of if unskilled personnel attempts to repair a product.