

unifit outlet hardwired installation instruction

1

optional flush mount countersink

drill the installation hole

2

Turn the power off.

The branch circuit wiring that supplies each device consists of a separate nonmetallic cable assembly originating outside the box, or individual sets of conductors in a single nonmetallic raceway, all of which originate outside the box. Other than the connections to a single device, these conductors are not spliced in the box or continued to another device, and no other wiring or raceways enter the box.

3

make all necessary connections, make sure correct cable thickness is used:

- 15A – 14 AWG
- 20A – 12 AWG

4

insert the outlet in the hole

5

level the outlet and fixate it by tightening the screws

6

install the cover plate

7

install the cover plate


8

install the cover plate


finish	SKU - 15A	SKU - 20A
black	9000 - 0020	9000 - 0021
white	9000 - 0022	9000 - 0023
sand	9000 - 0024	9000 - 0025
clay	9000 - 0026	9000 - 0027

turn the power on


for removal

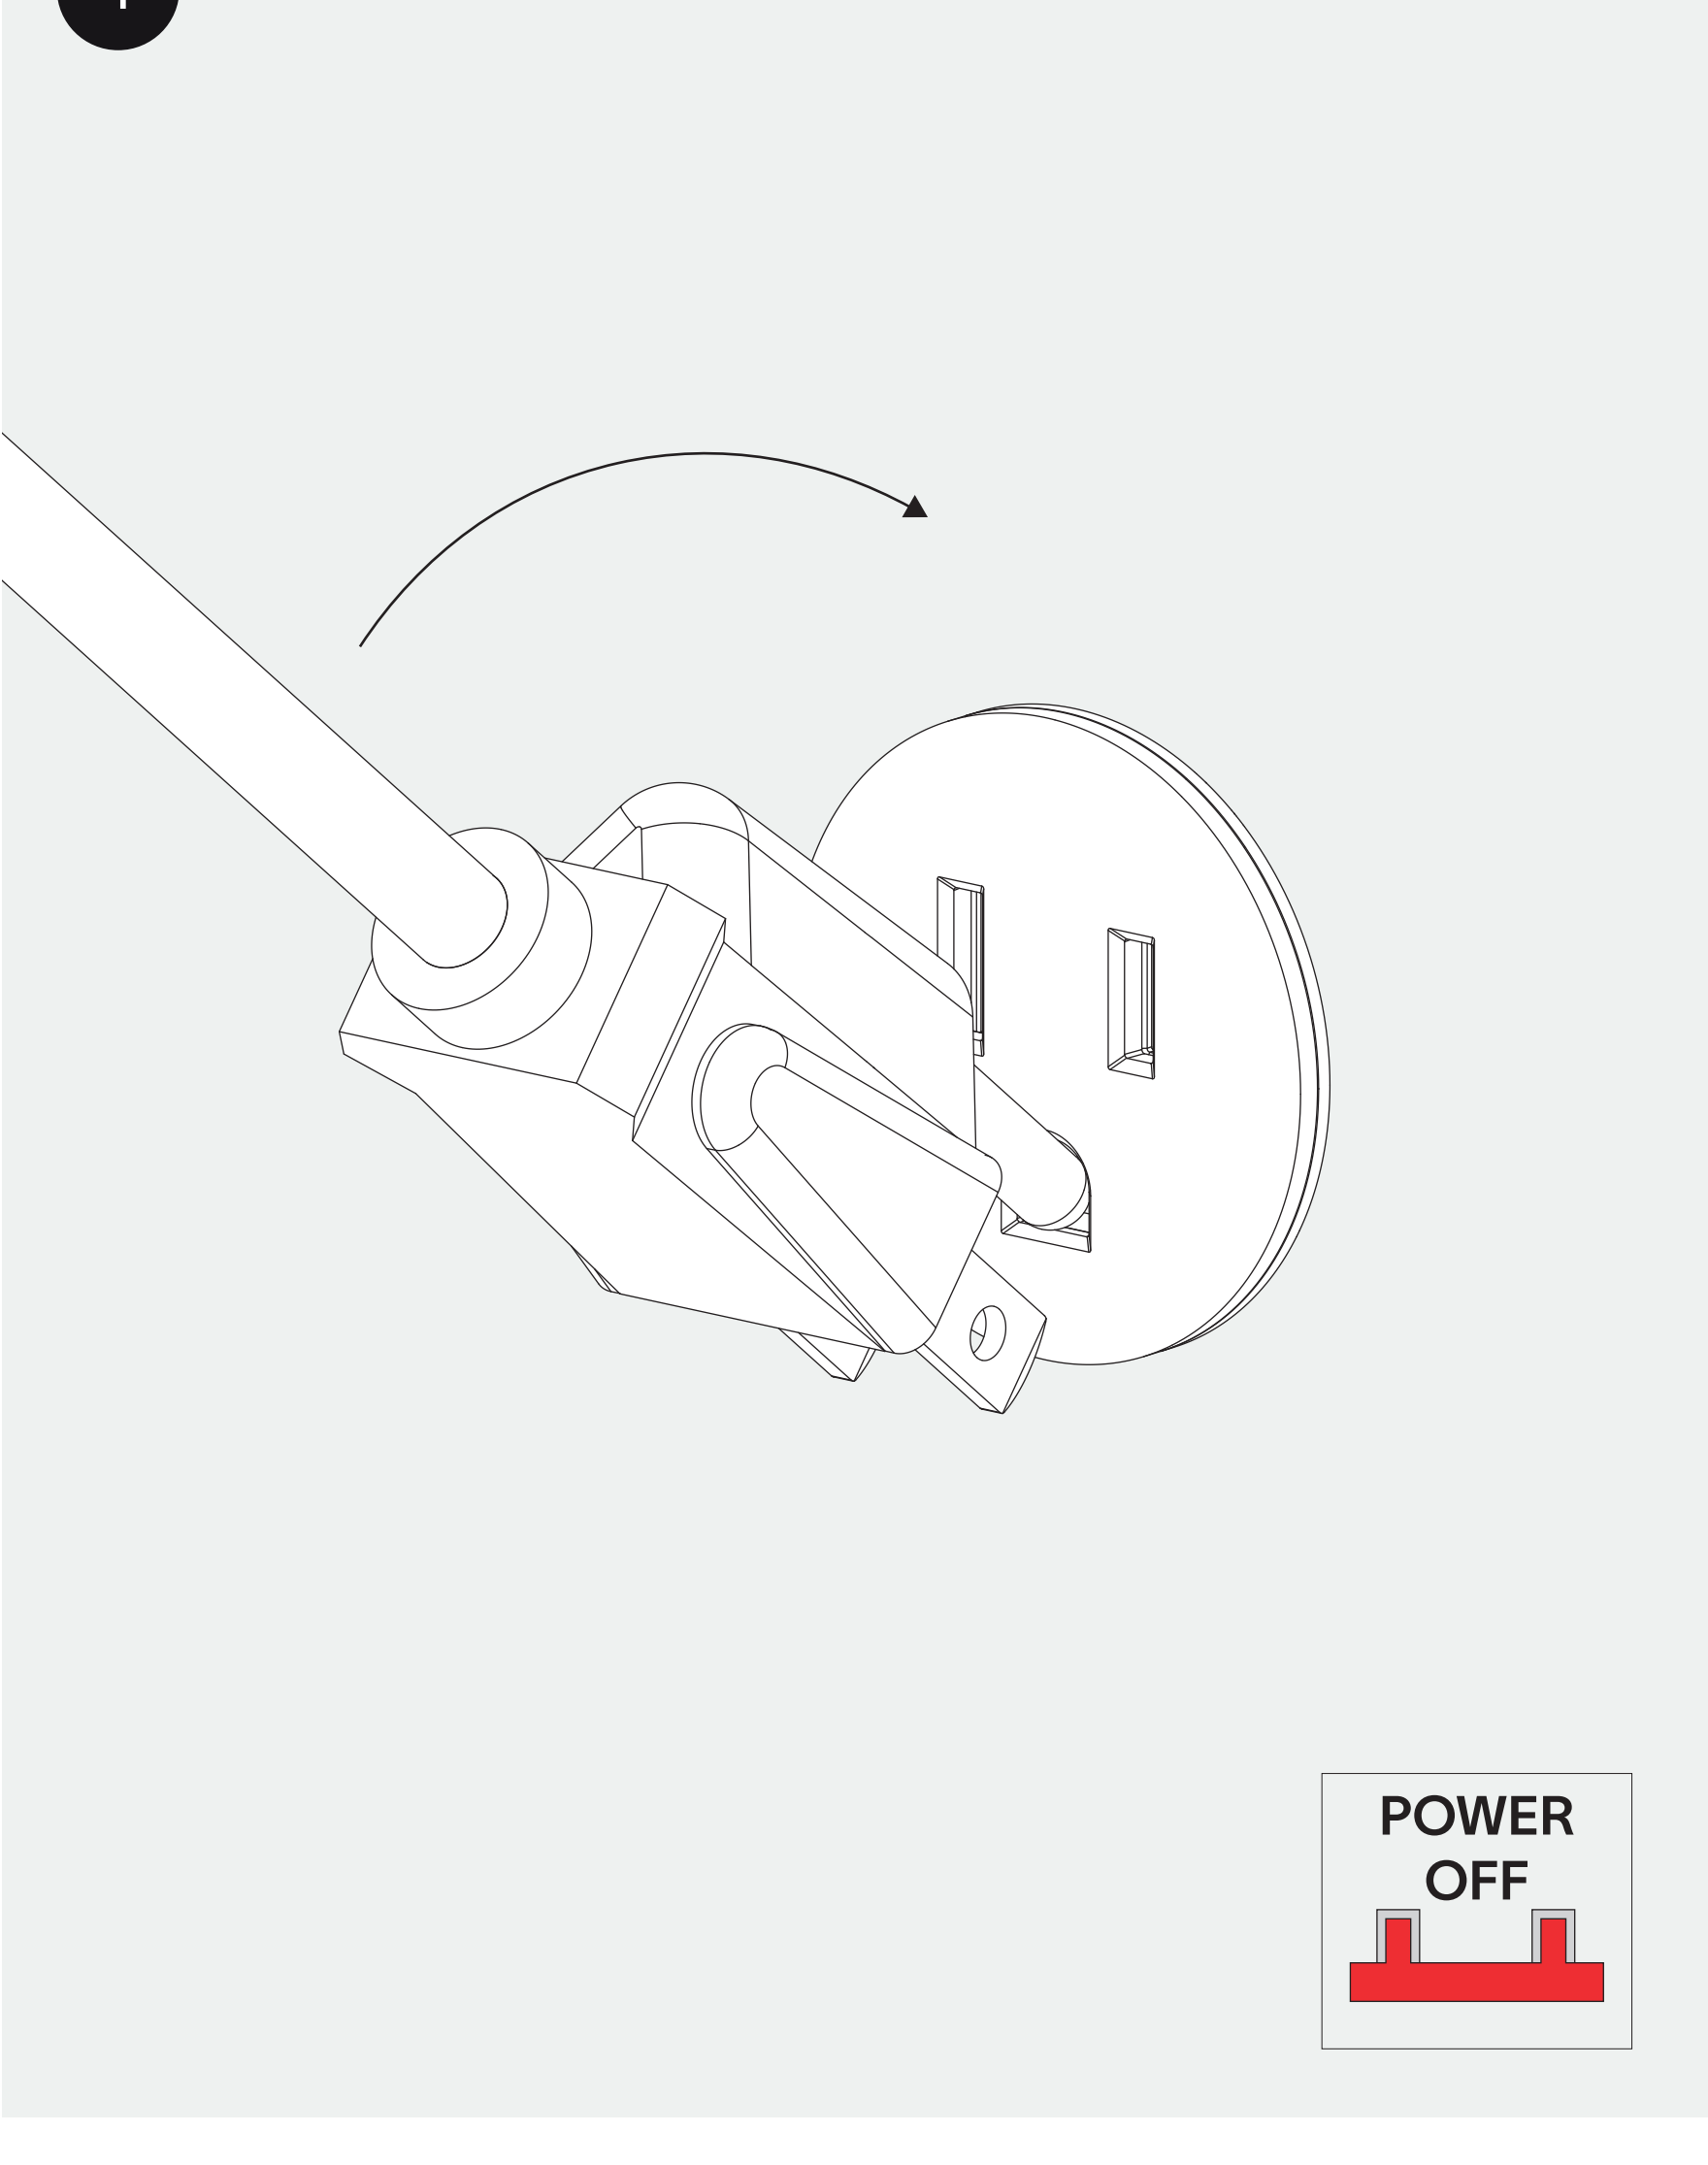


turn the power off before removing the outlet

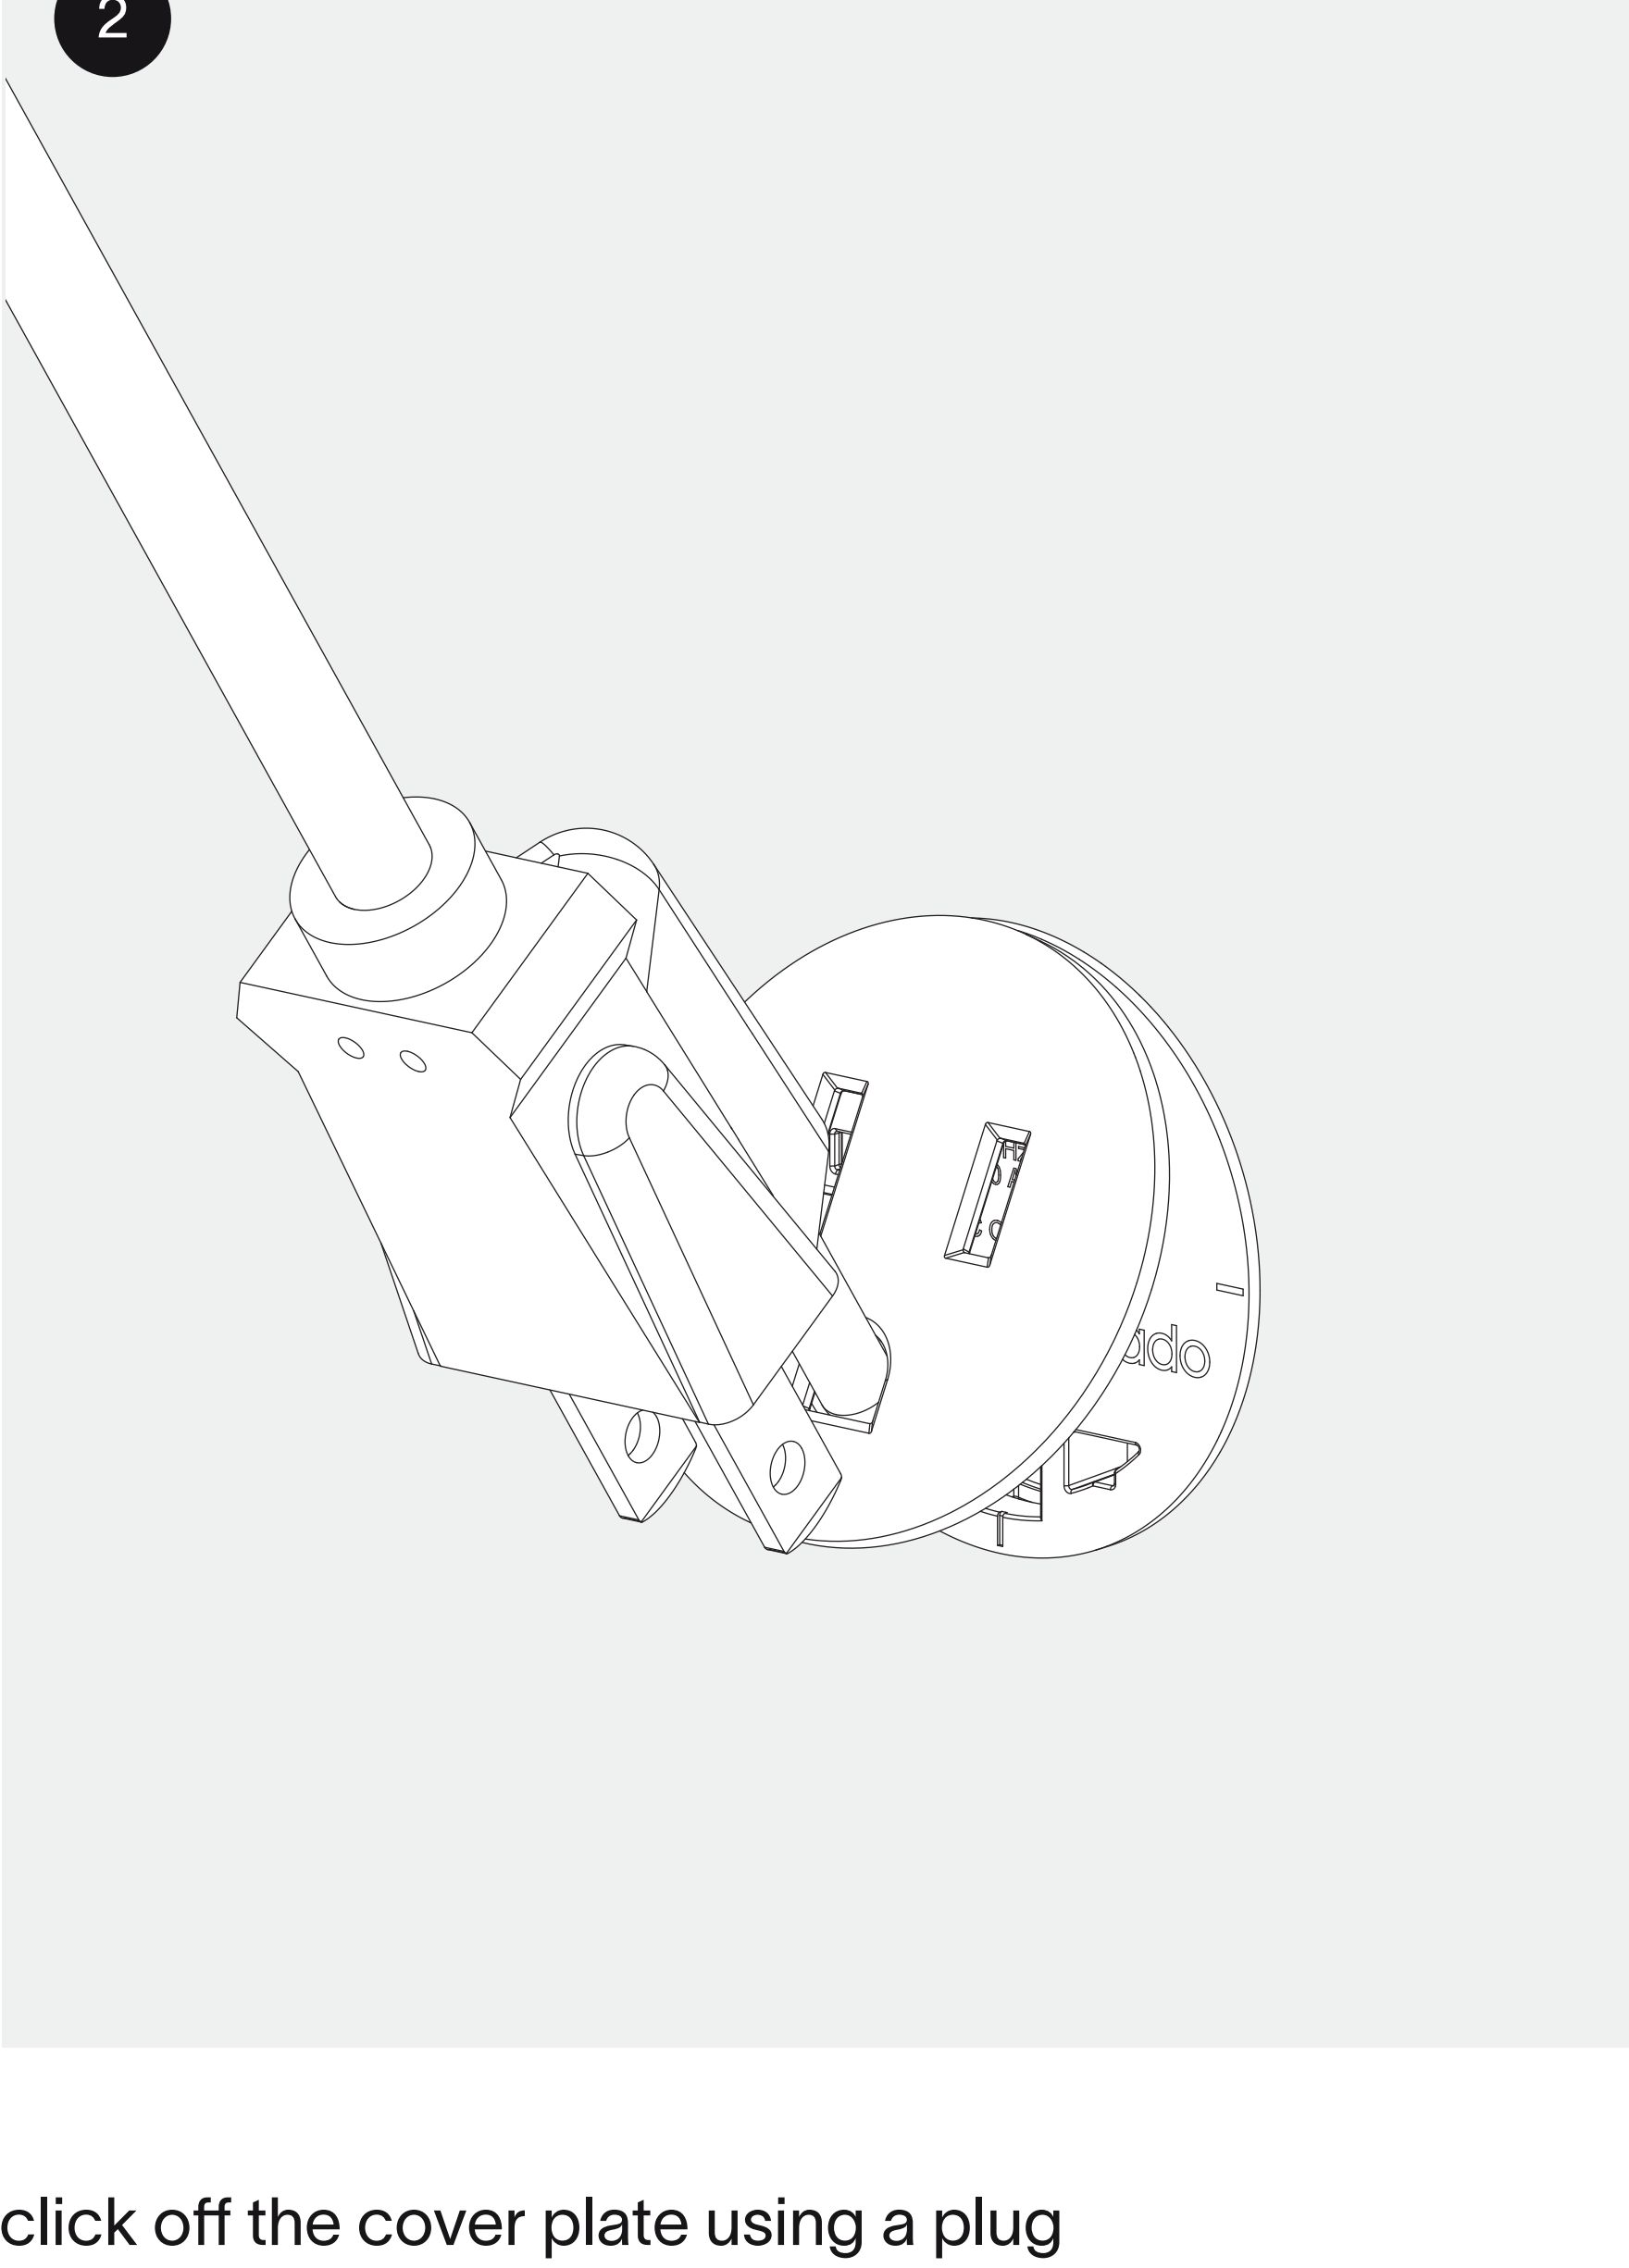

click off the cover plate using a plug

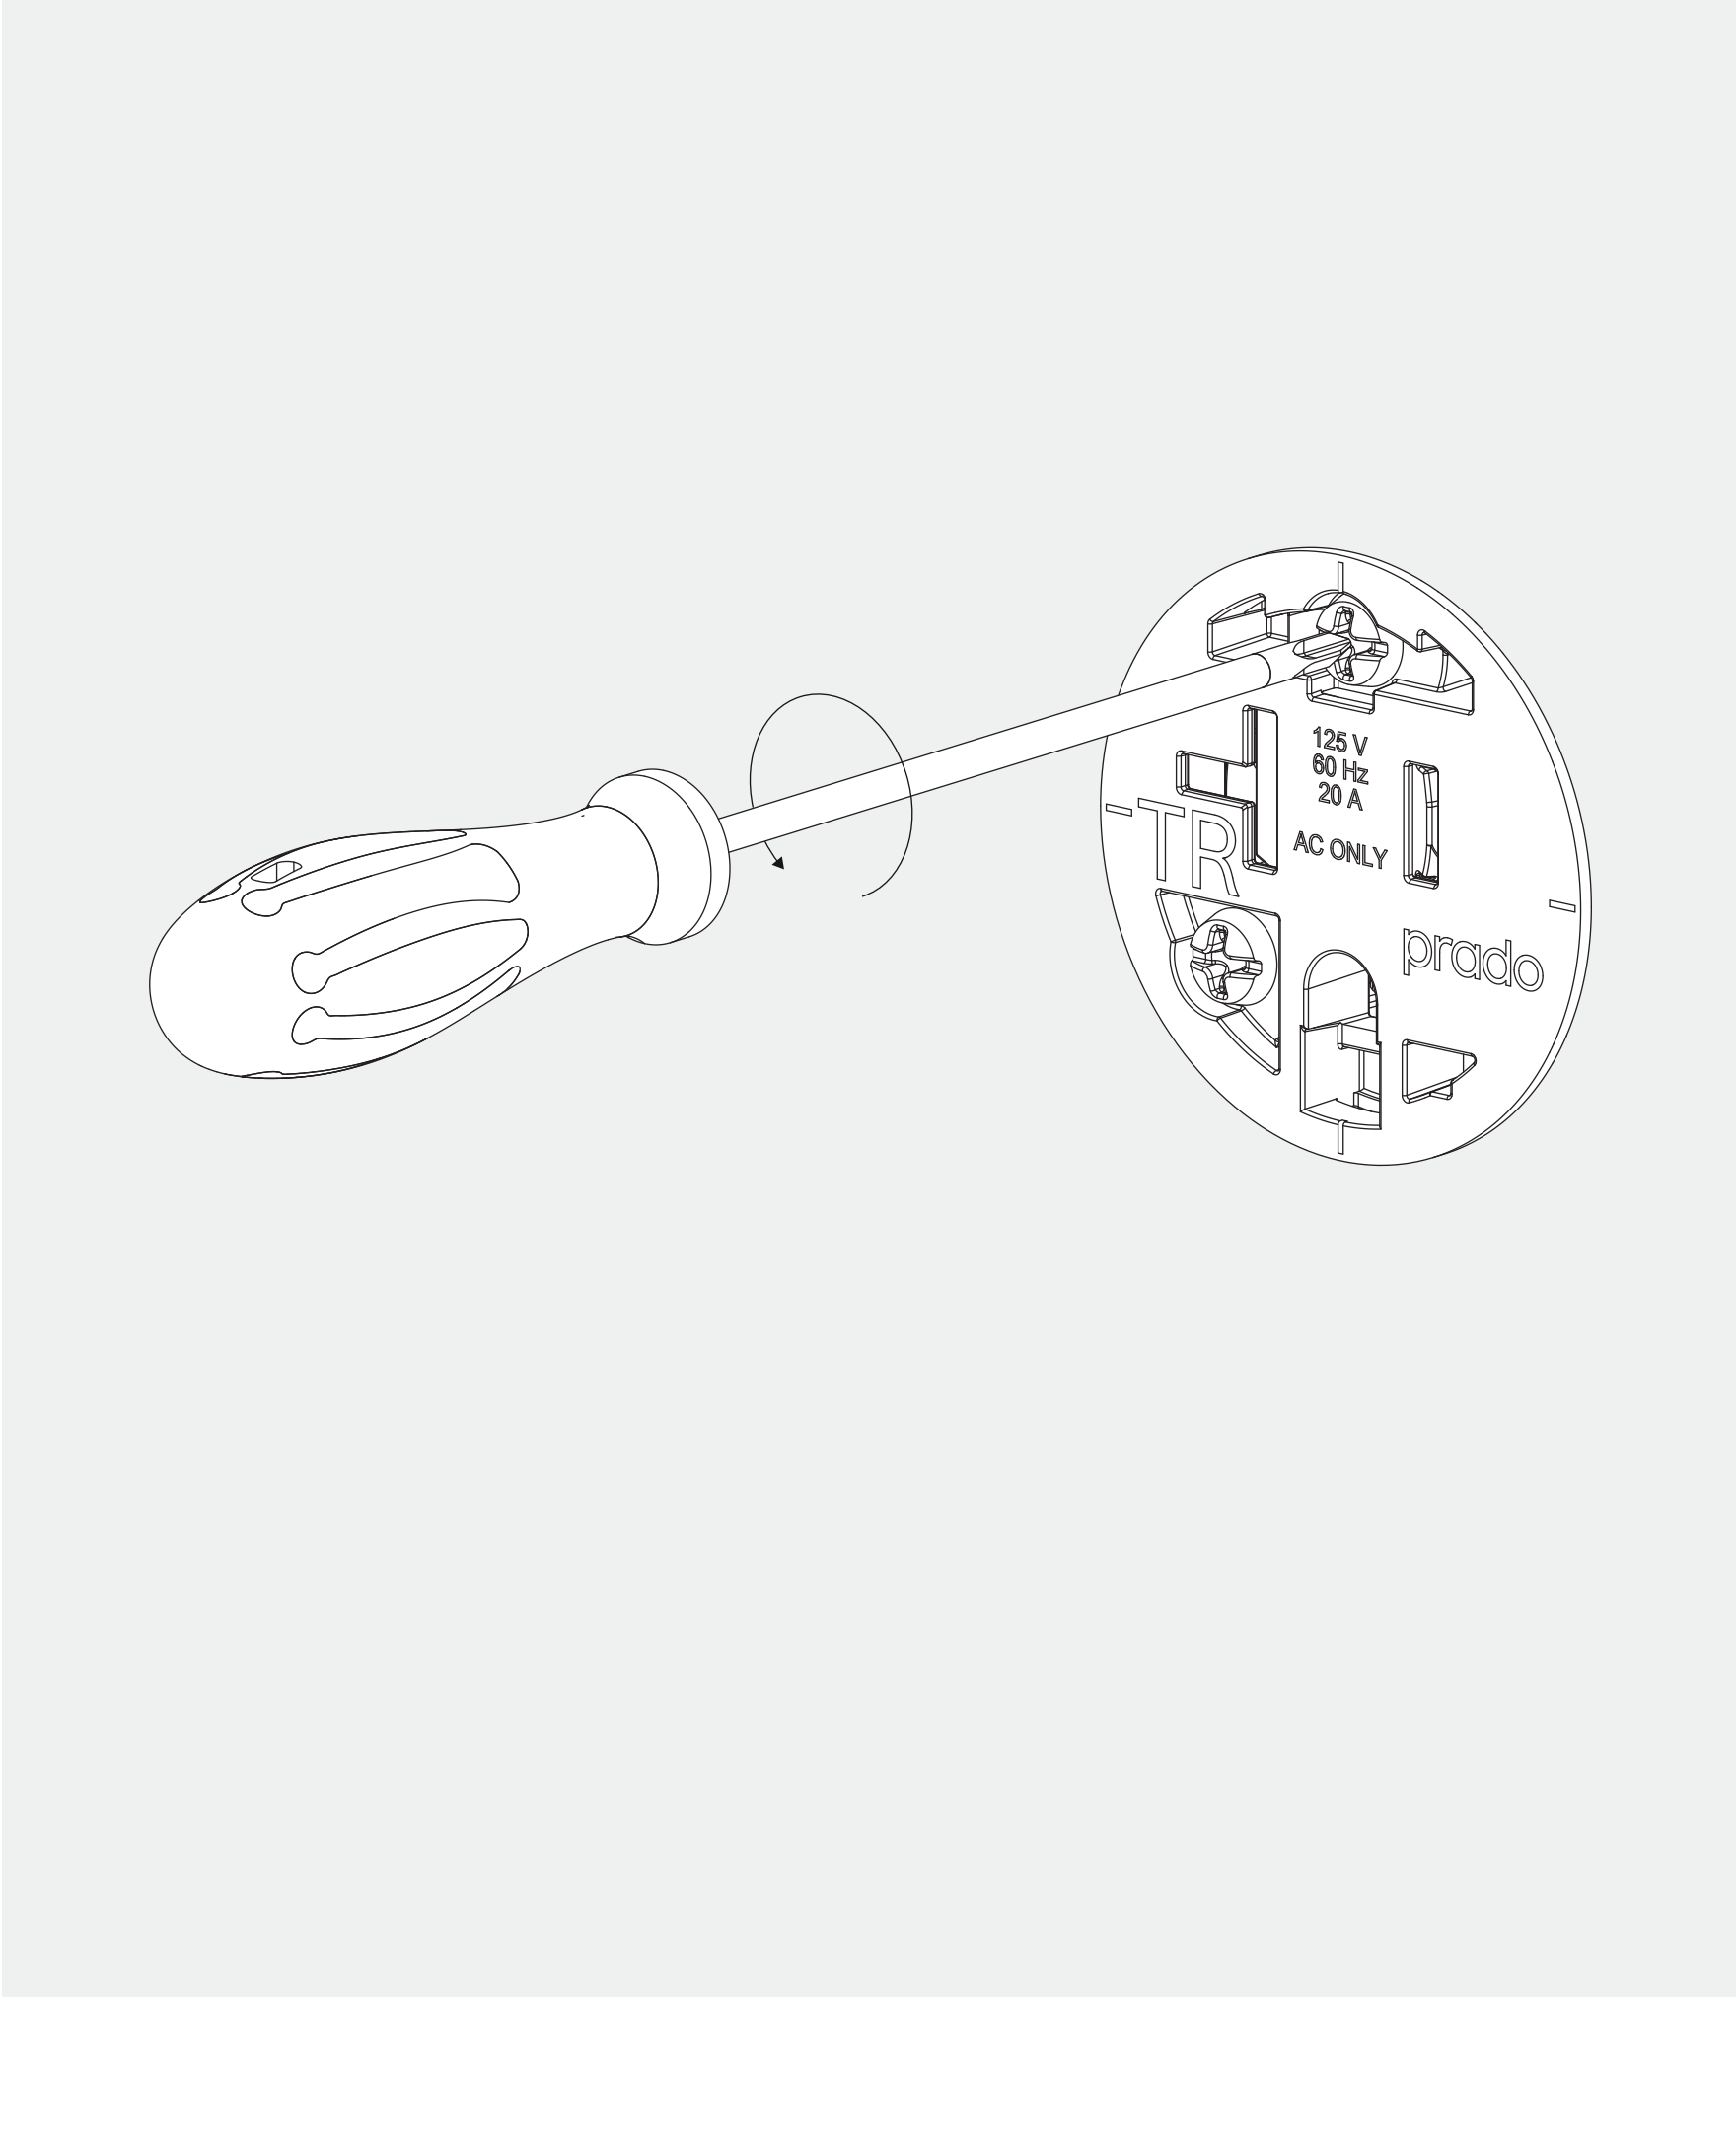

loosen the screws

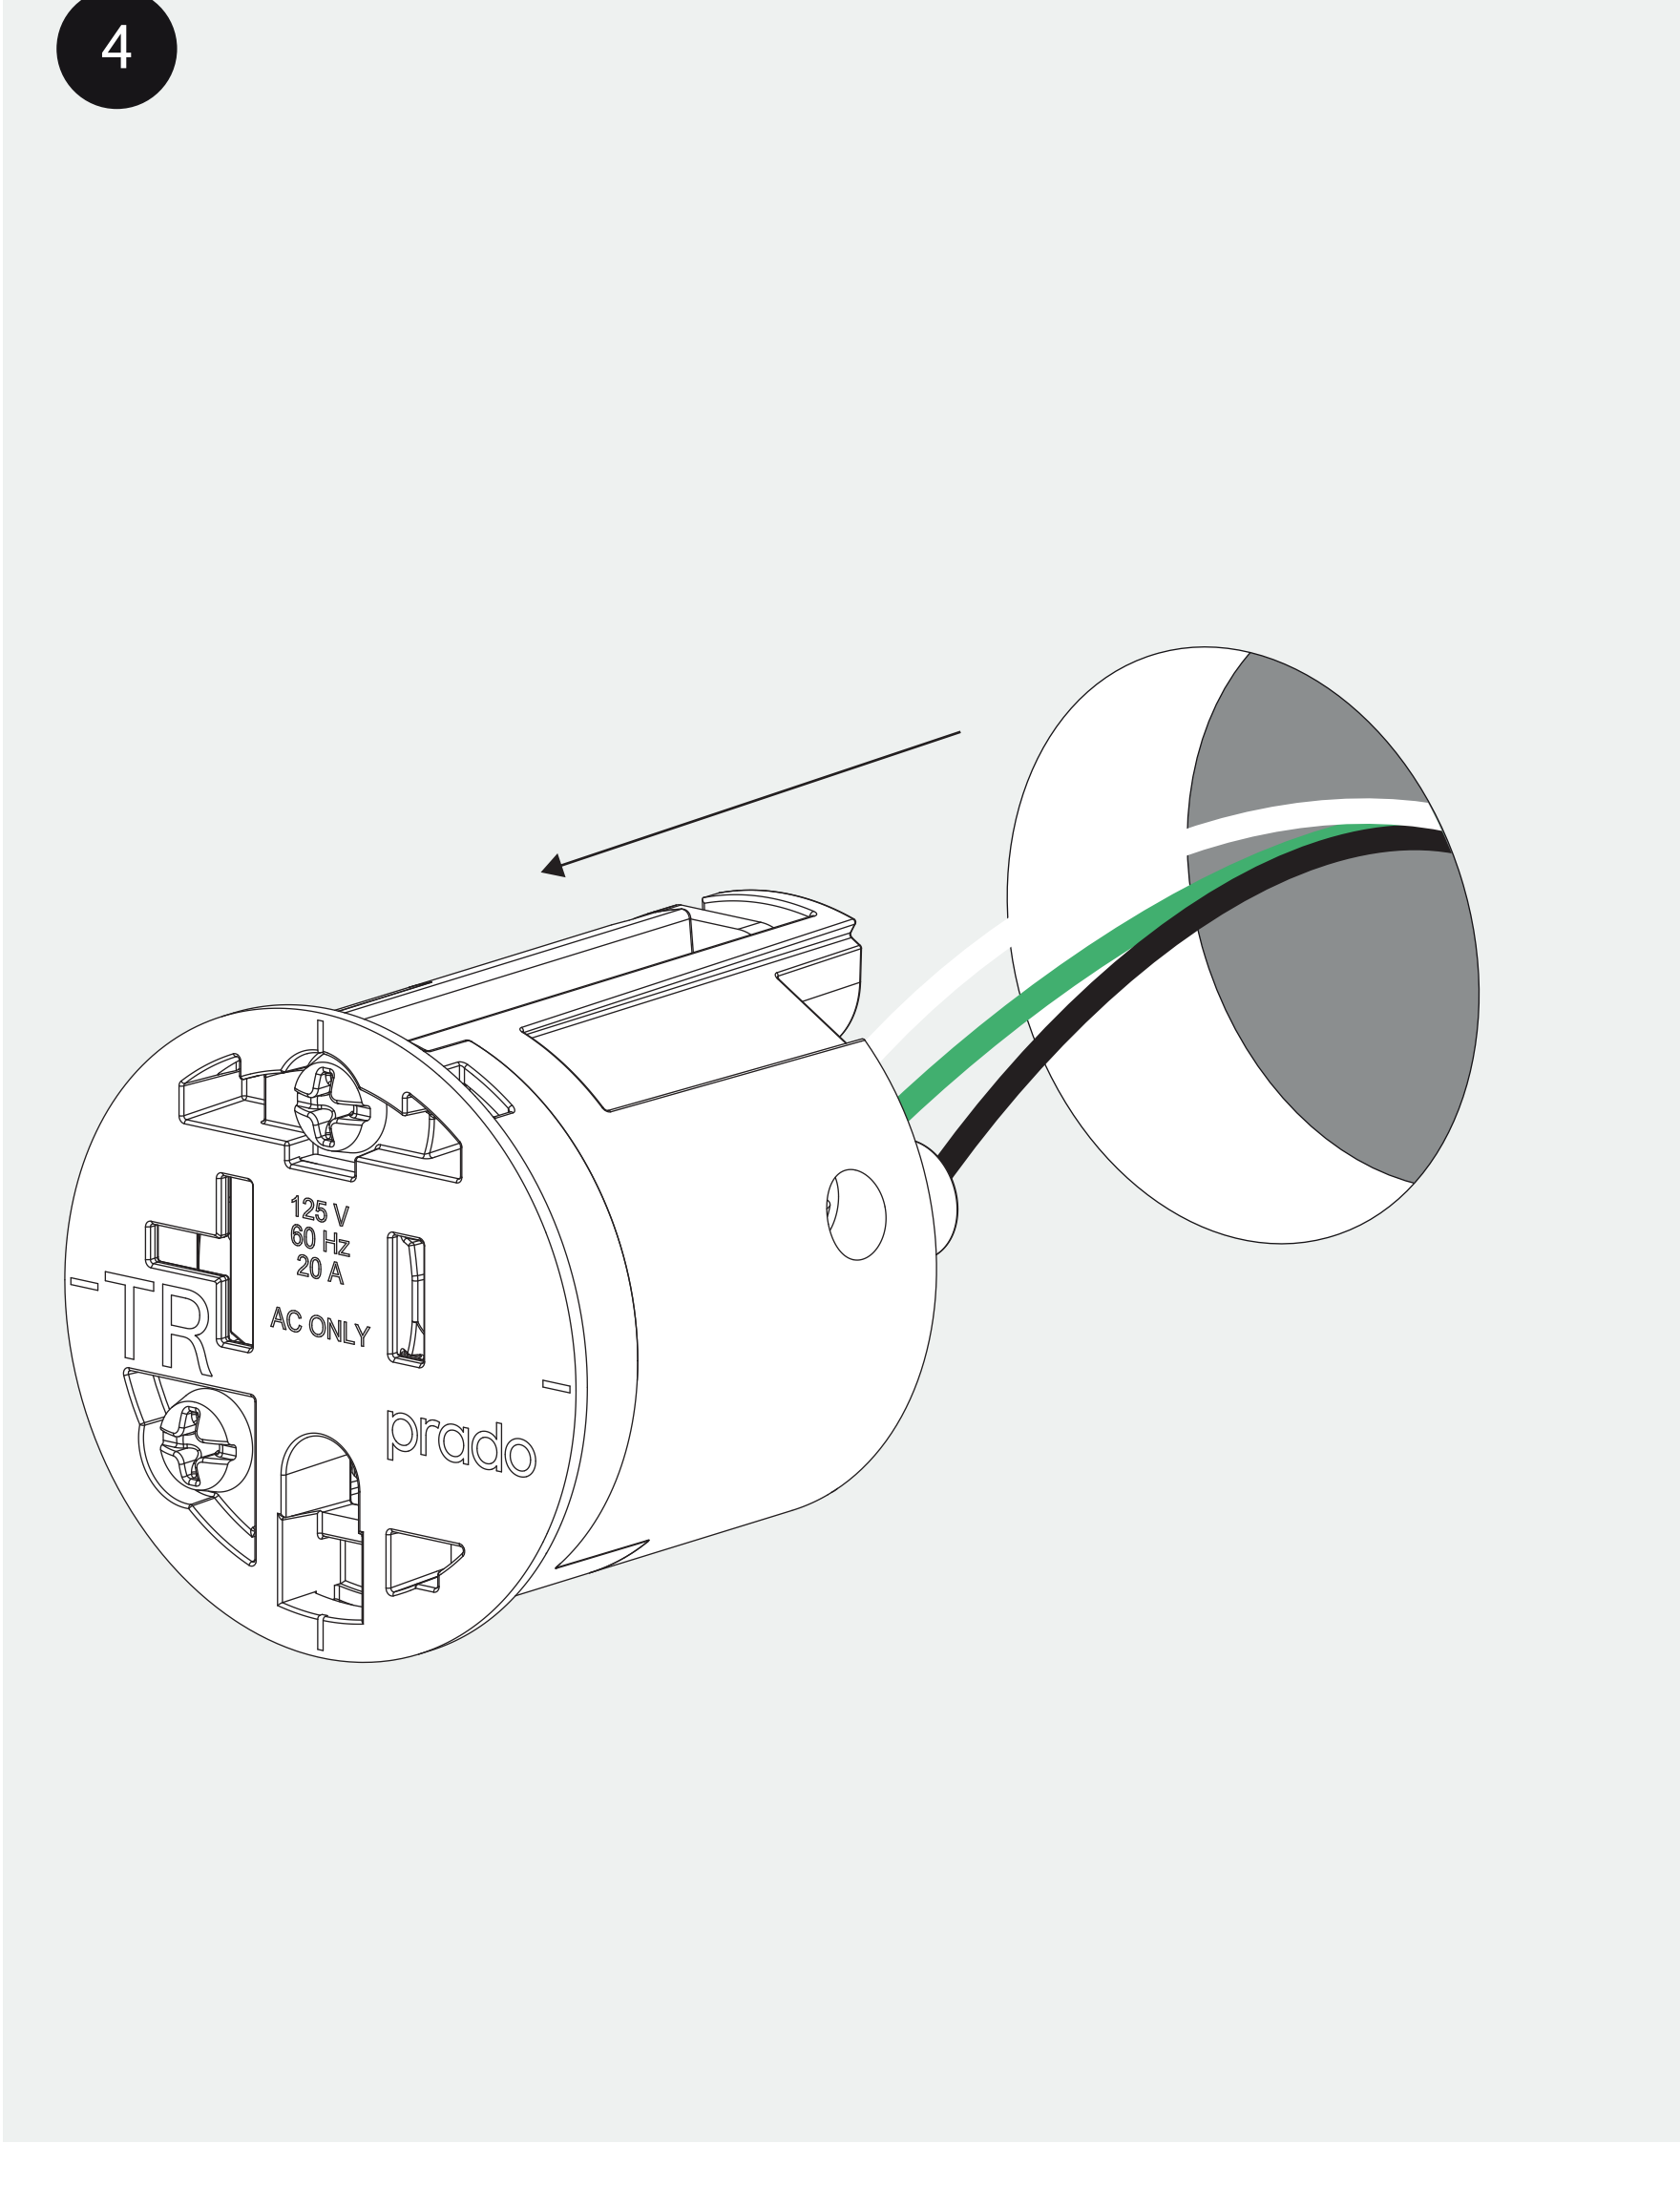

remove the outlet

thank you for choosing prado



Intertek

5029983

CONFORMS TO UL STD. 498
CERTIFIED TO CSA STD. C22.2#42

prado.com

support@prado.com - Prado America LLC

Installation must be done by skilled professionals only and instructions must be followed at all times. Warranty will not apply in case of wrongful use of if unskilled personnel attempts to repair a product.