



trim spot mini | short

installation instruction


1

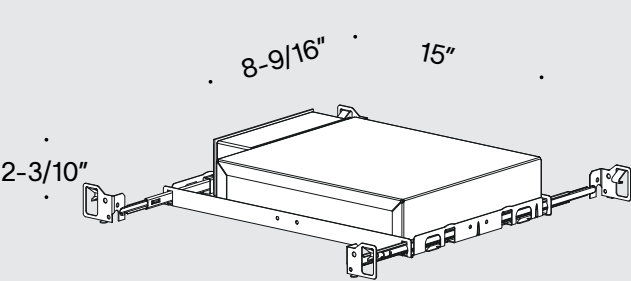


housing
IC AT

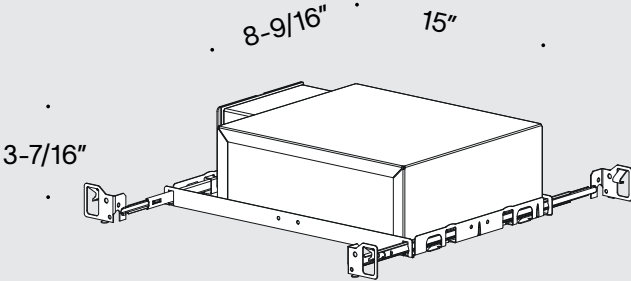

housing
IC AT

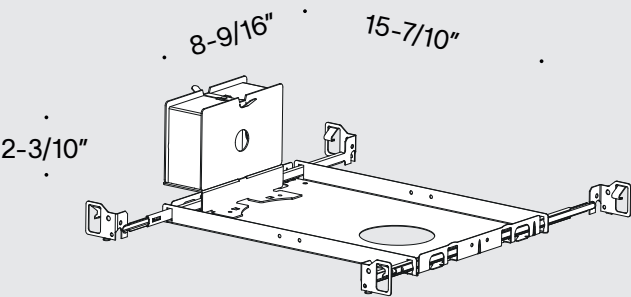


housing
NIC

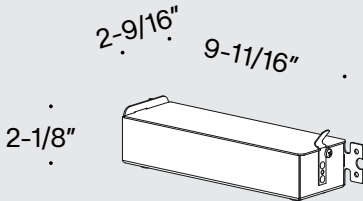


remodel
IJB

Install the appropriate IC/driver box.

2

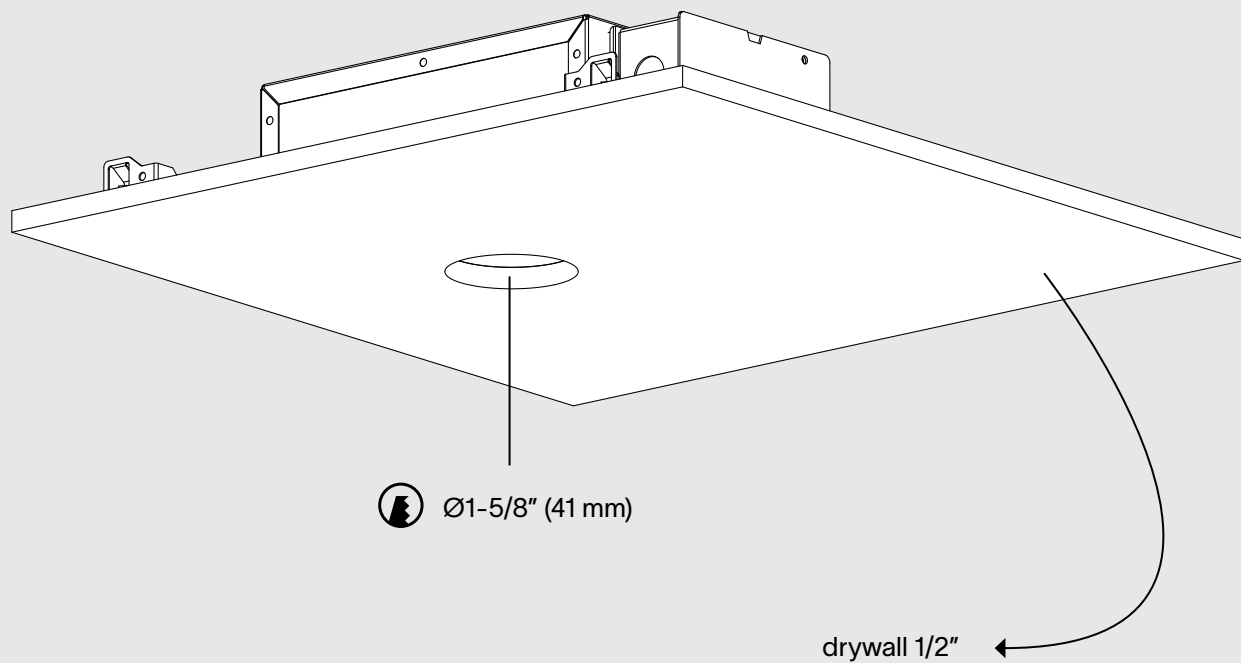


Install the drywall (thickness 1/2") with a round hole (Ø1-5/8").

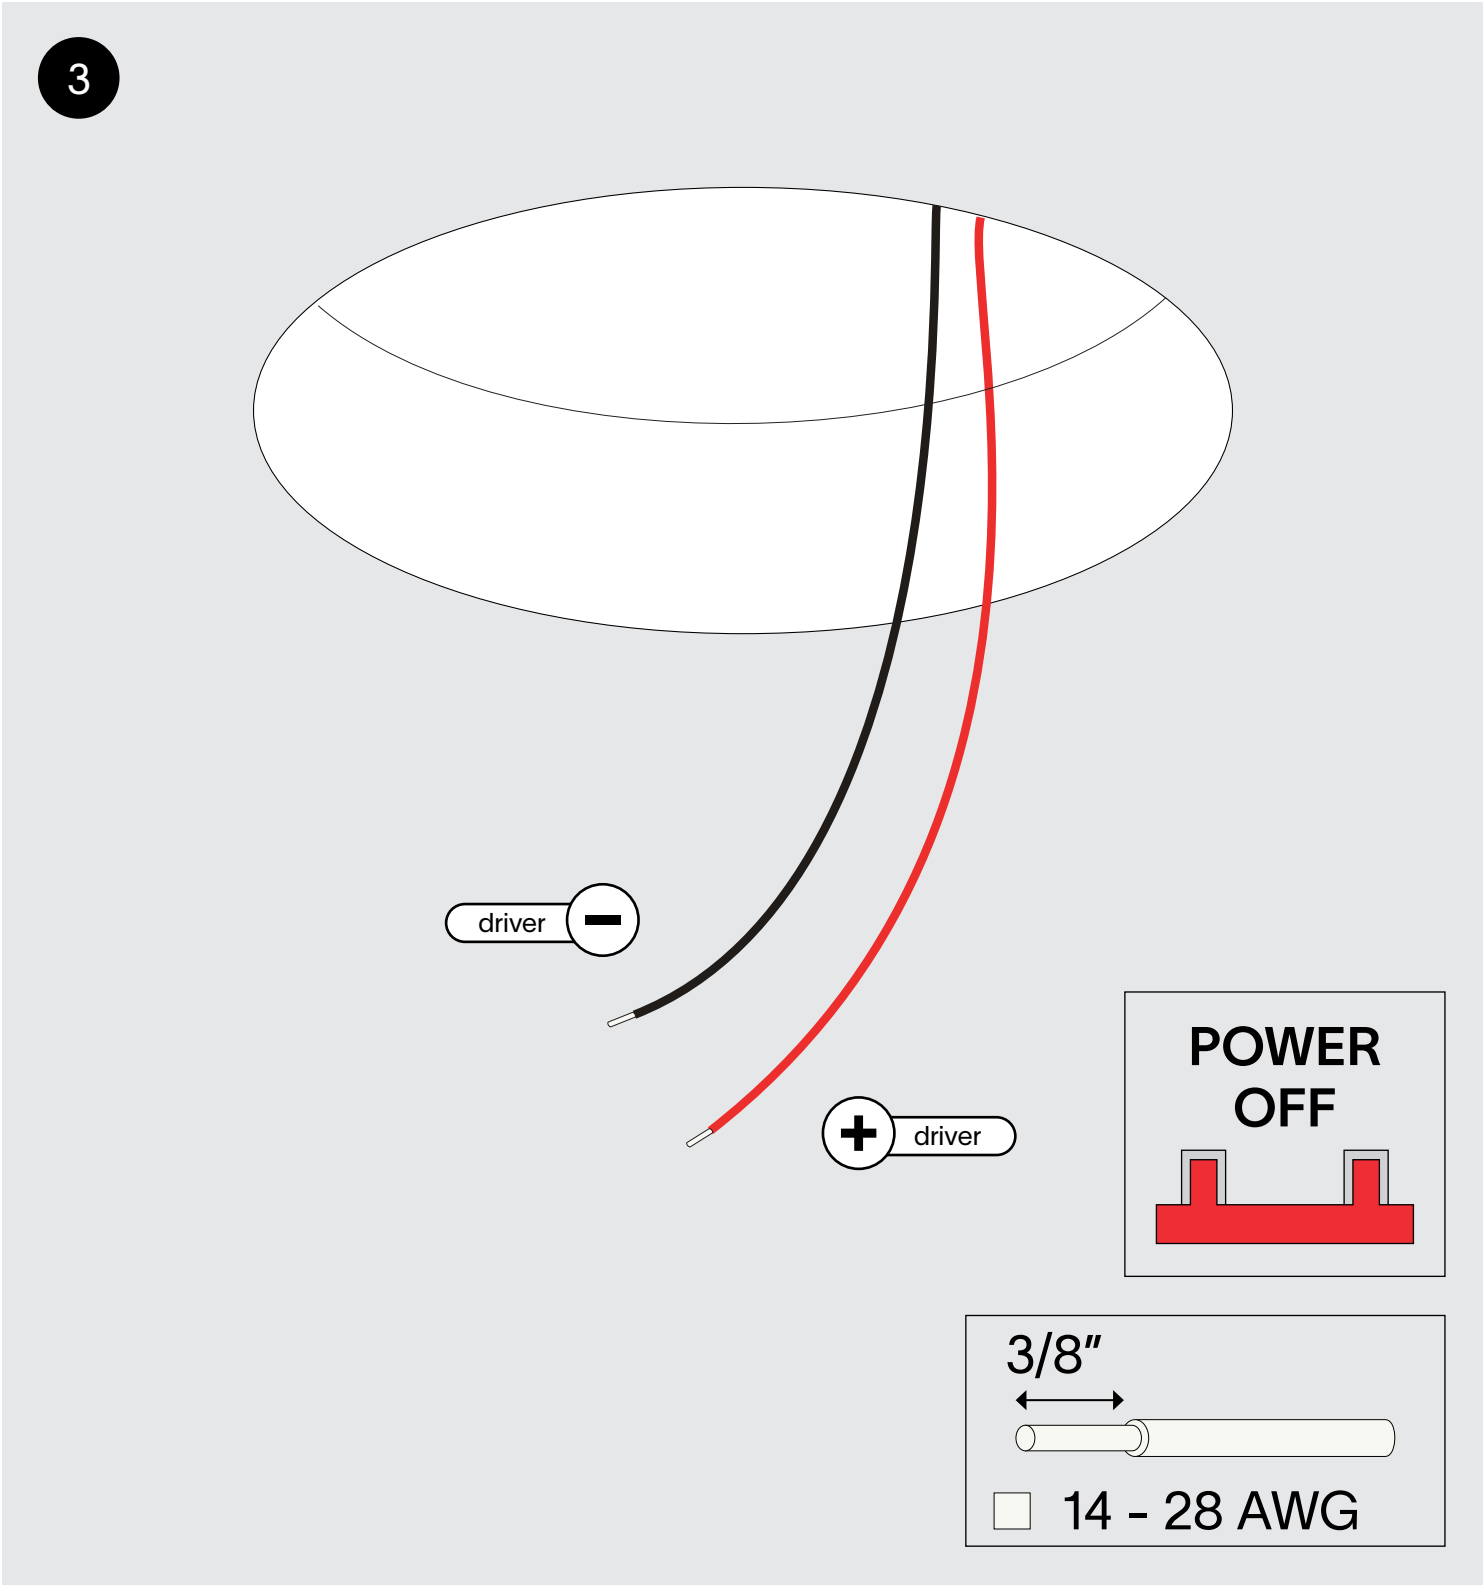


See packaging or fixture label for maximum current.

4

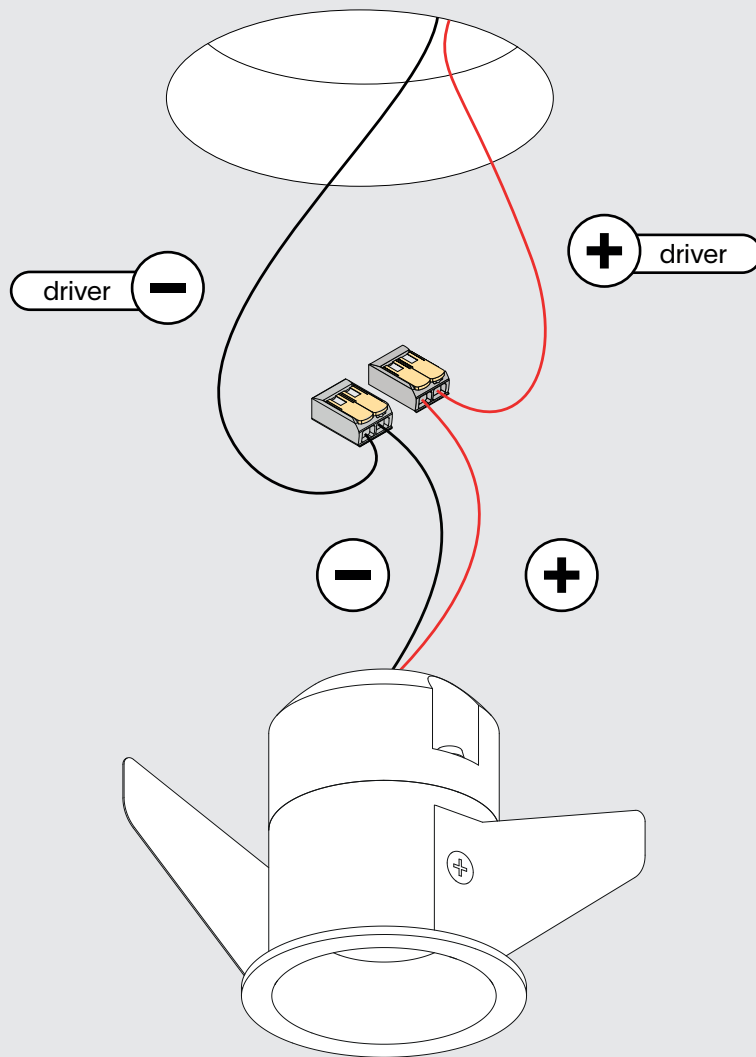


Connect the wires with wago connectors. For serial connection, respect polarity. Combine with a prado LED-driver.

5

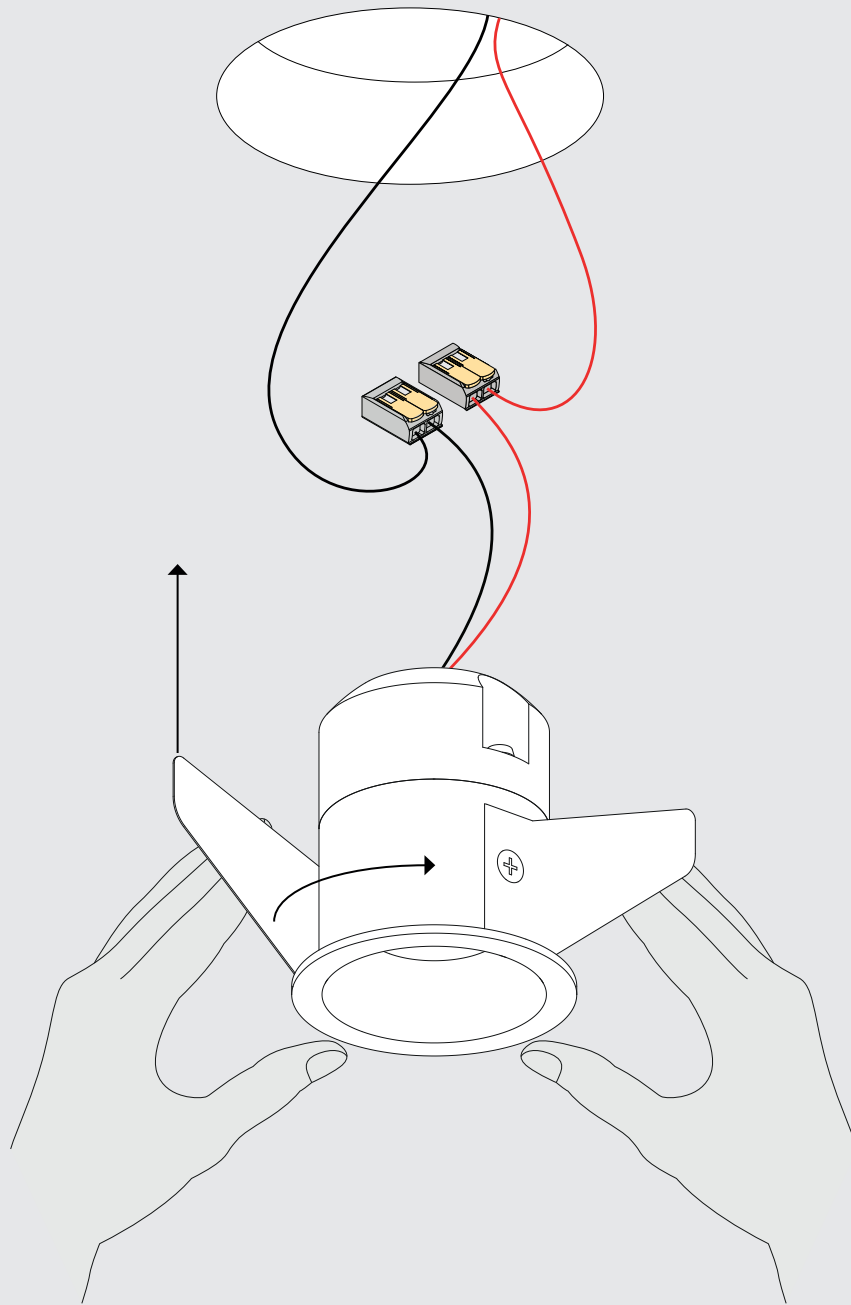


Bend over the springs and push the luminaire into the ceiling.

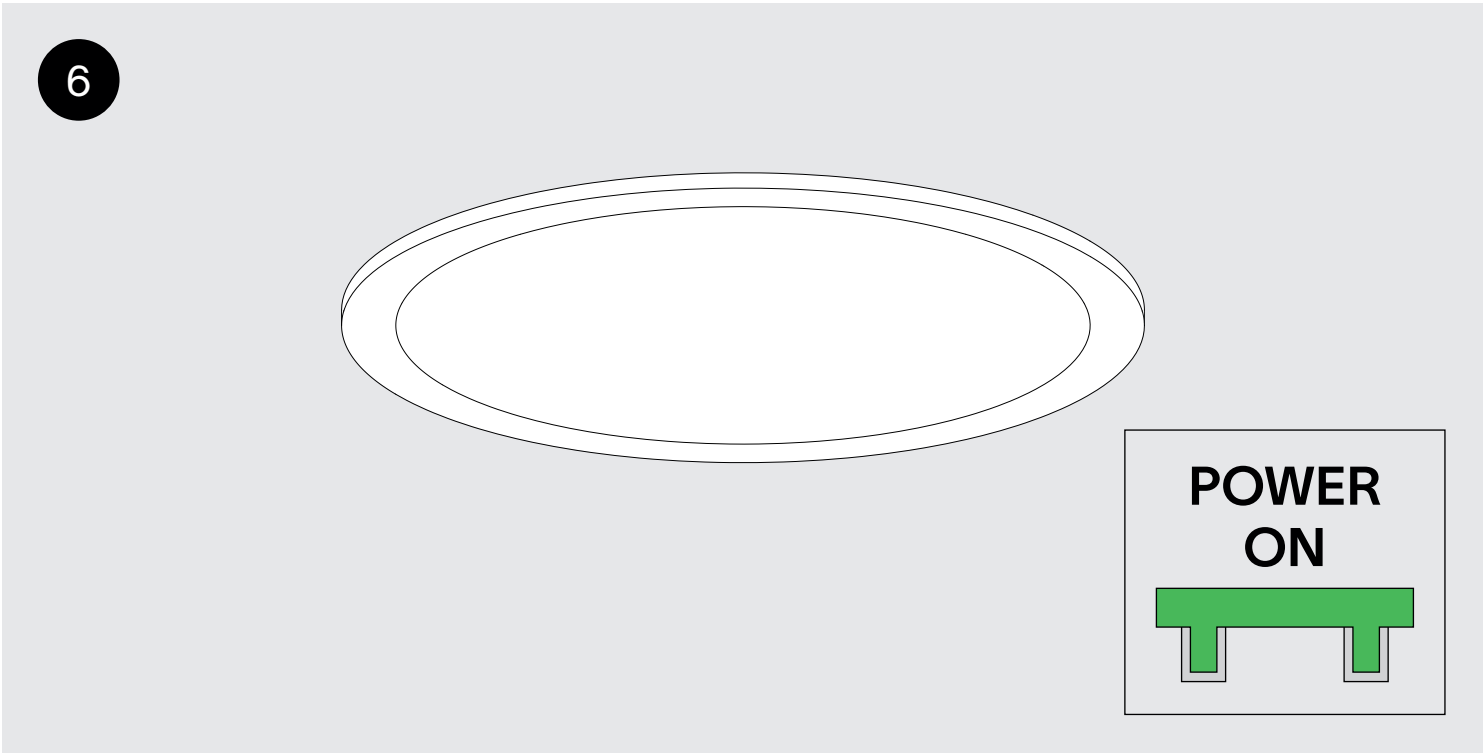

Turn the power back on.

thank you for choosing prado



		Replace glass lense when broken. Luminaire shall only be used together with glass lens.
---	---	--

Installation must be done by skilled professionals only and instructions must be followed at all times. Warranty will not apply in case of wrongful use or if unskilled personnel attempts to repair a product.