



# acrobat mini trim


## installation instruction

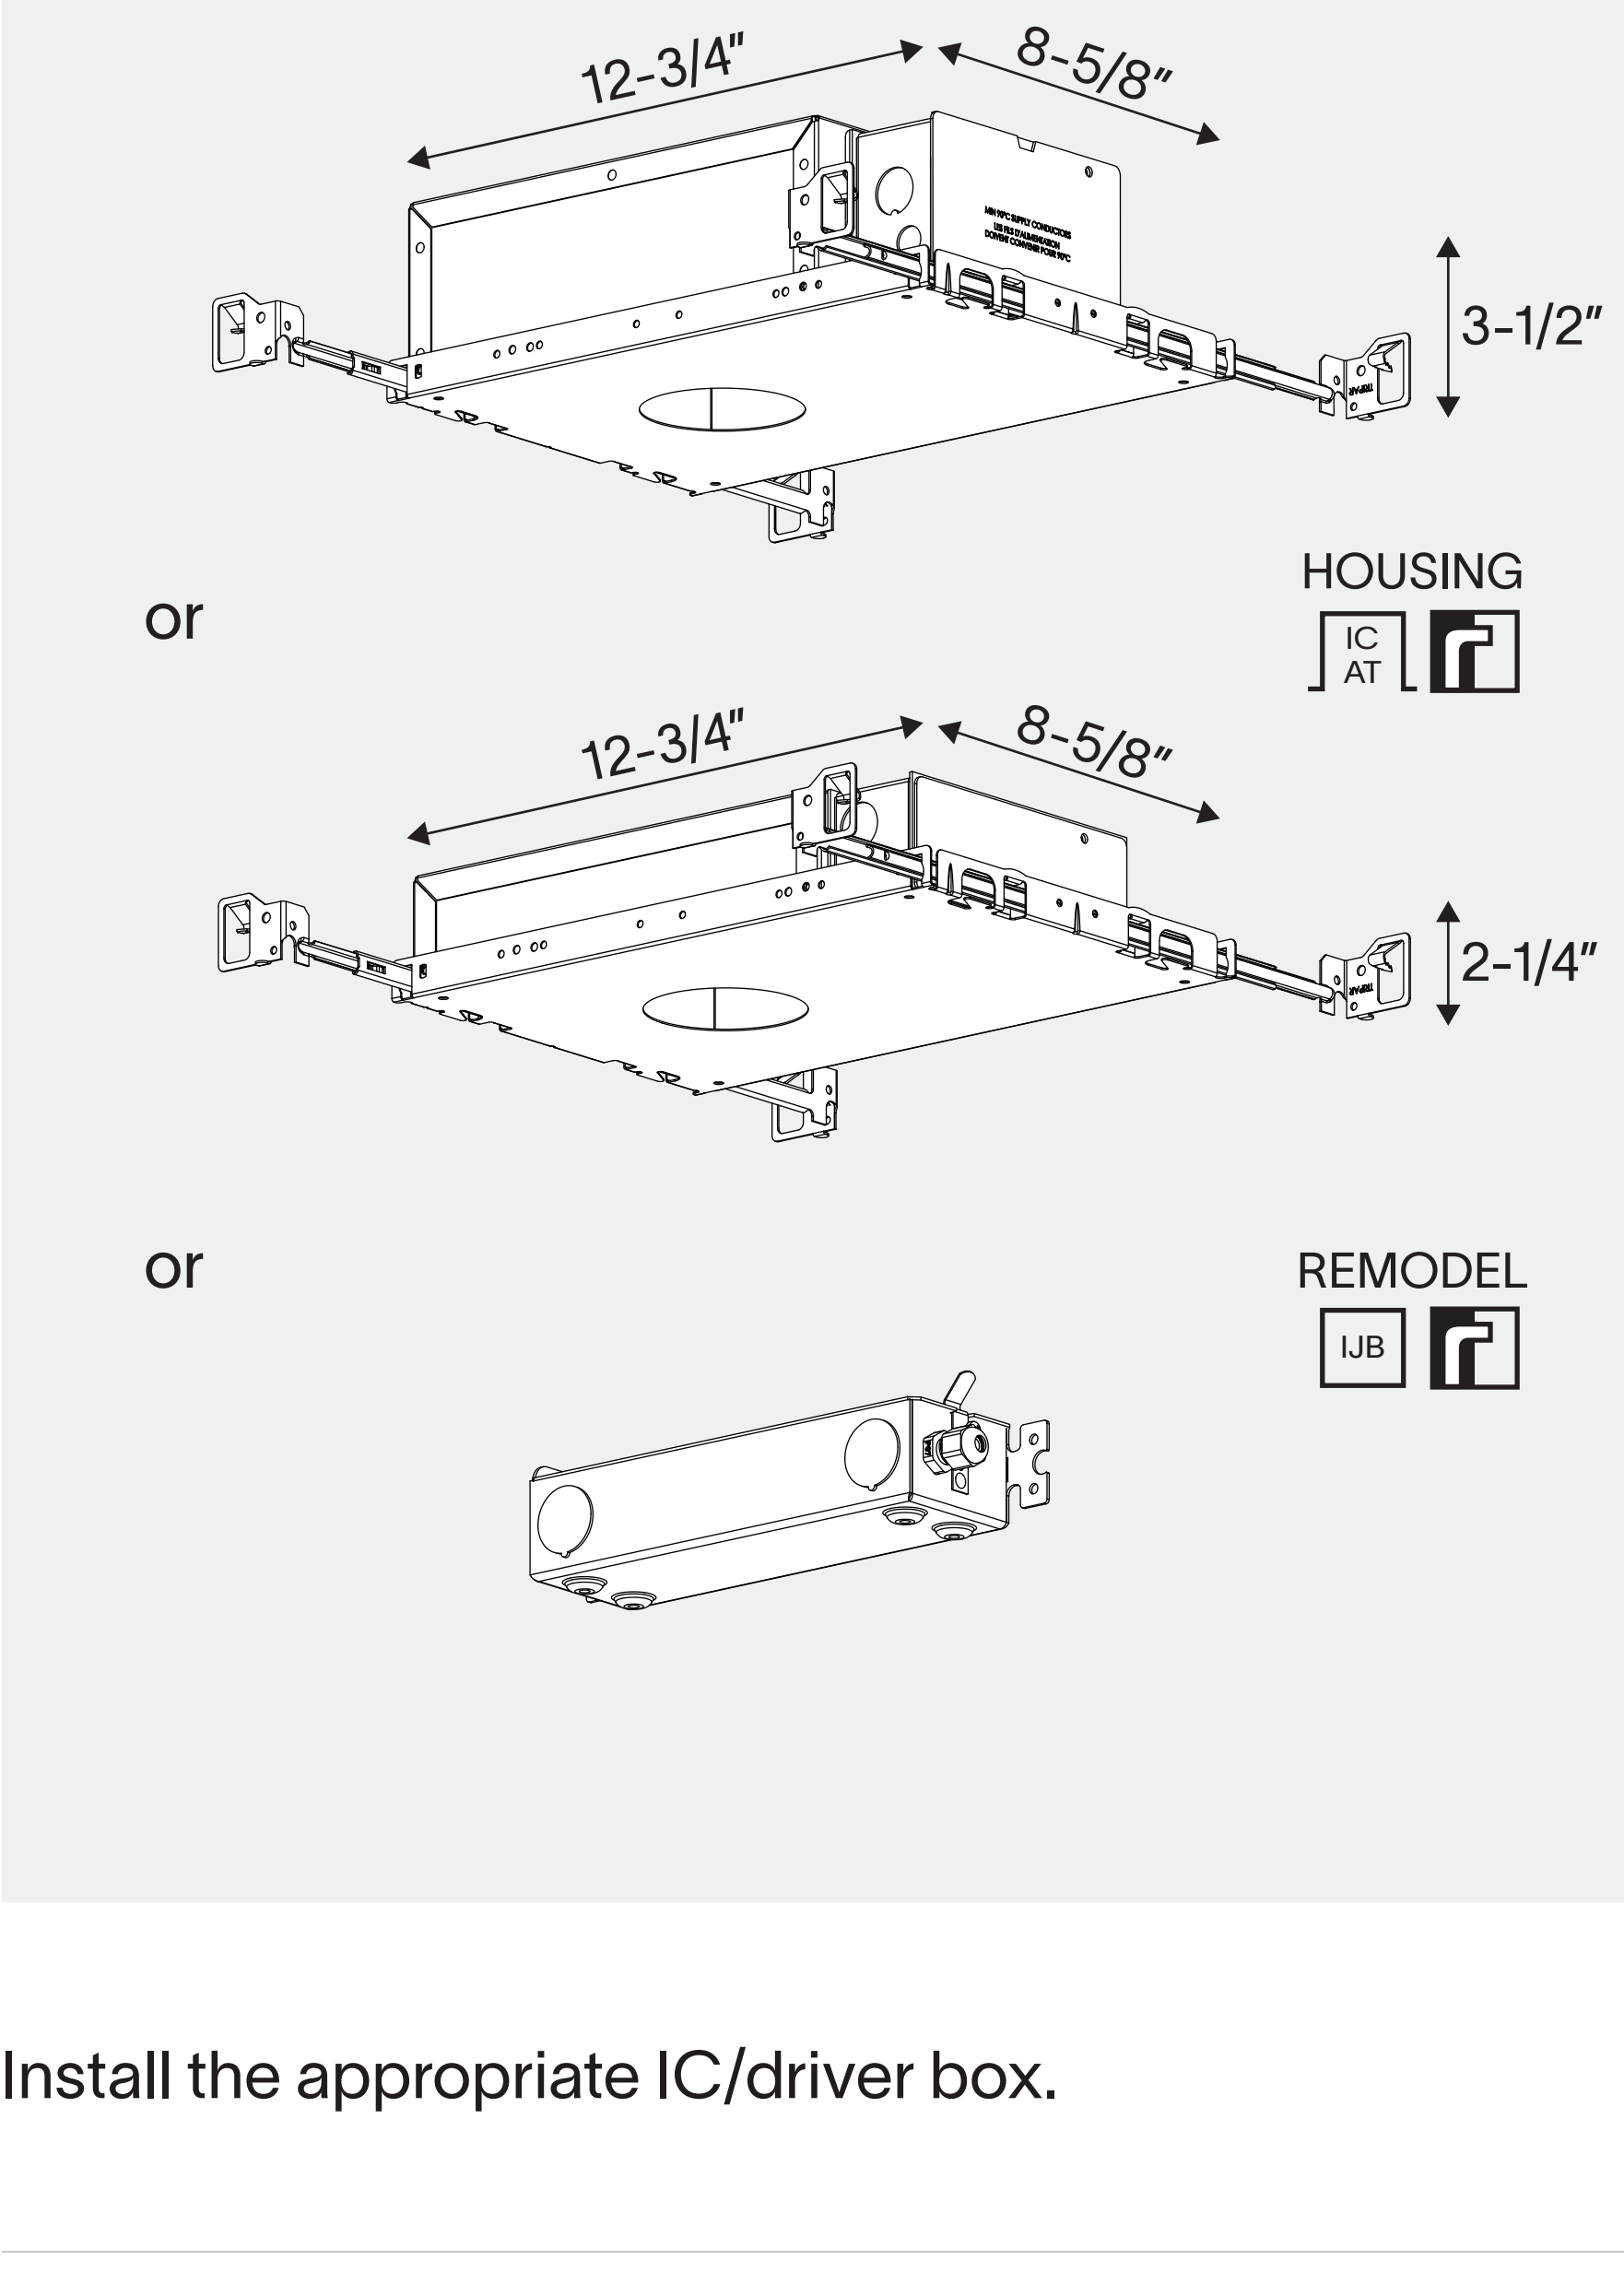


Install the appropriate IC/driver box.

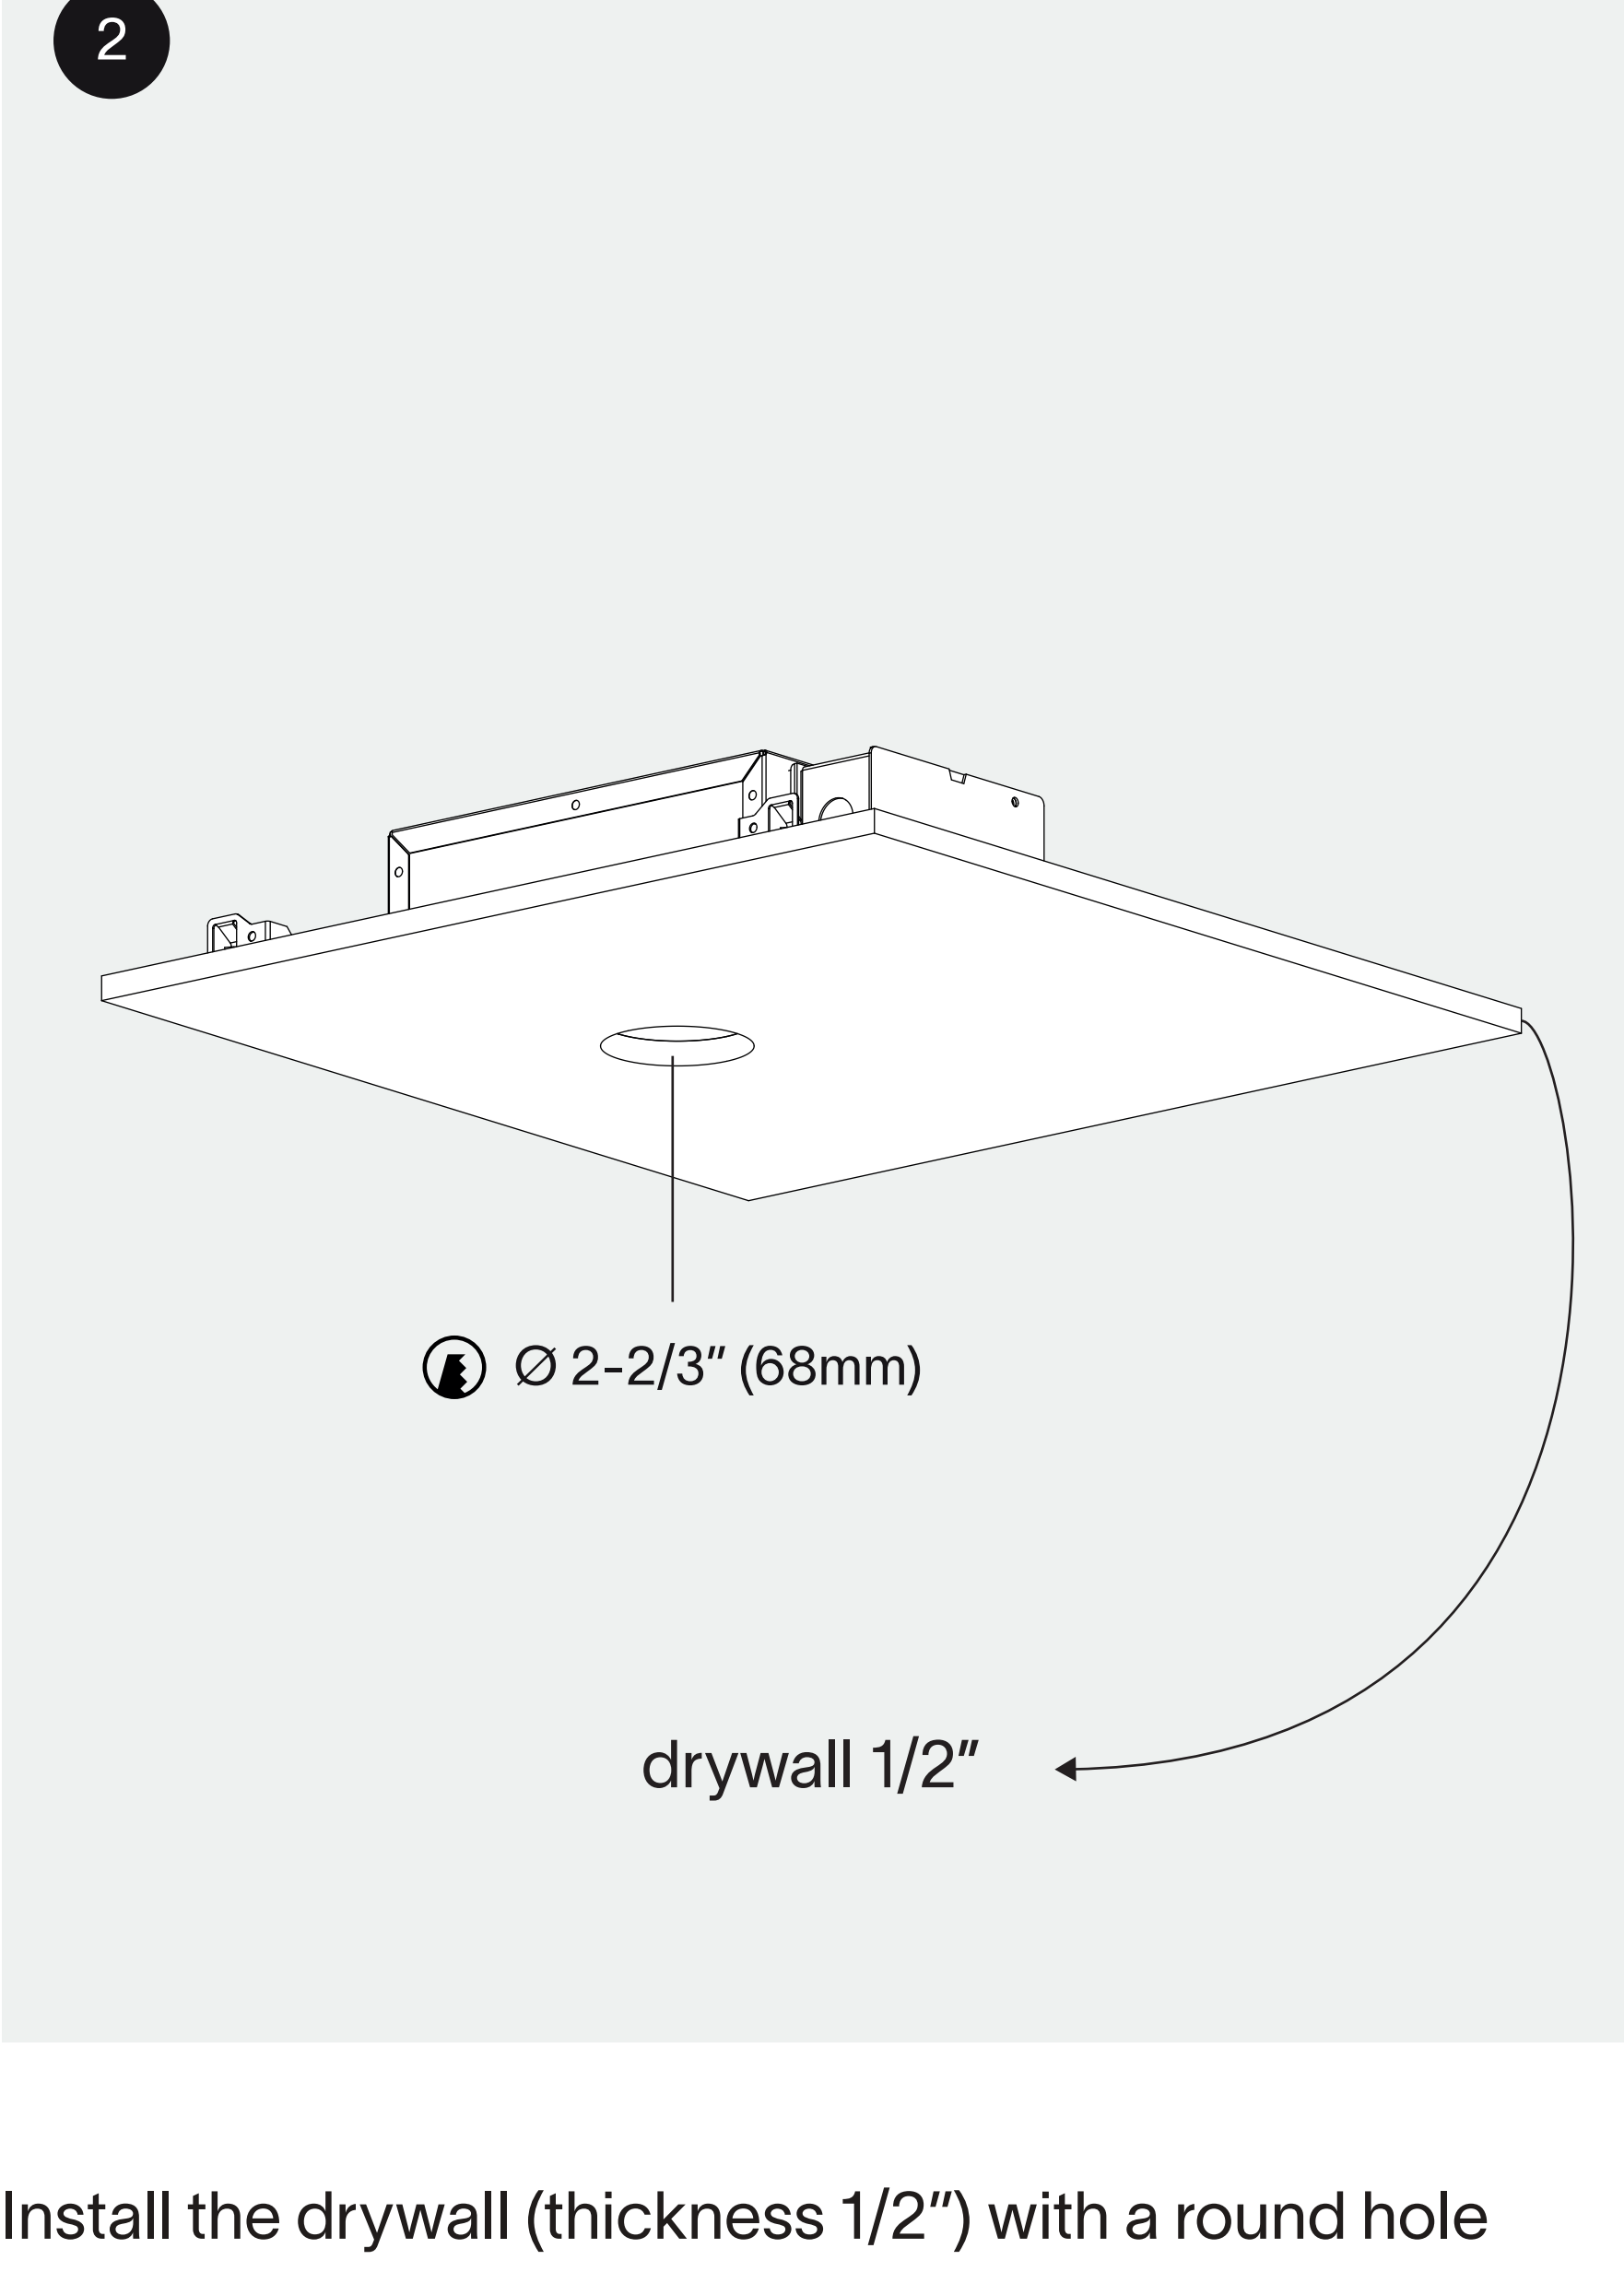


Install the drywall (thickness 1/2") with a round hole (Ø 2-2/3").

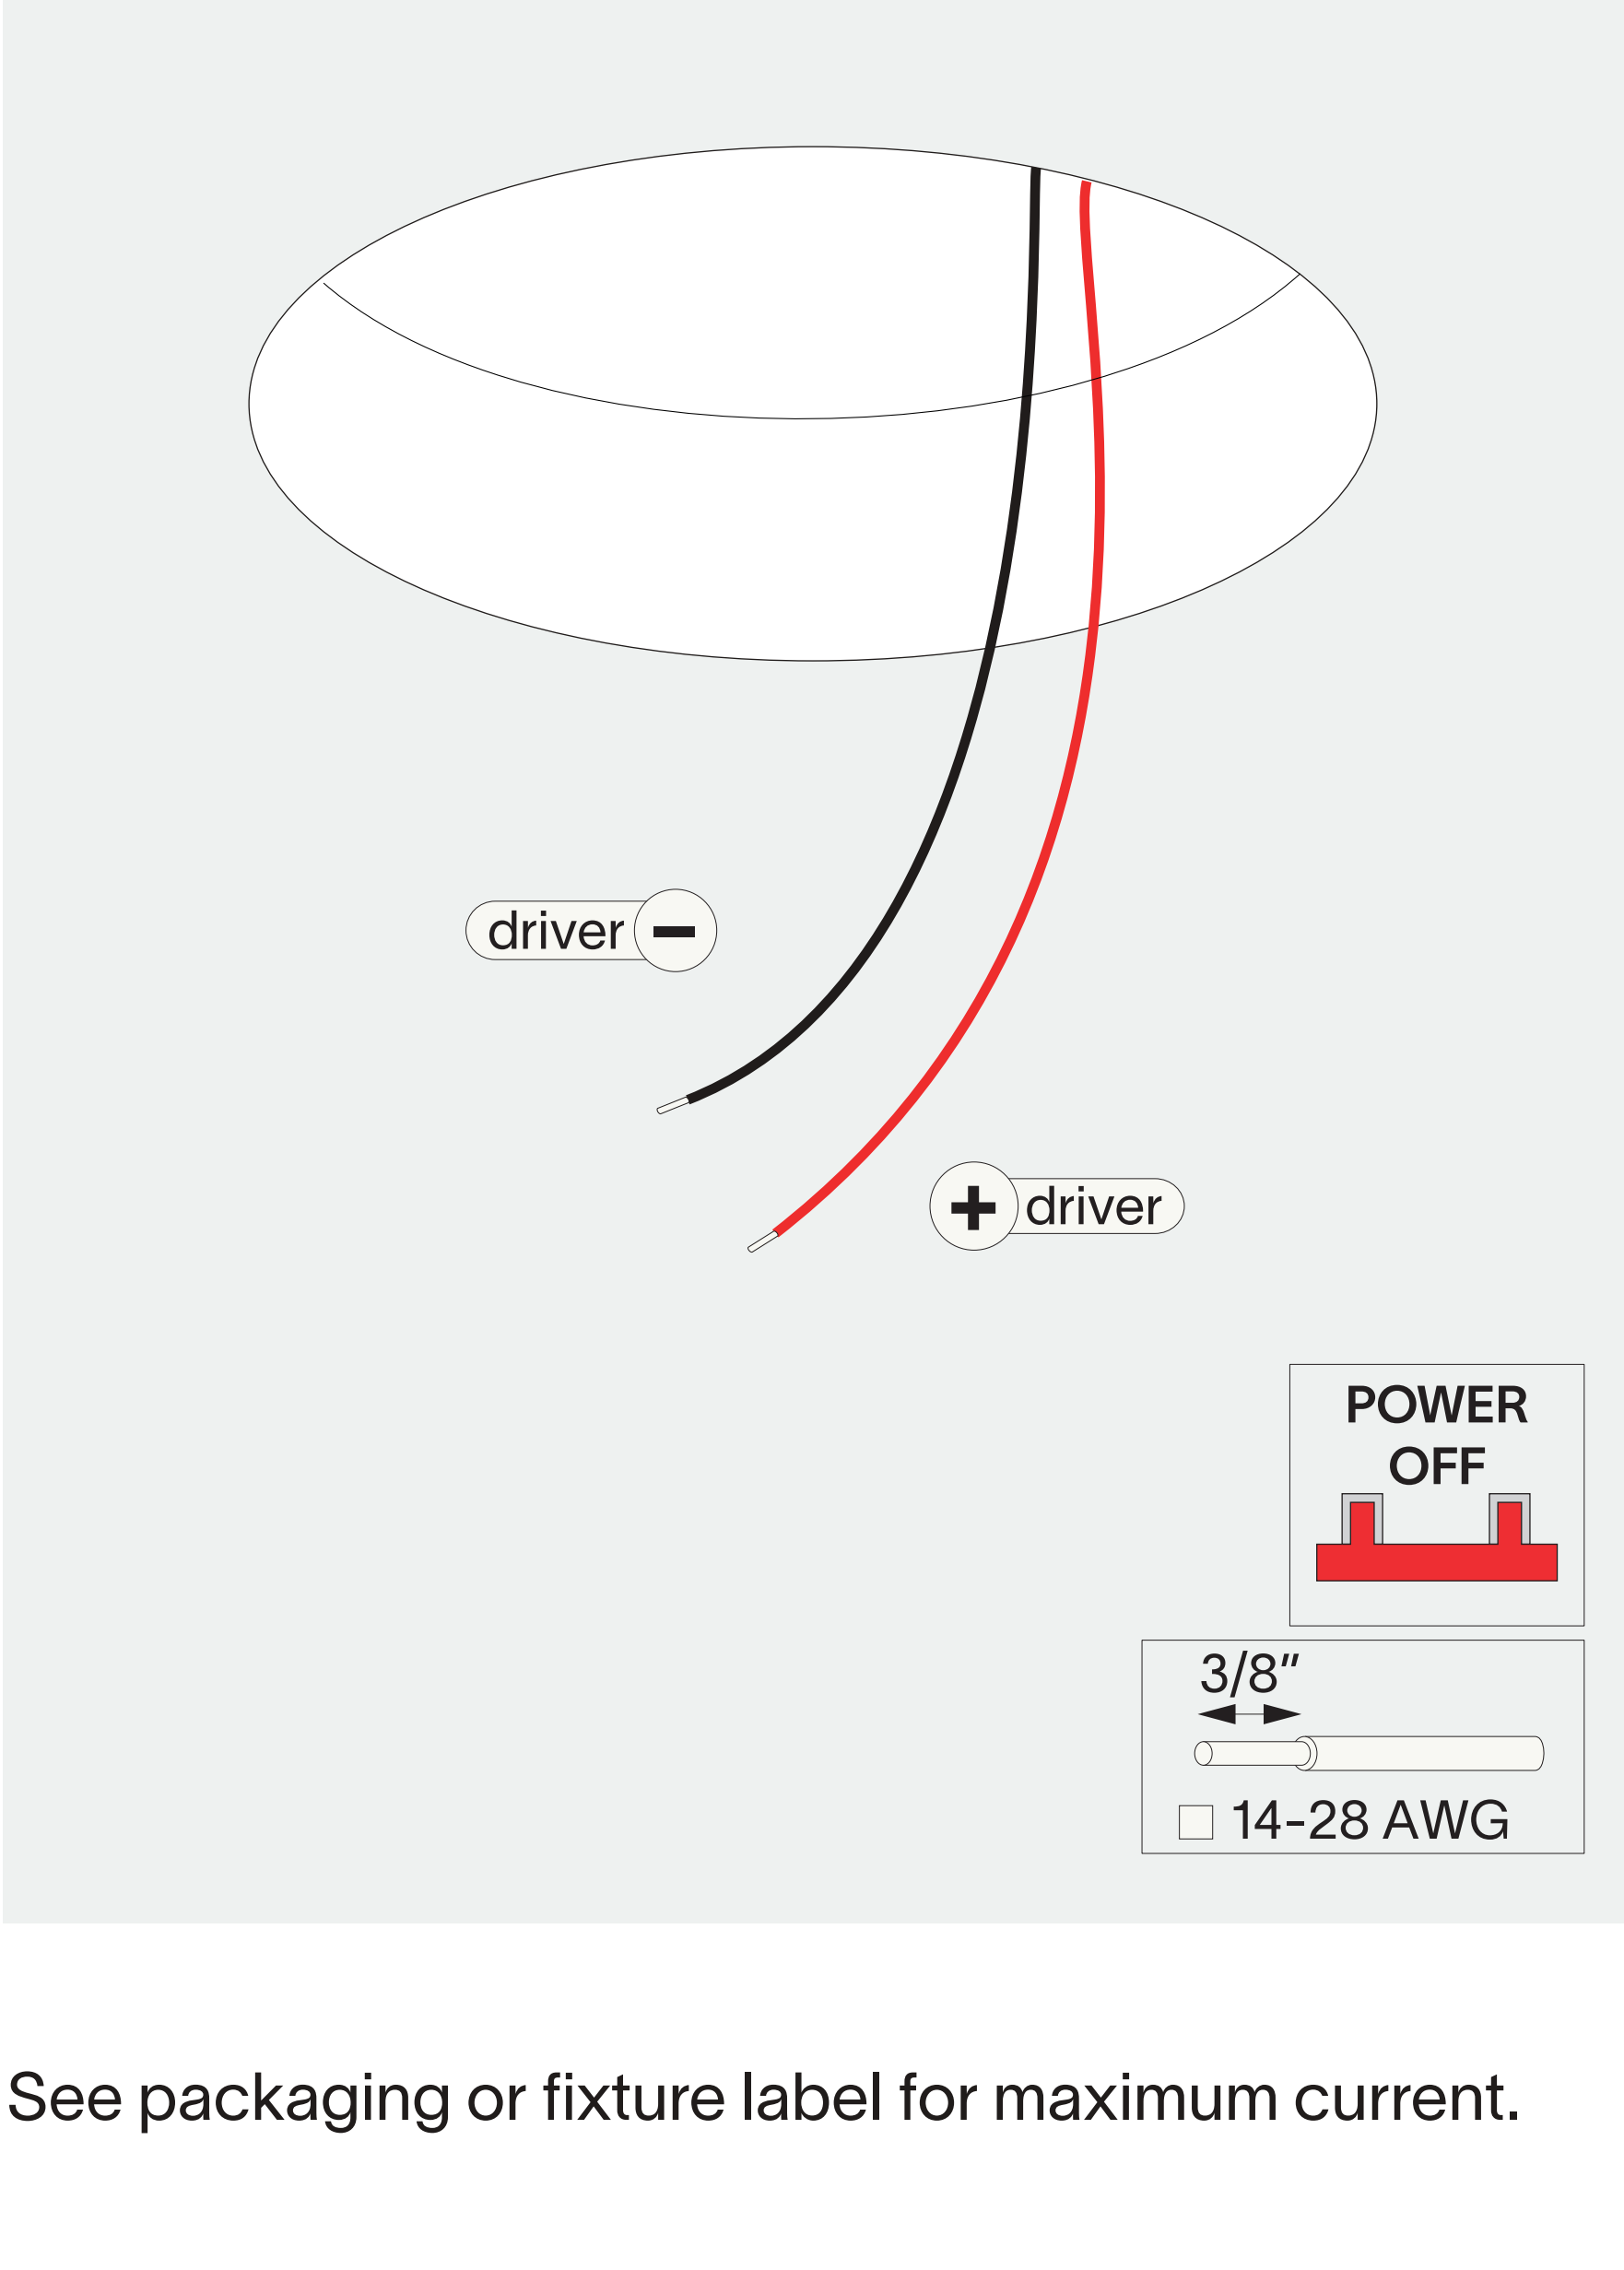


See packaging or fixture label for maximum current.

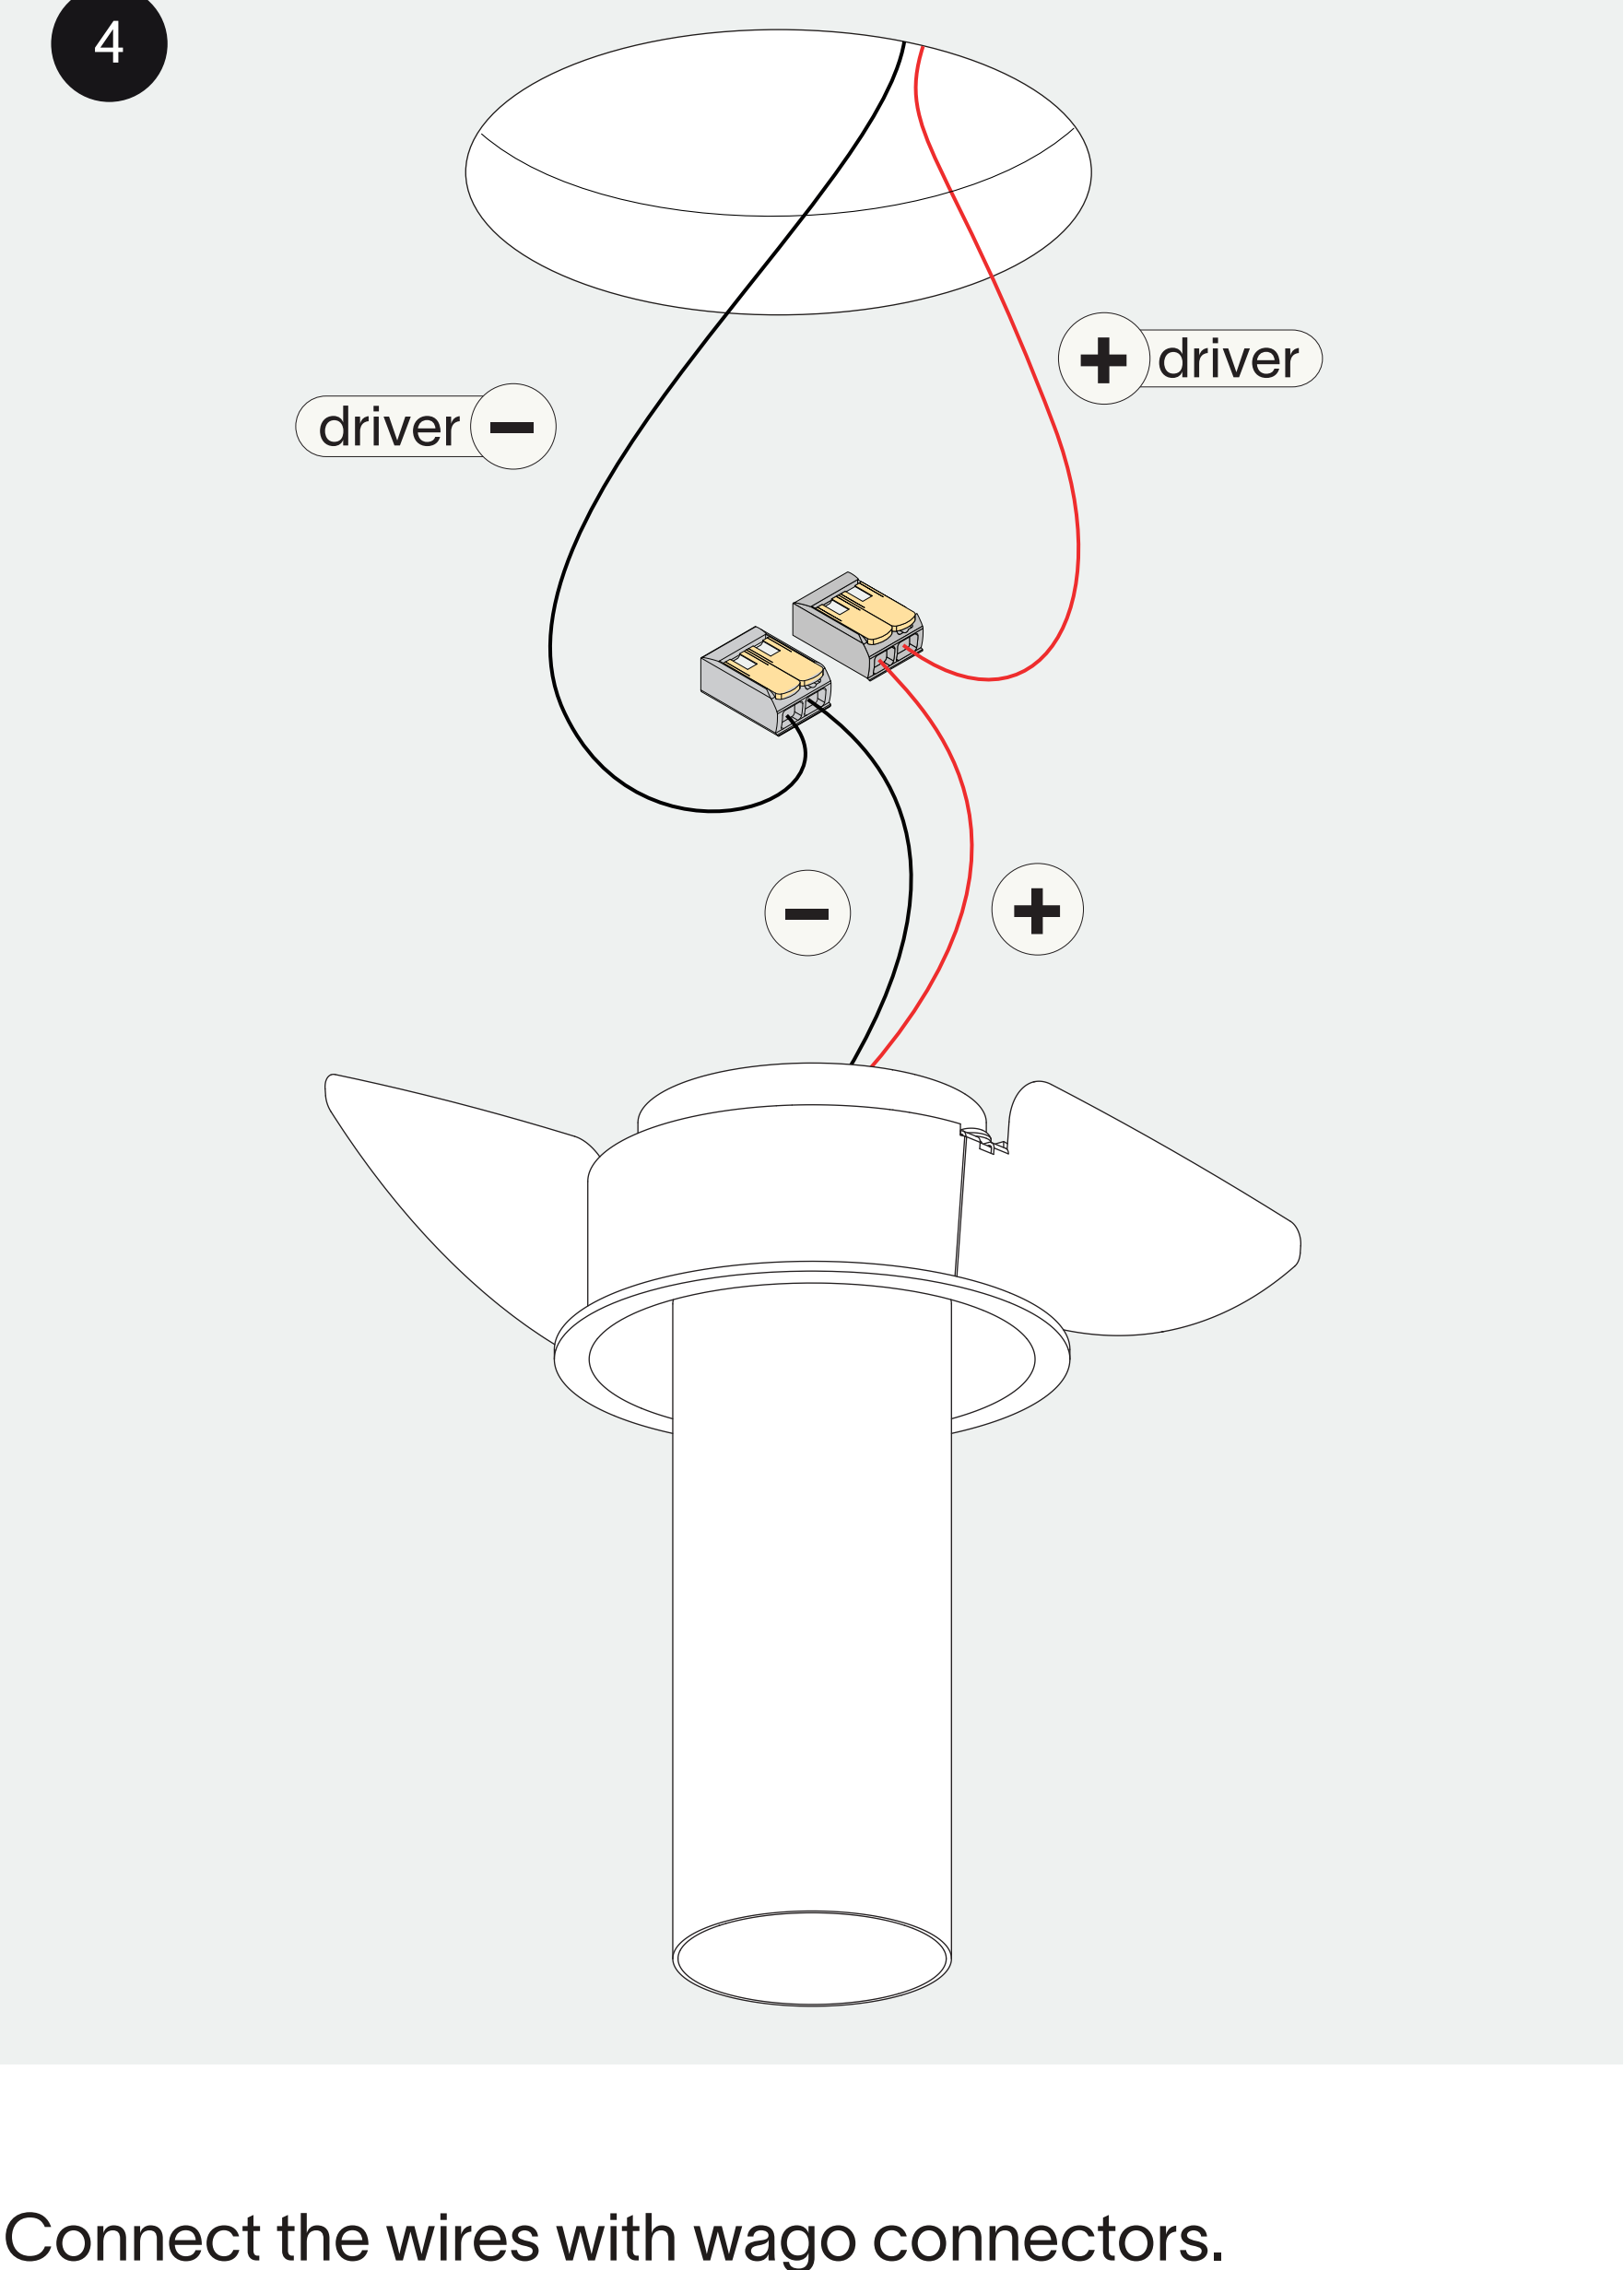

Connect the wires with wago connectors.  
For serial connection, respect polarity.  
Combine with a prado LED-driver.

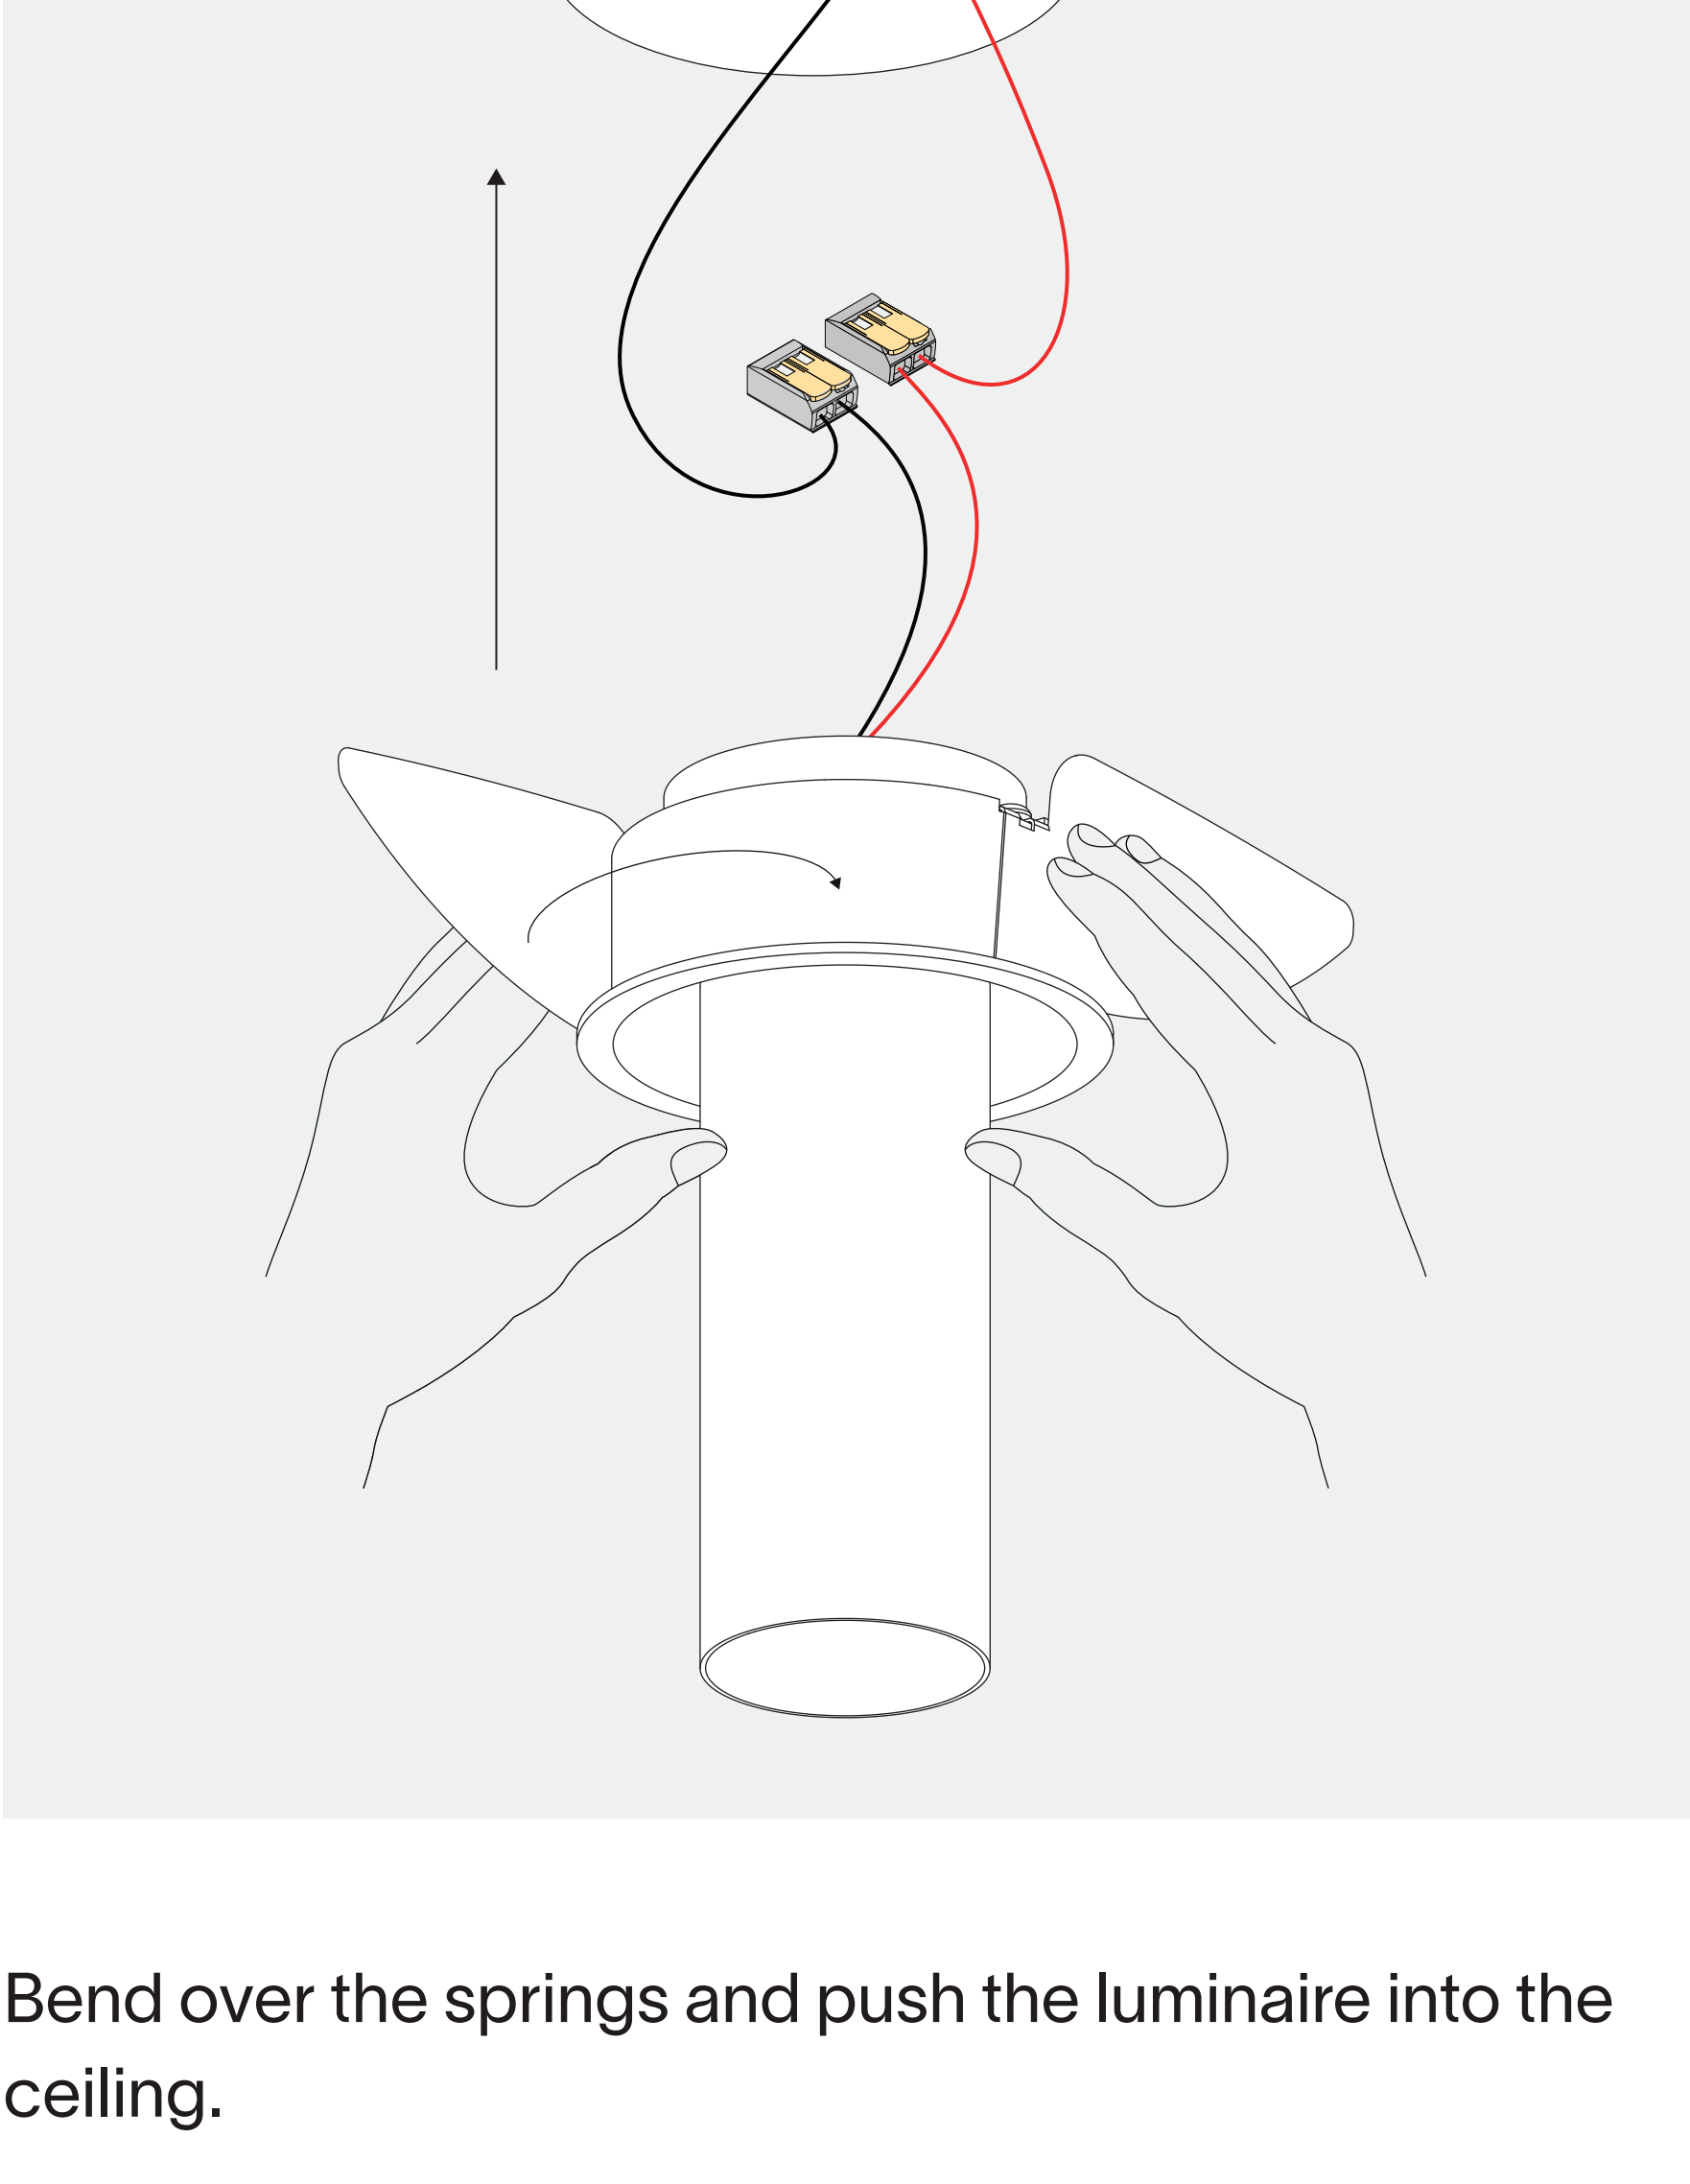

Bend over the springs and push the luminaire into the ceiling.

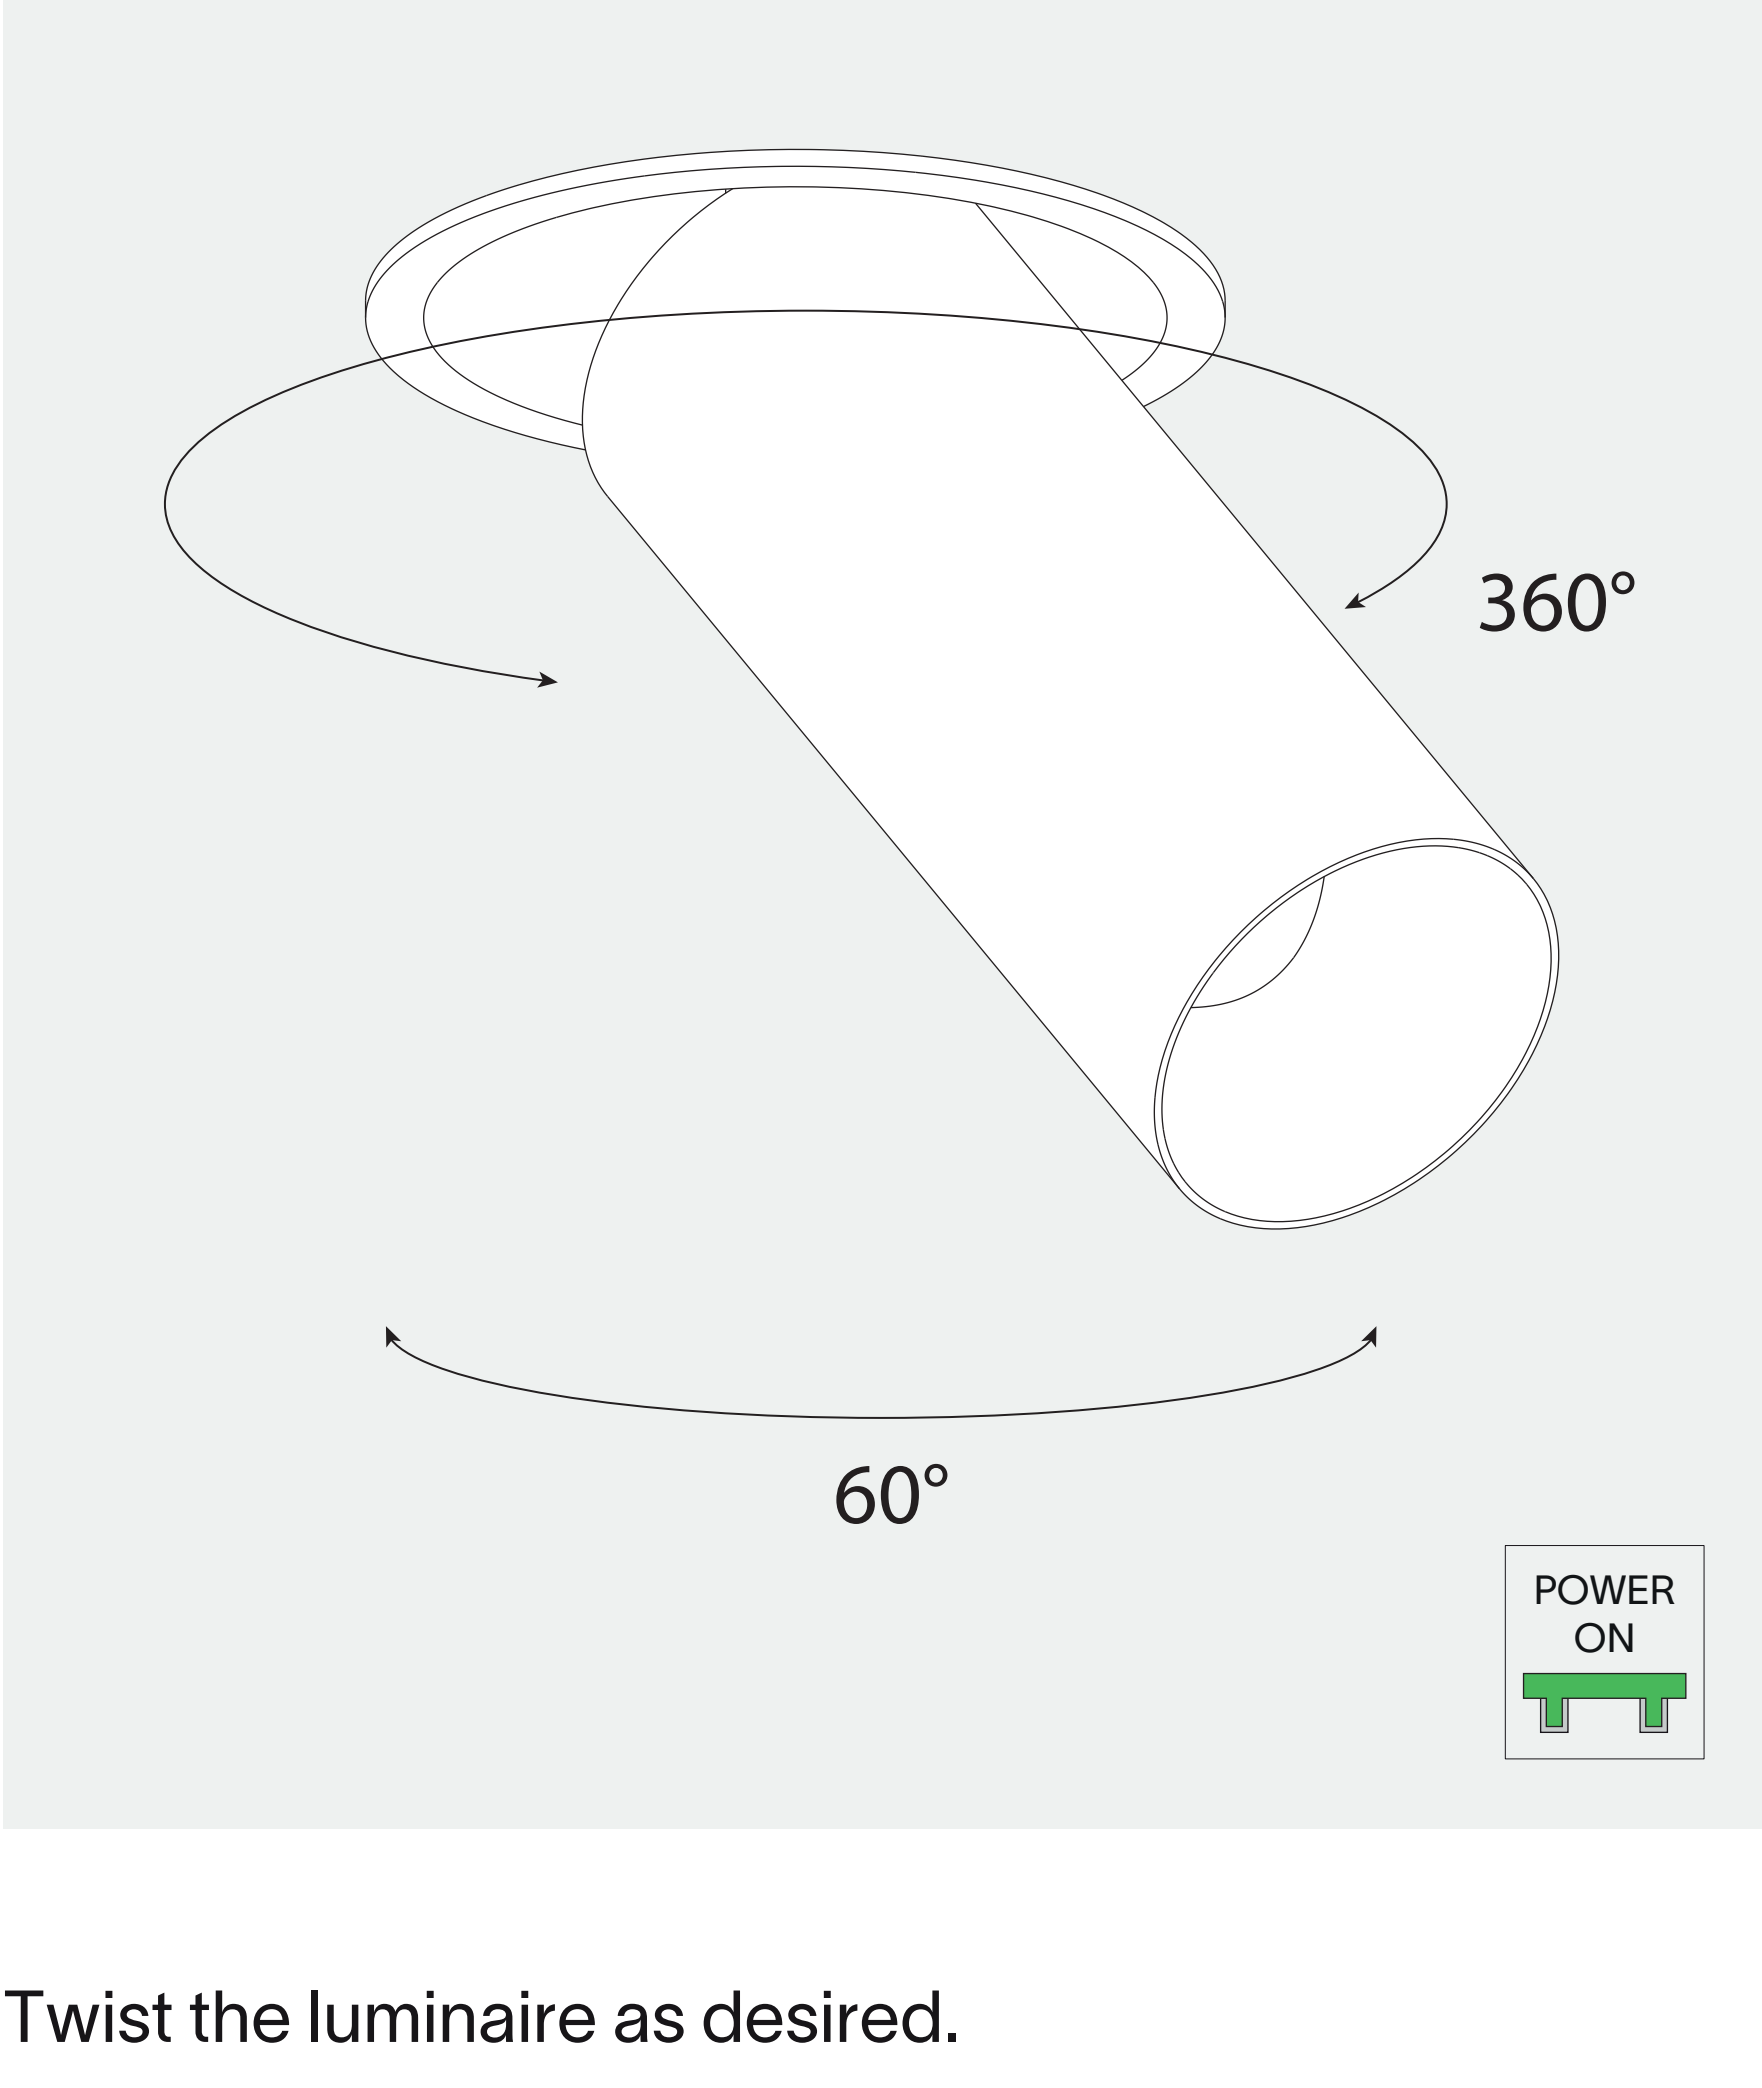

Twist the luminaire as desired.  
Thank you for choosing prado.