


acrobat mini


installation instruction

1

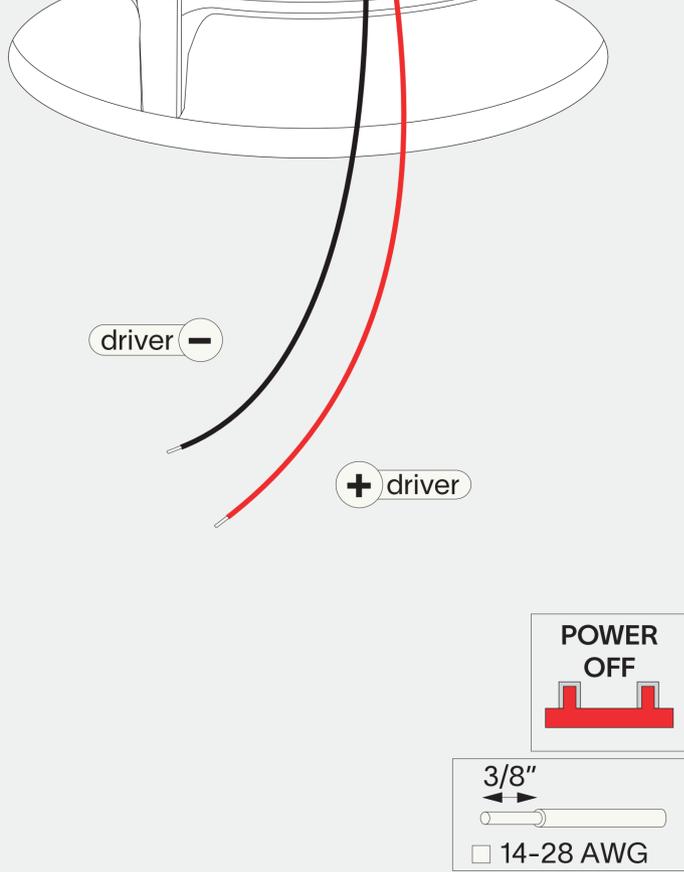


See packaging or fixture label for maximum current.

2

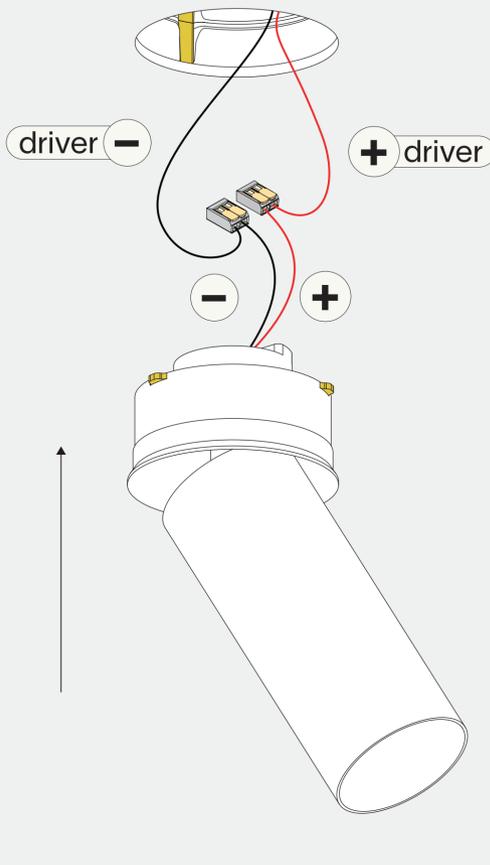


Connect the wires with wago connectors.
For serial connection, respect polarity.
Combine with a prado LED-driver.

3

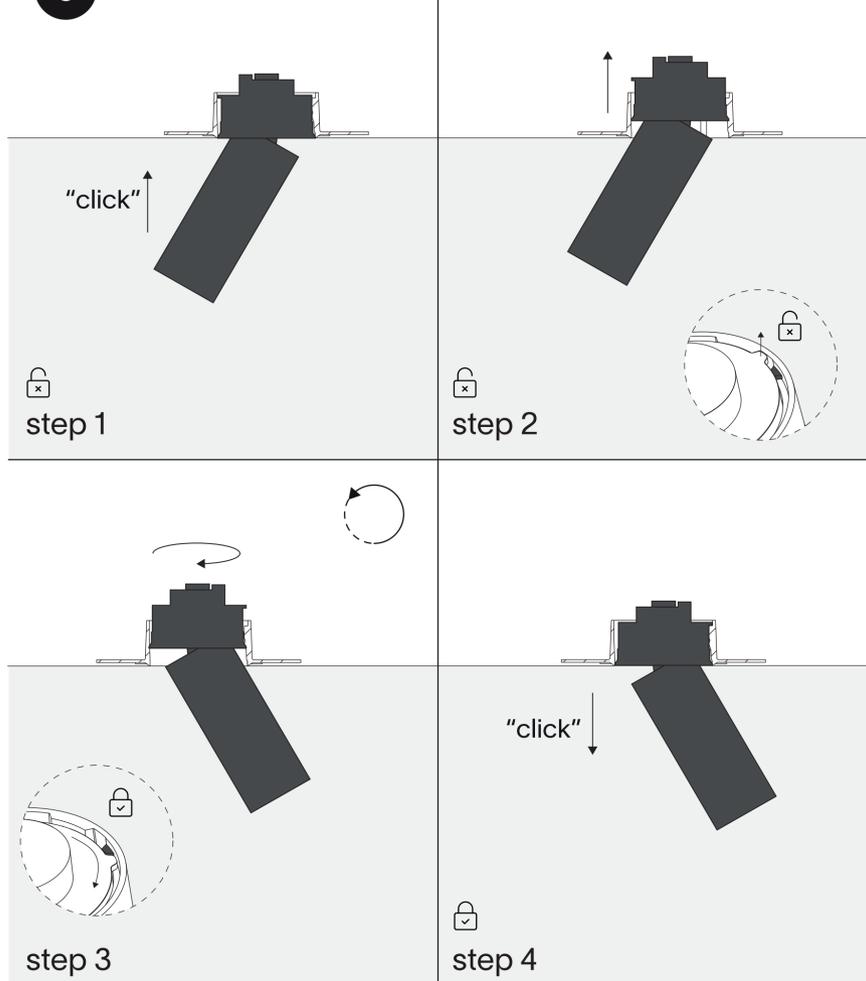

Insert the luminaire into the ceiling until it "clicks".
Push the luminaire a little further and twist it to lock it.
Gently pull the luminaire down again. Now it's locked.

4

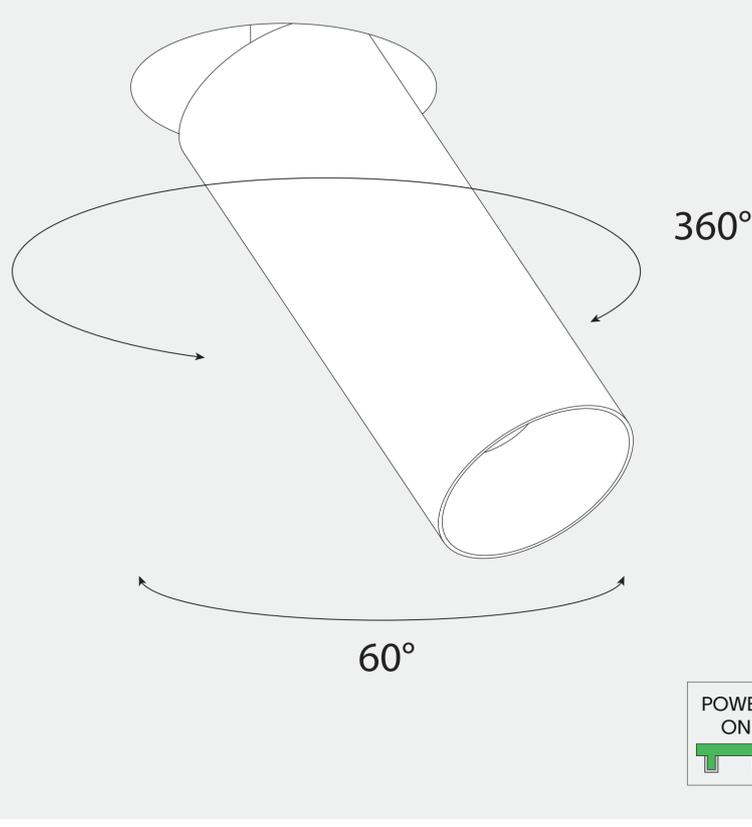

Twist the luminaire as desired.

Thank you for choosing prado



Replace lens when broken.
Luminaire shall only be used together with lens.