



# trimless spot mini


## installation instruction

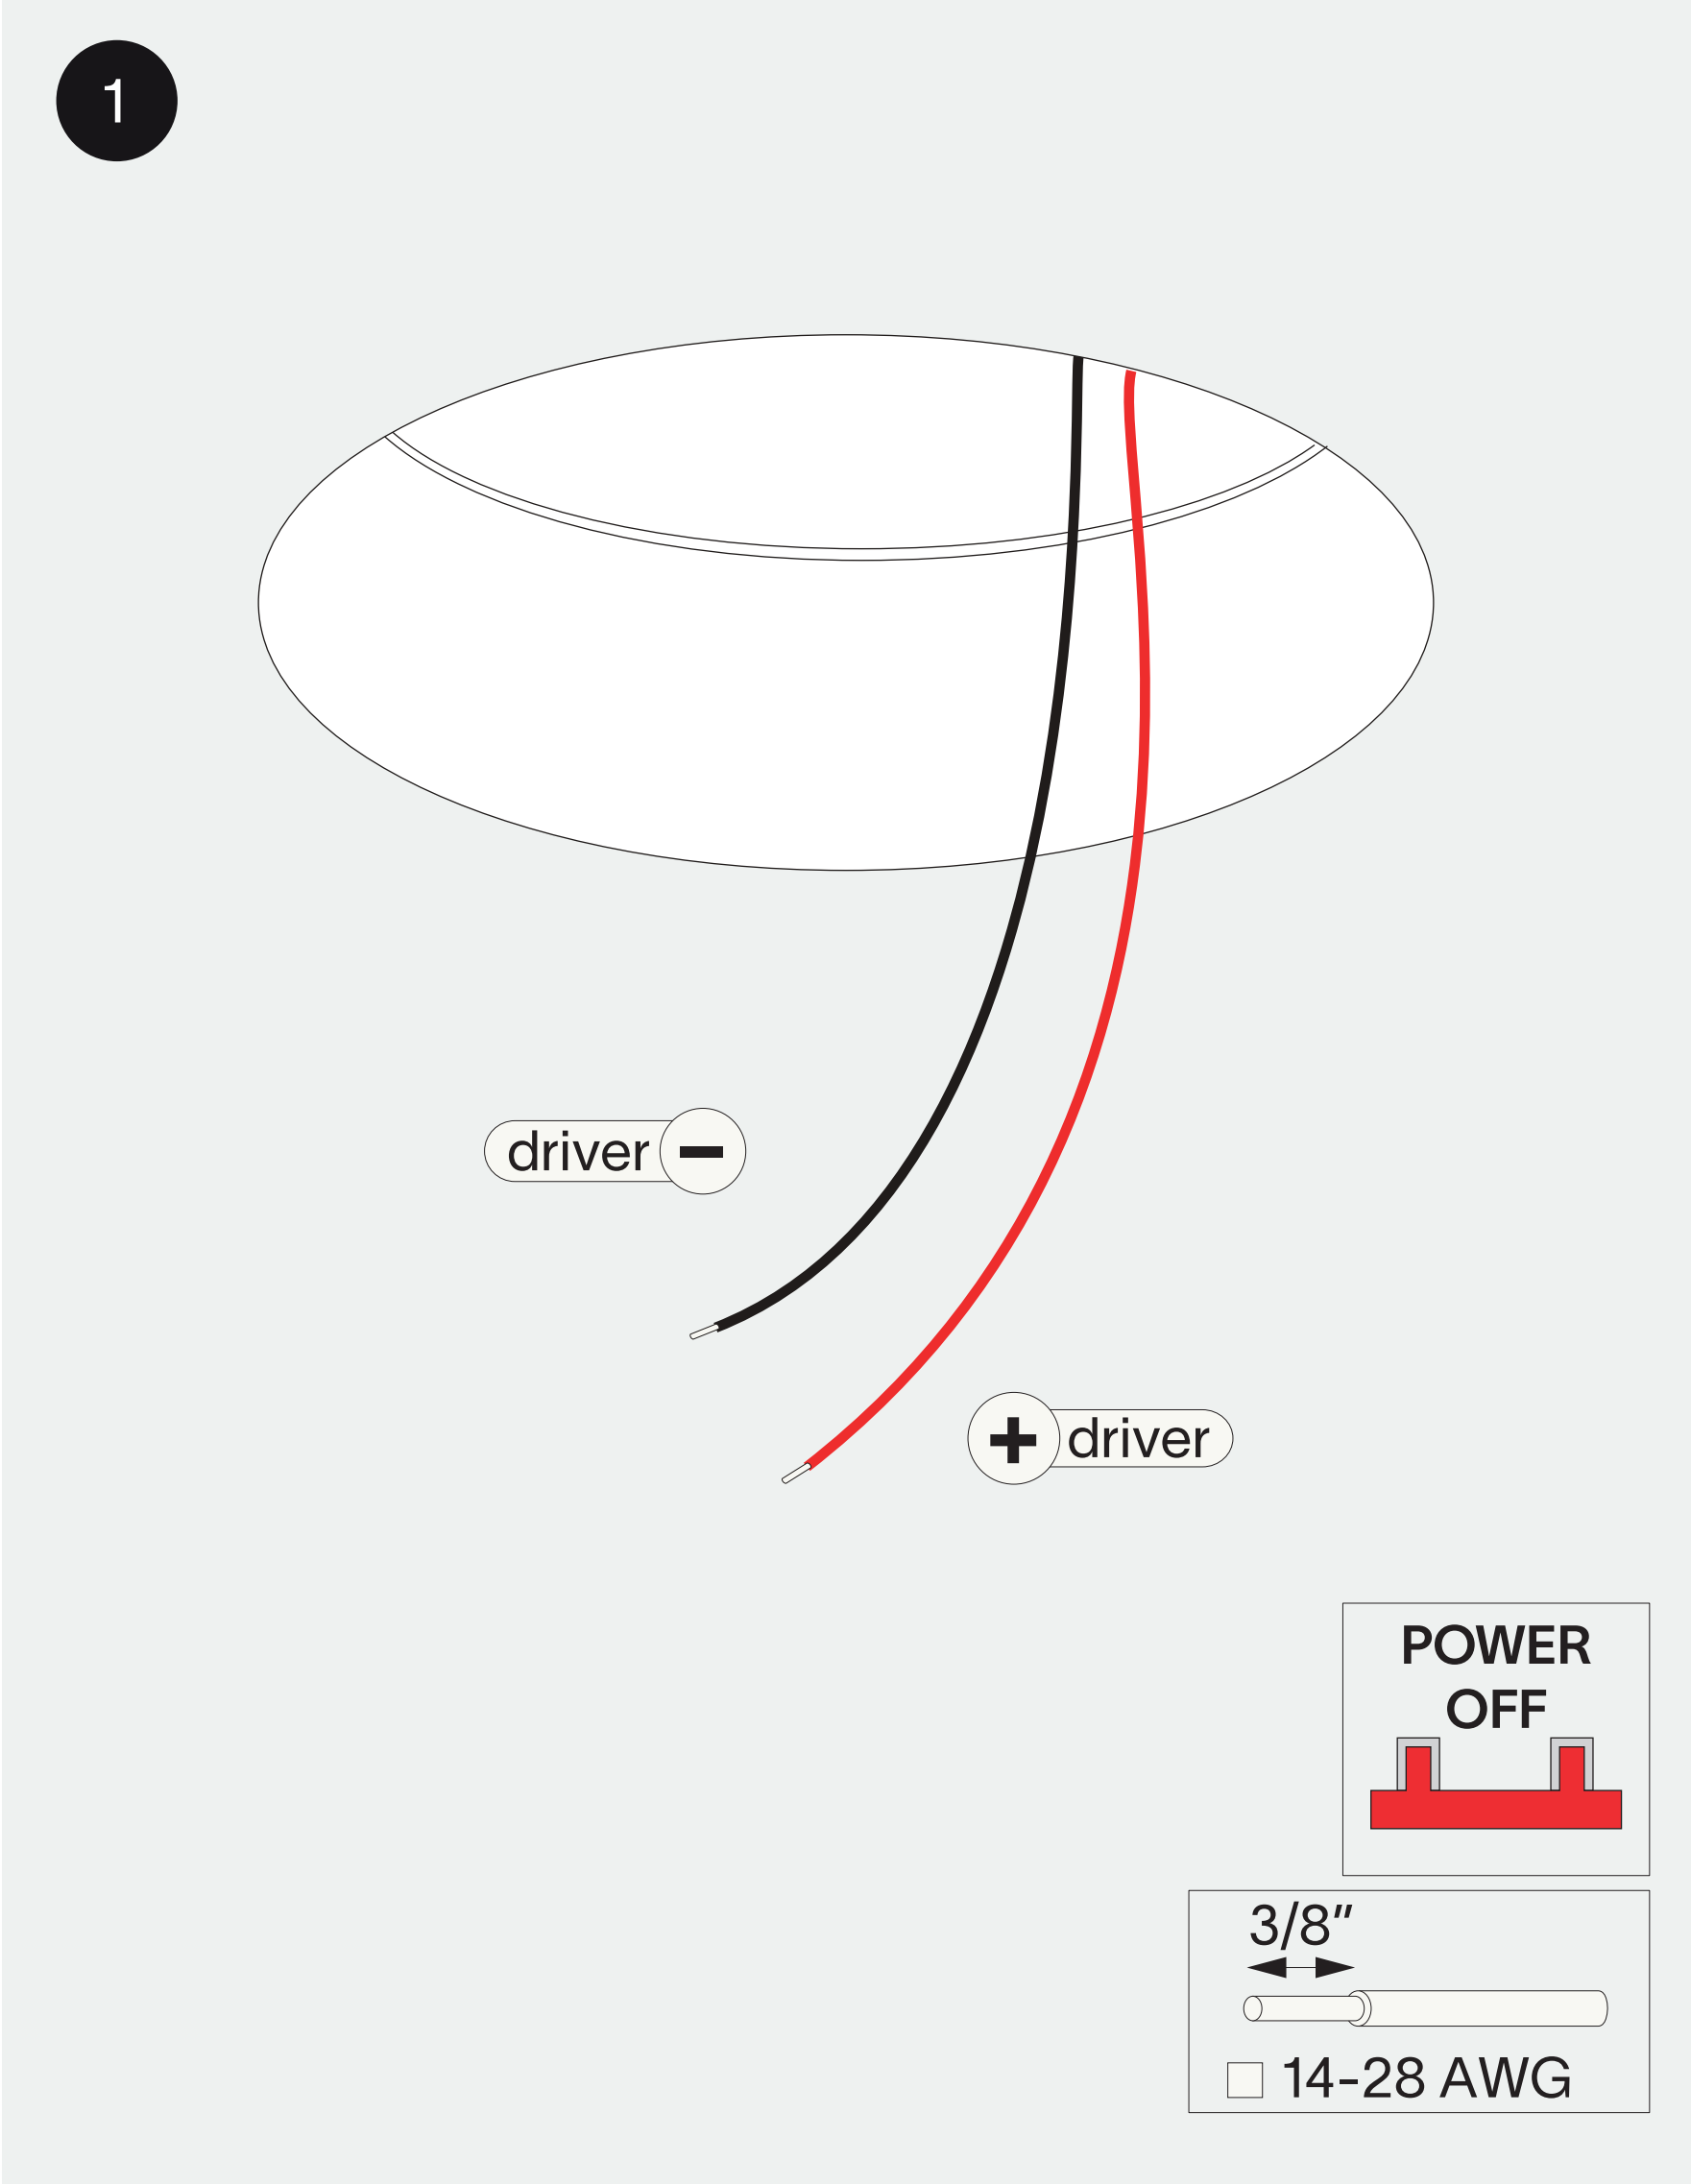

See packaging or fixture label for maximum current.

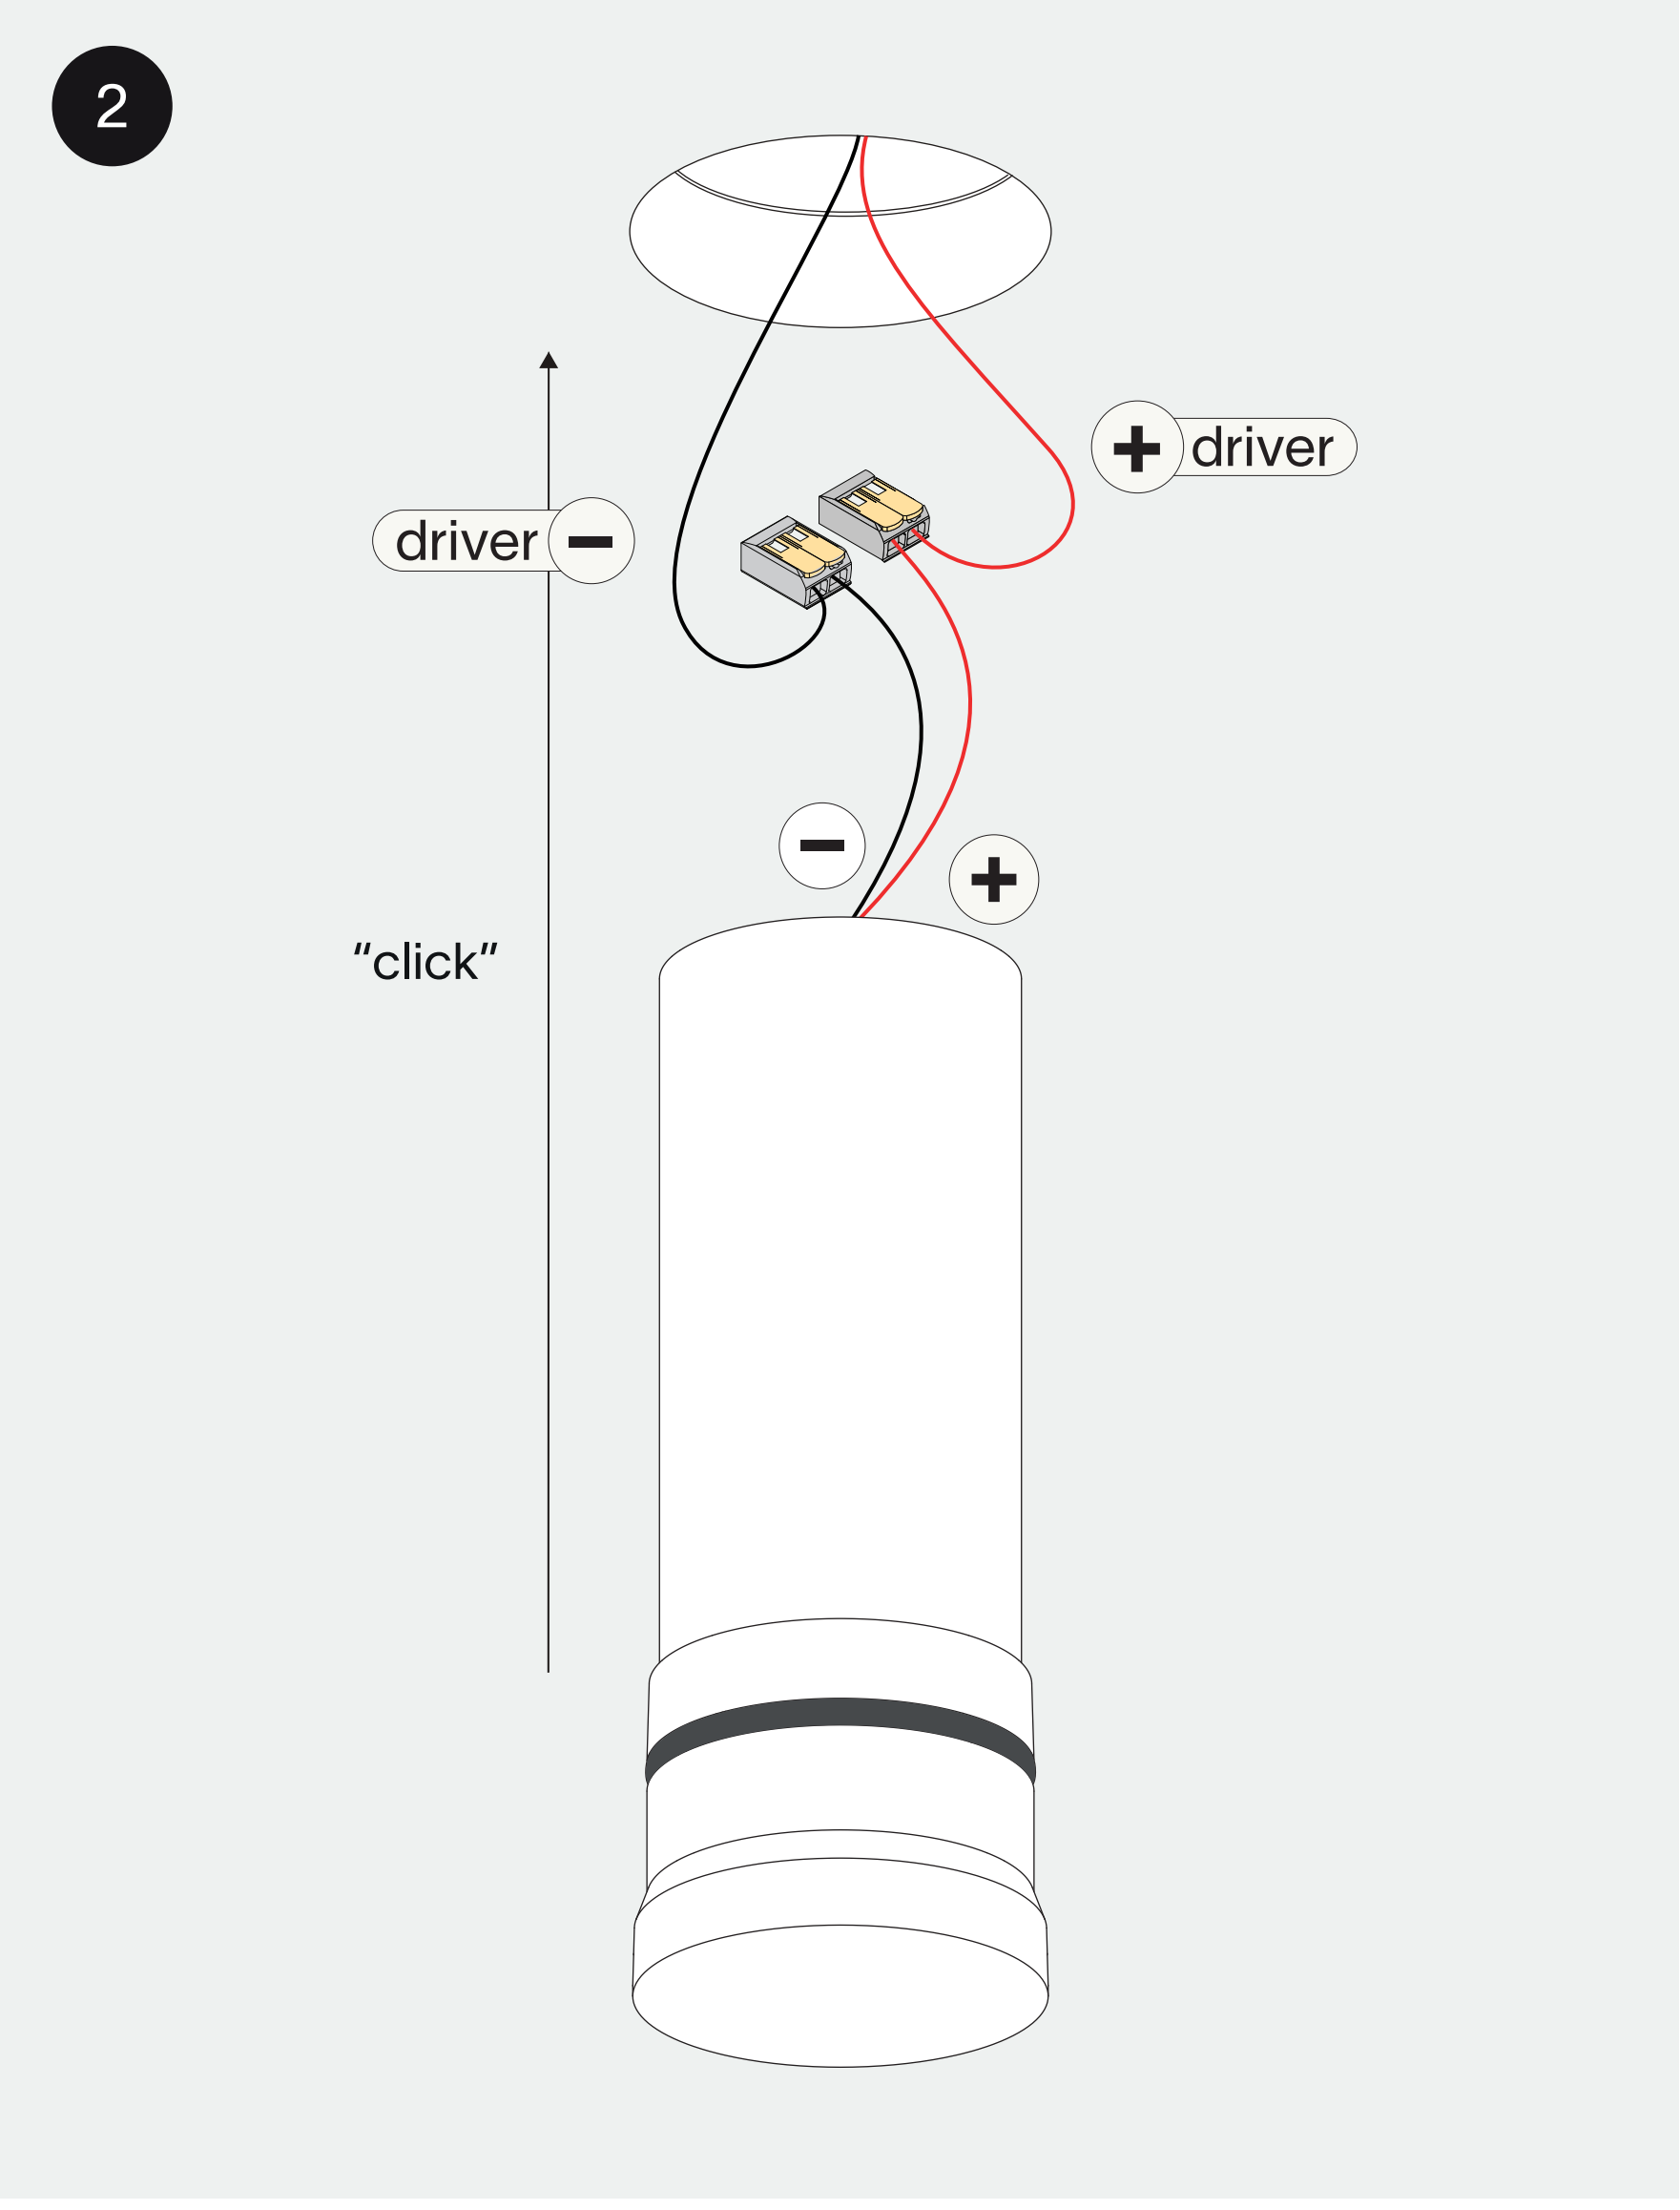

Connect the wires with wago connectors.  
For serial connection, respect polarity.  
Combine with a prado LED-driver.

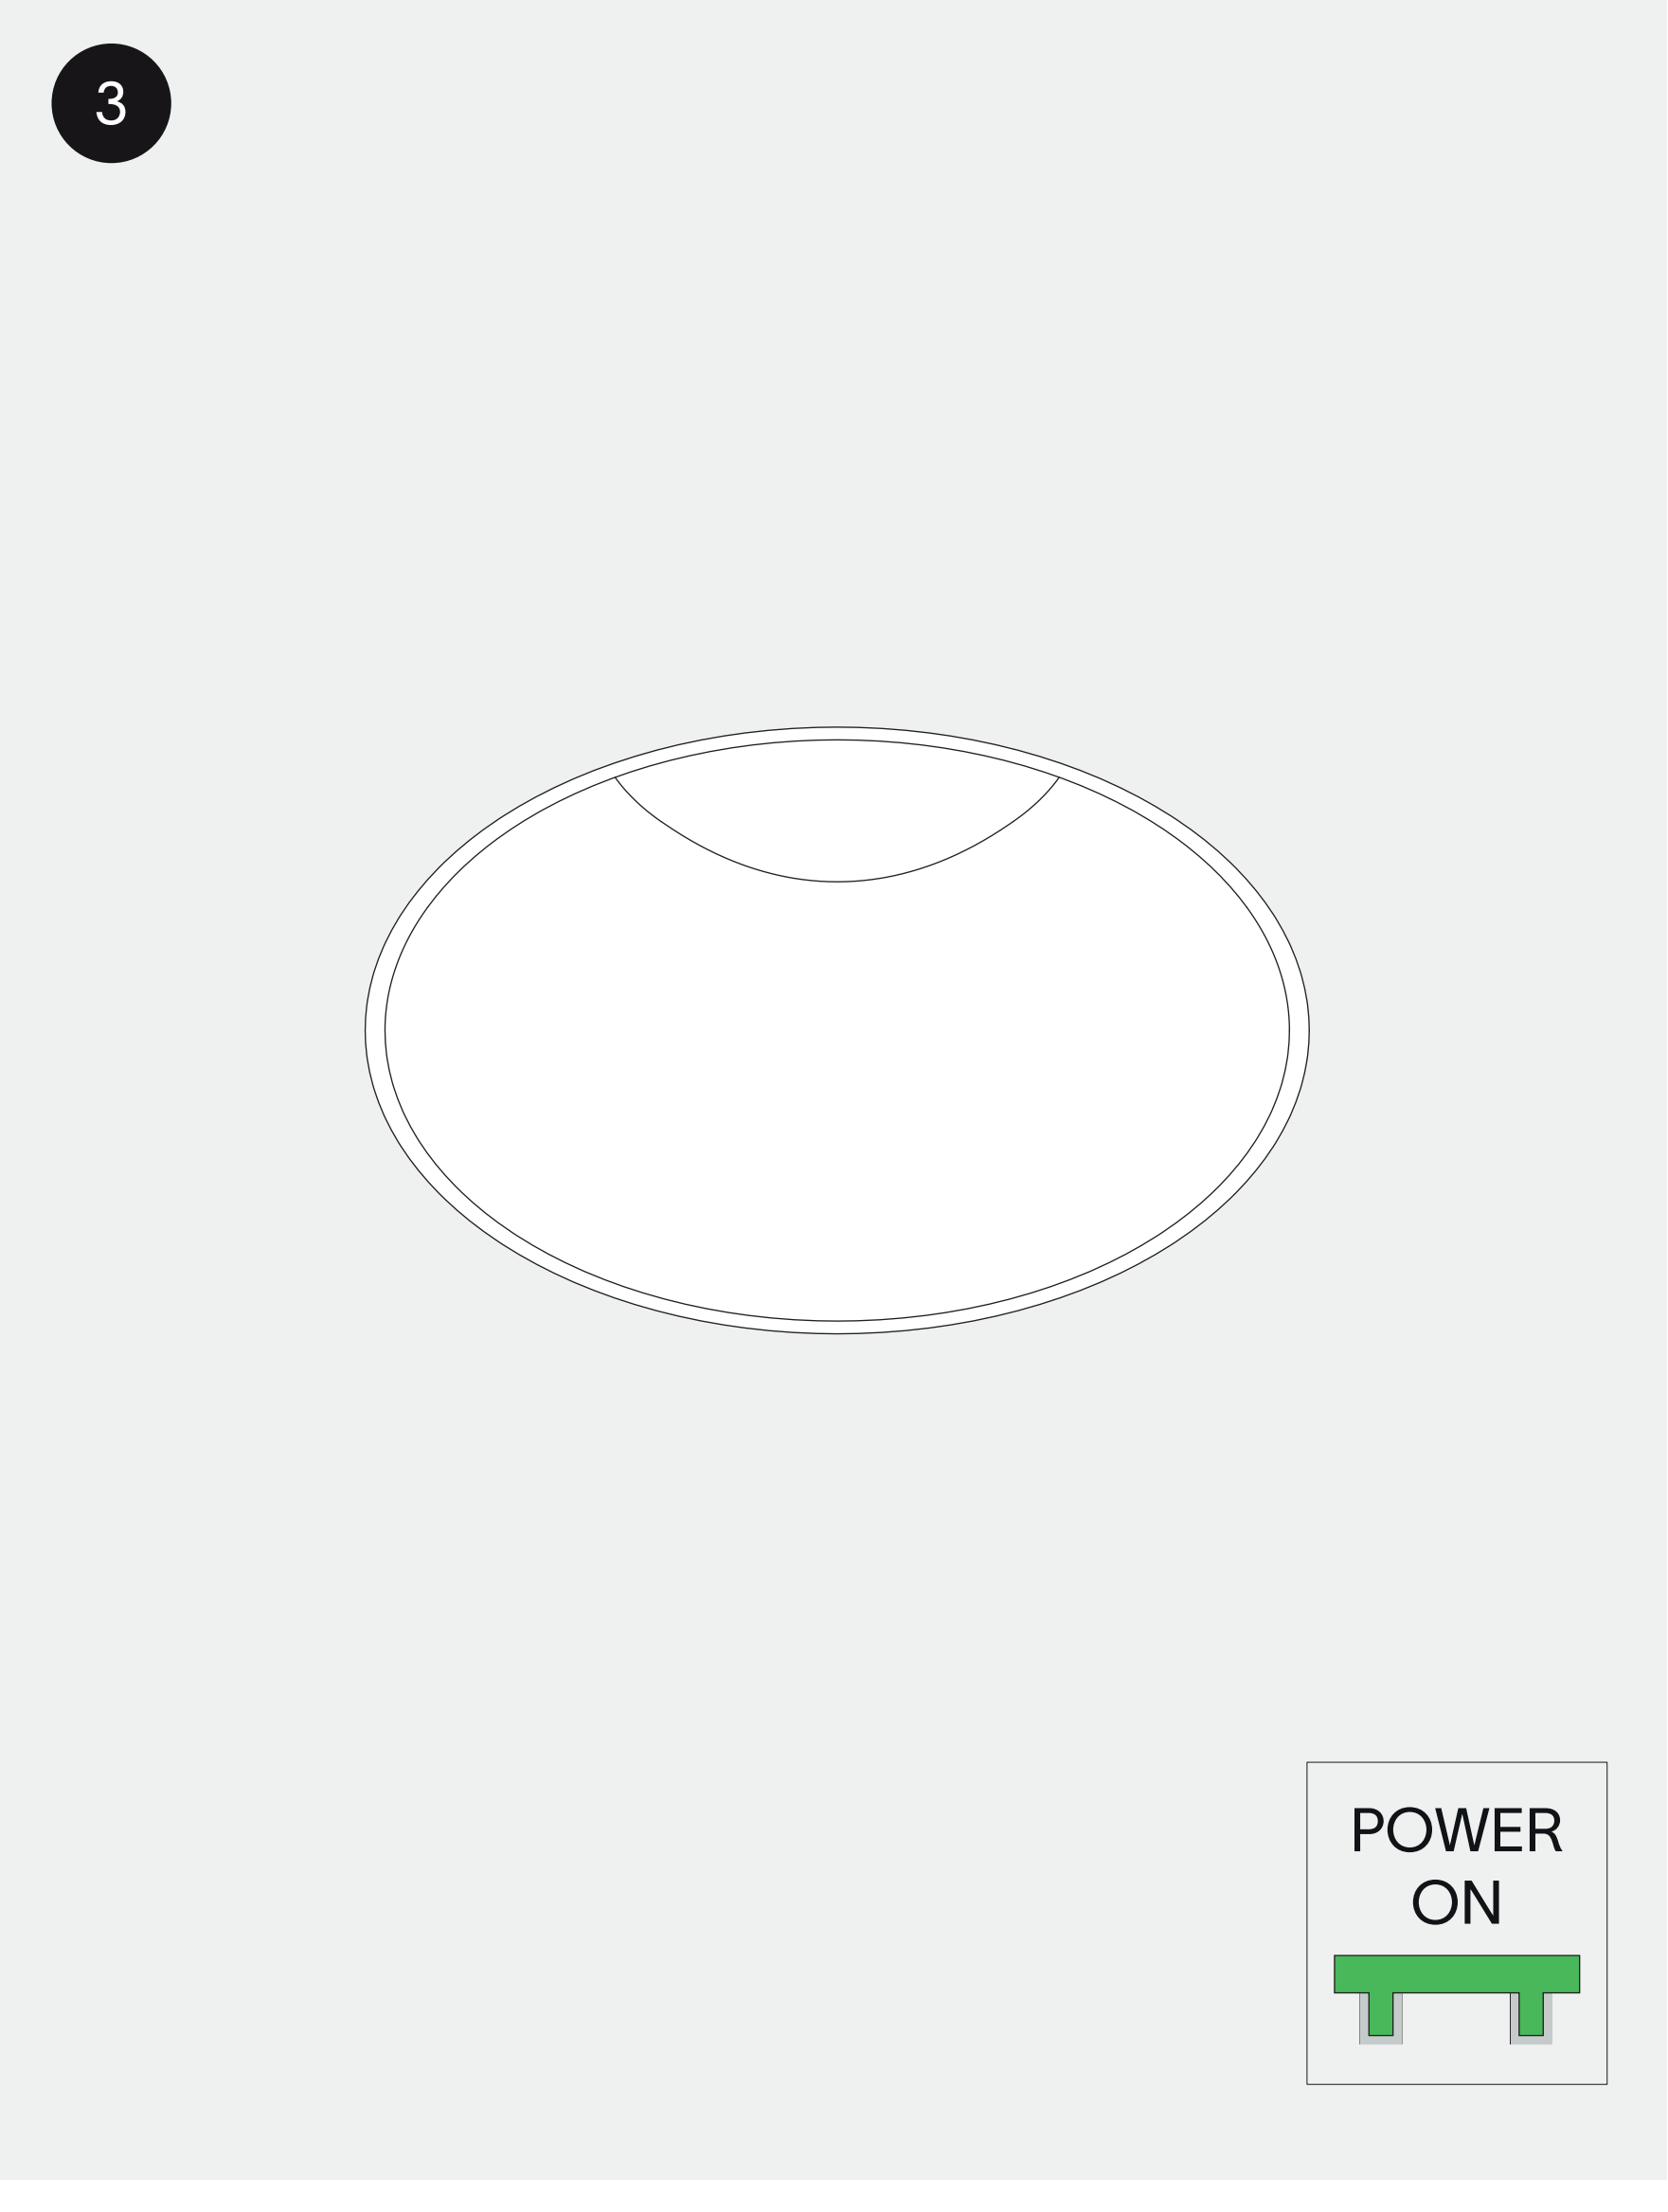

Turn the power back on.  
Thank you for choosing prado.