



trimless spot


installation instruction

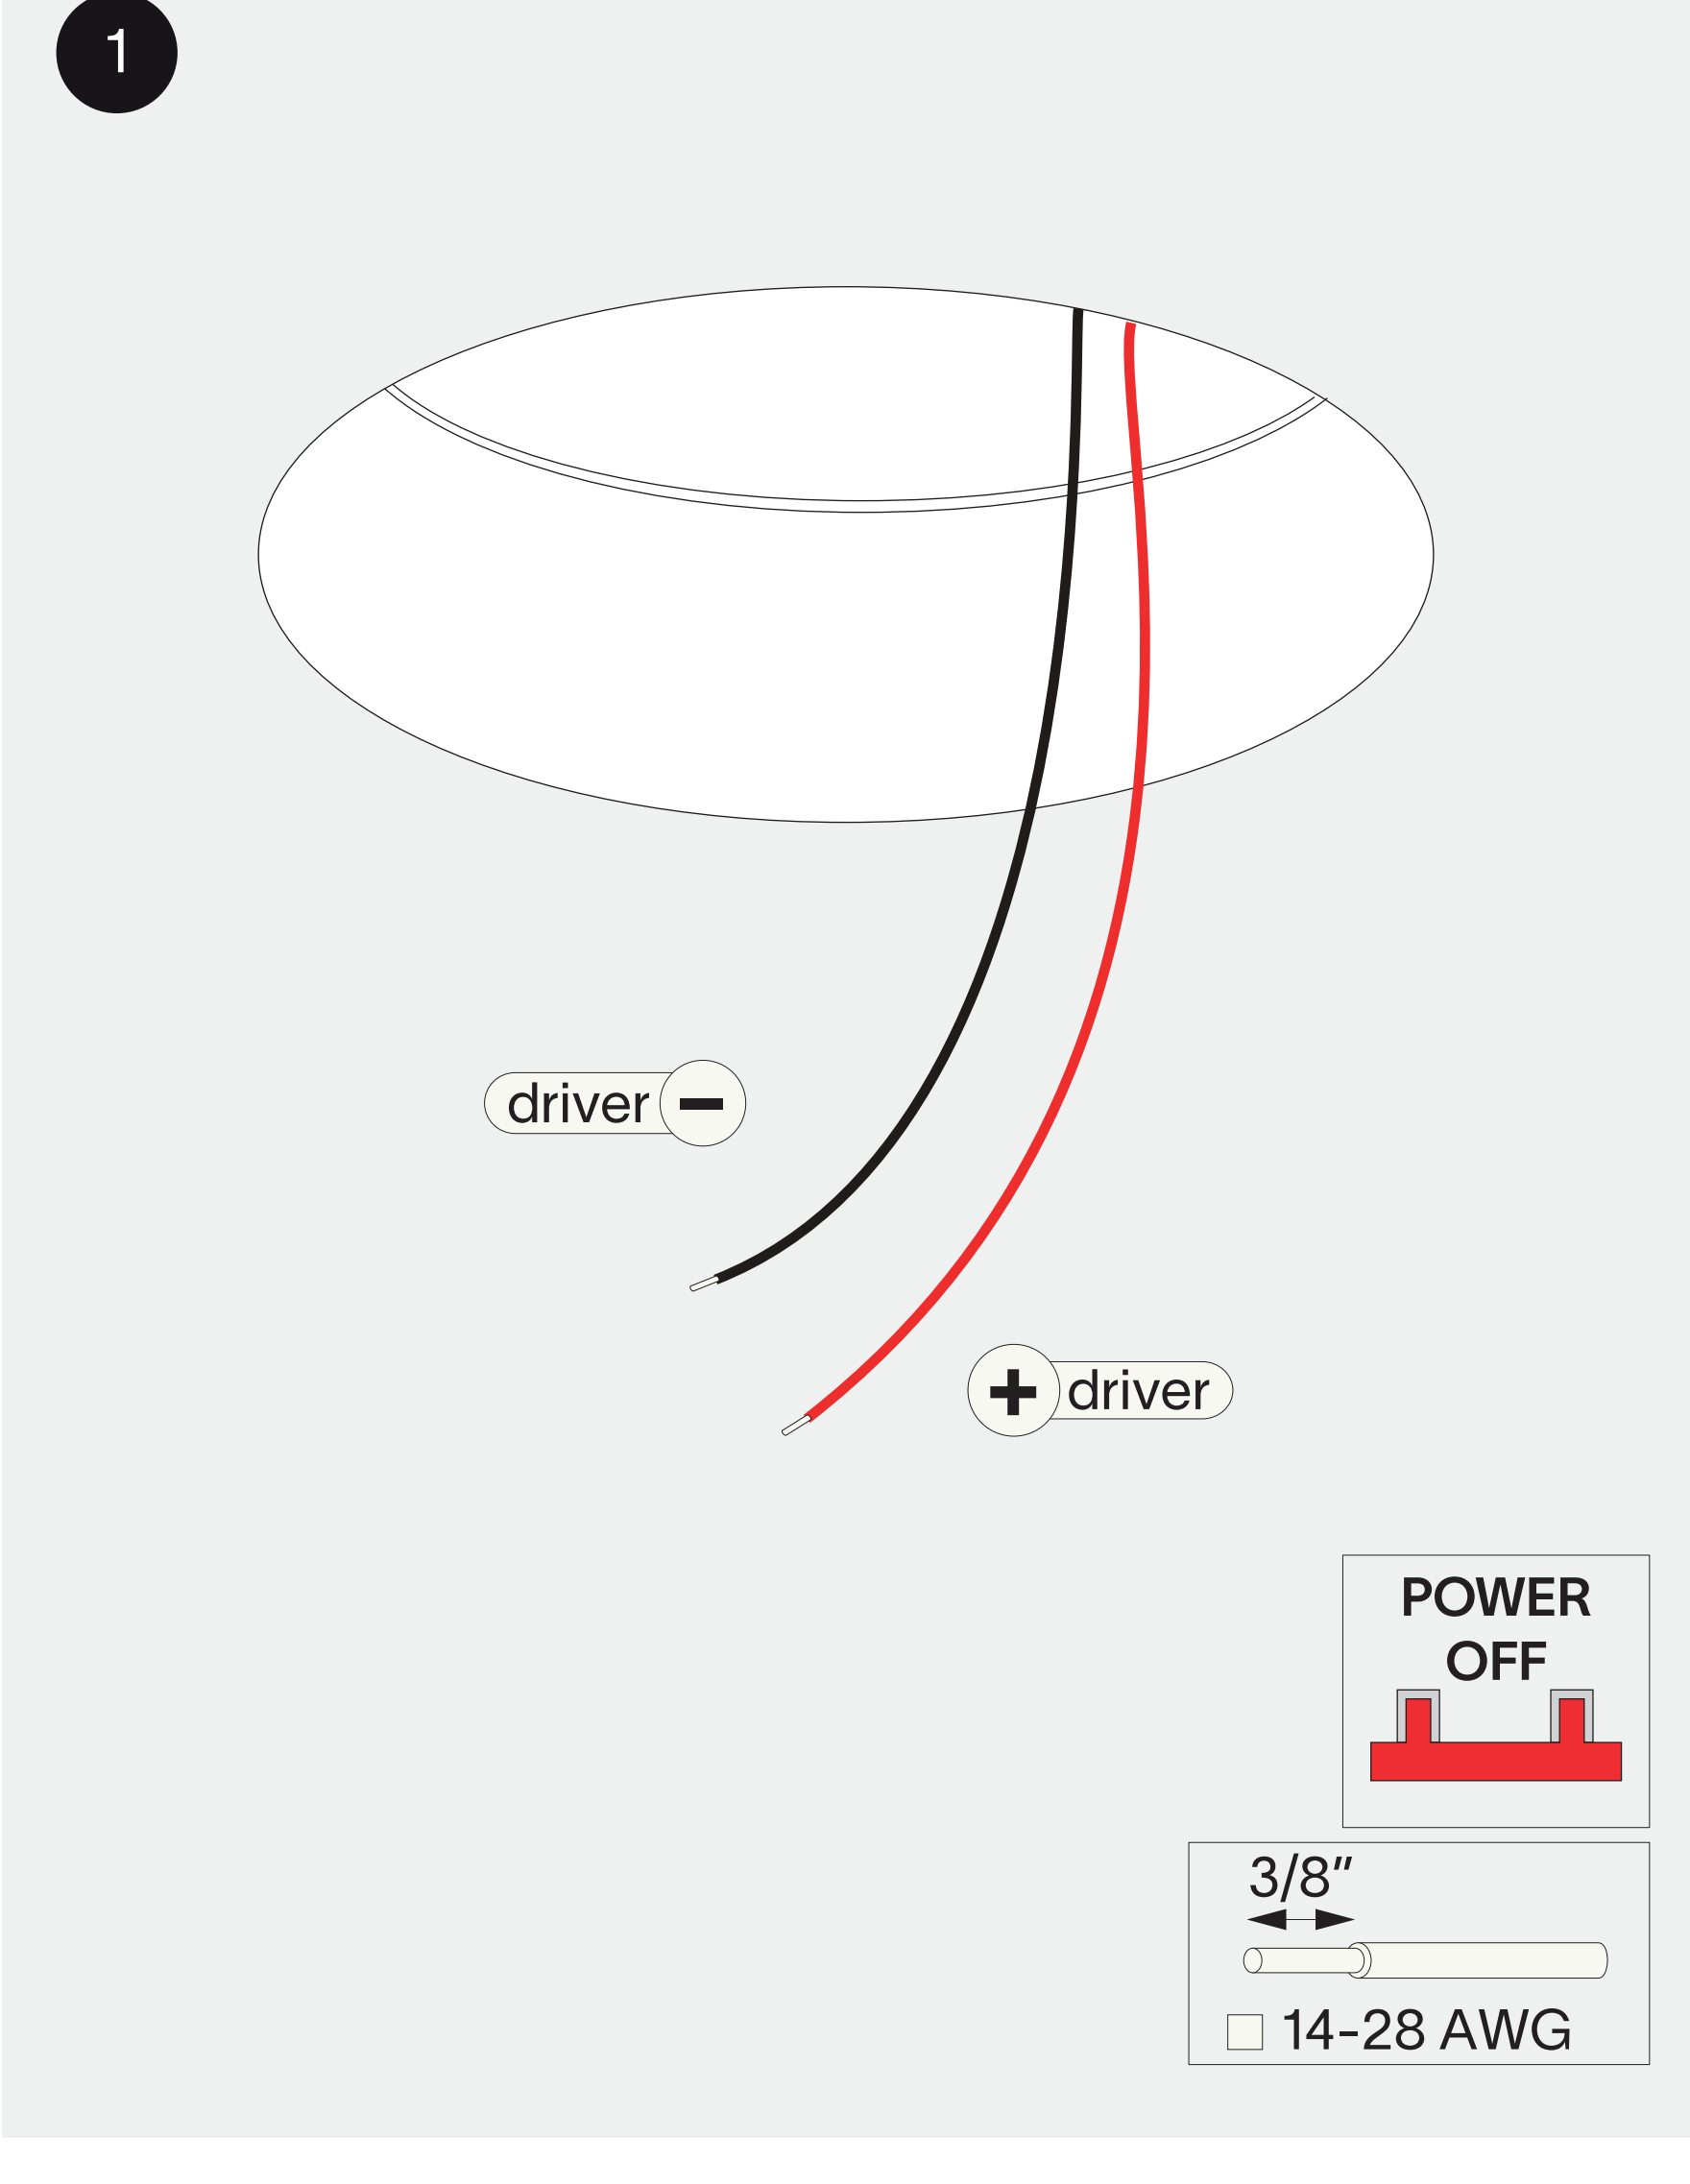


See packaging or fixture label for maximum current.

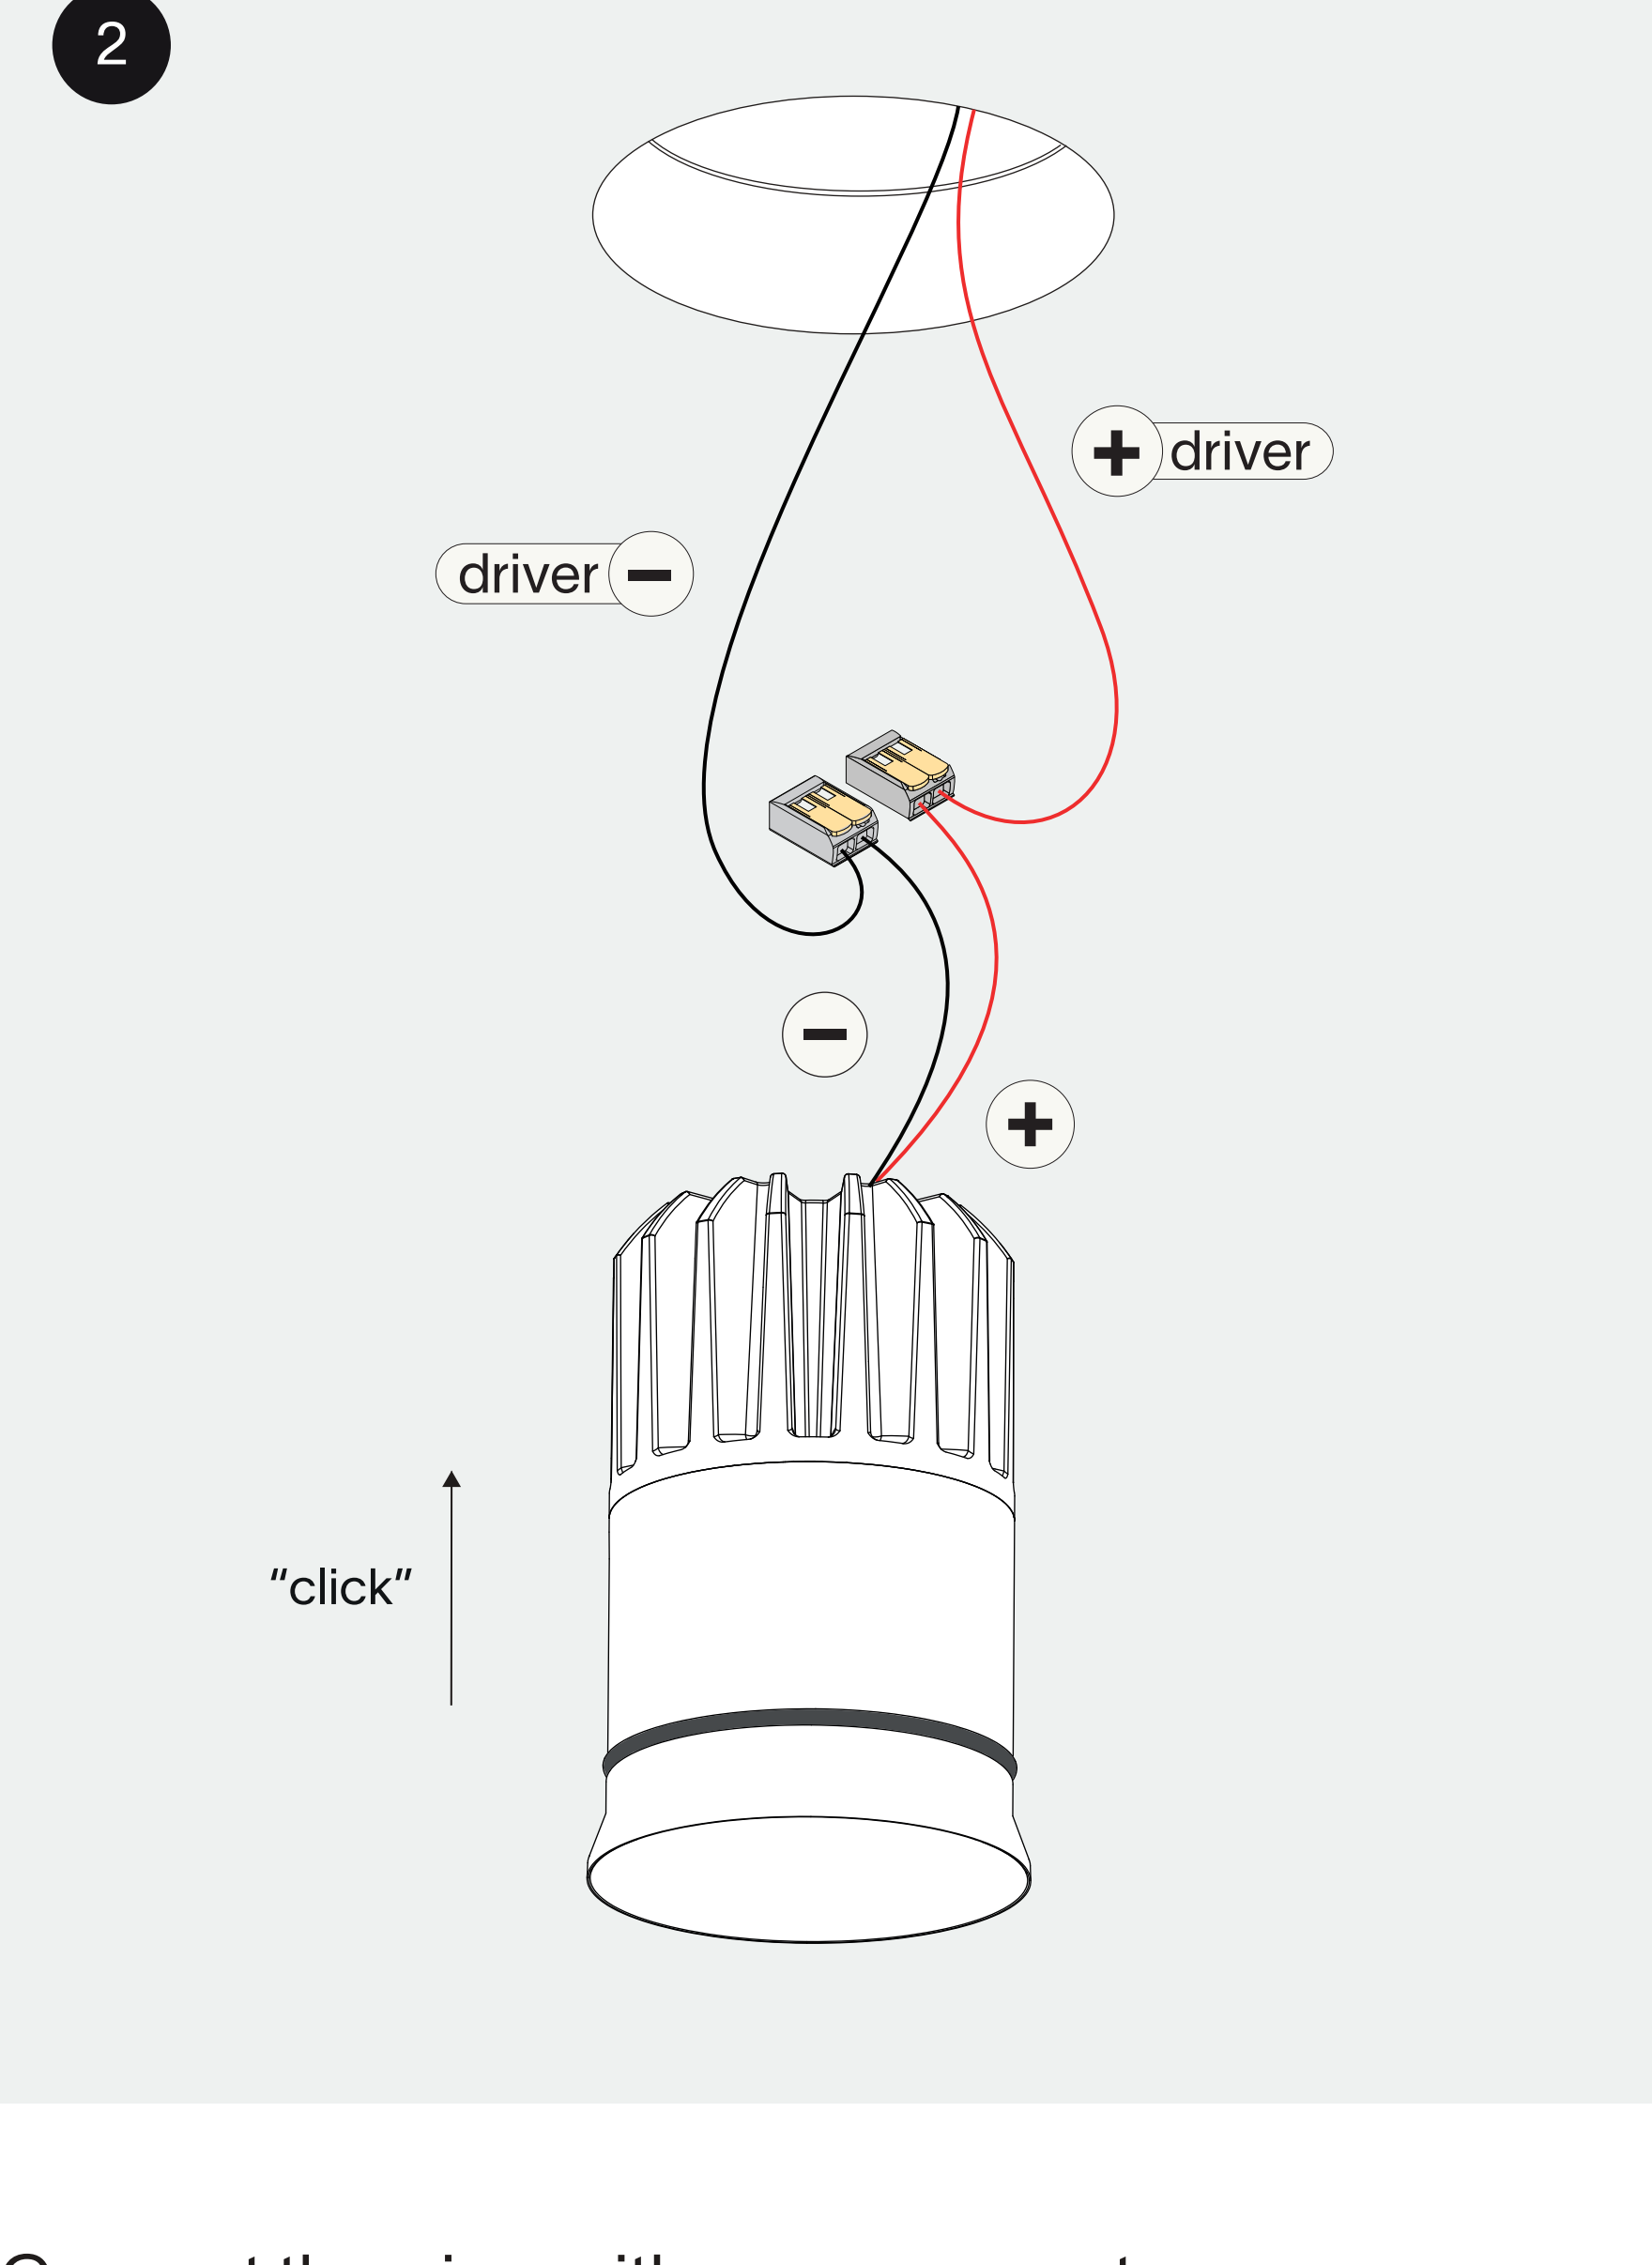

Connect the wires with wago connectors.
For serial connection, respect polarity.
Combine with a prado LED-driver.

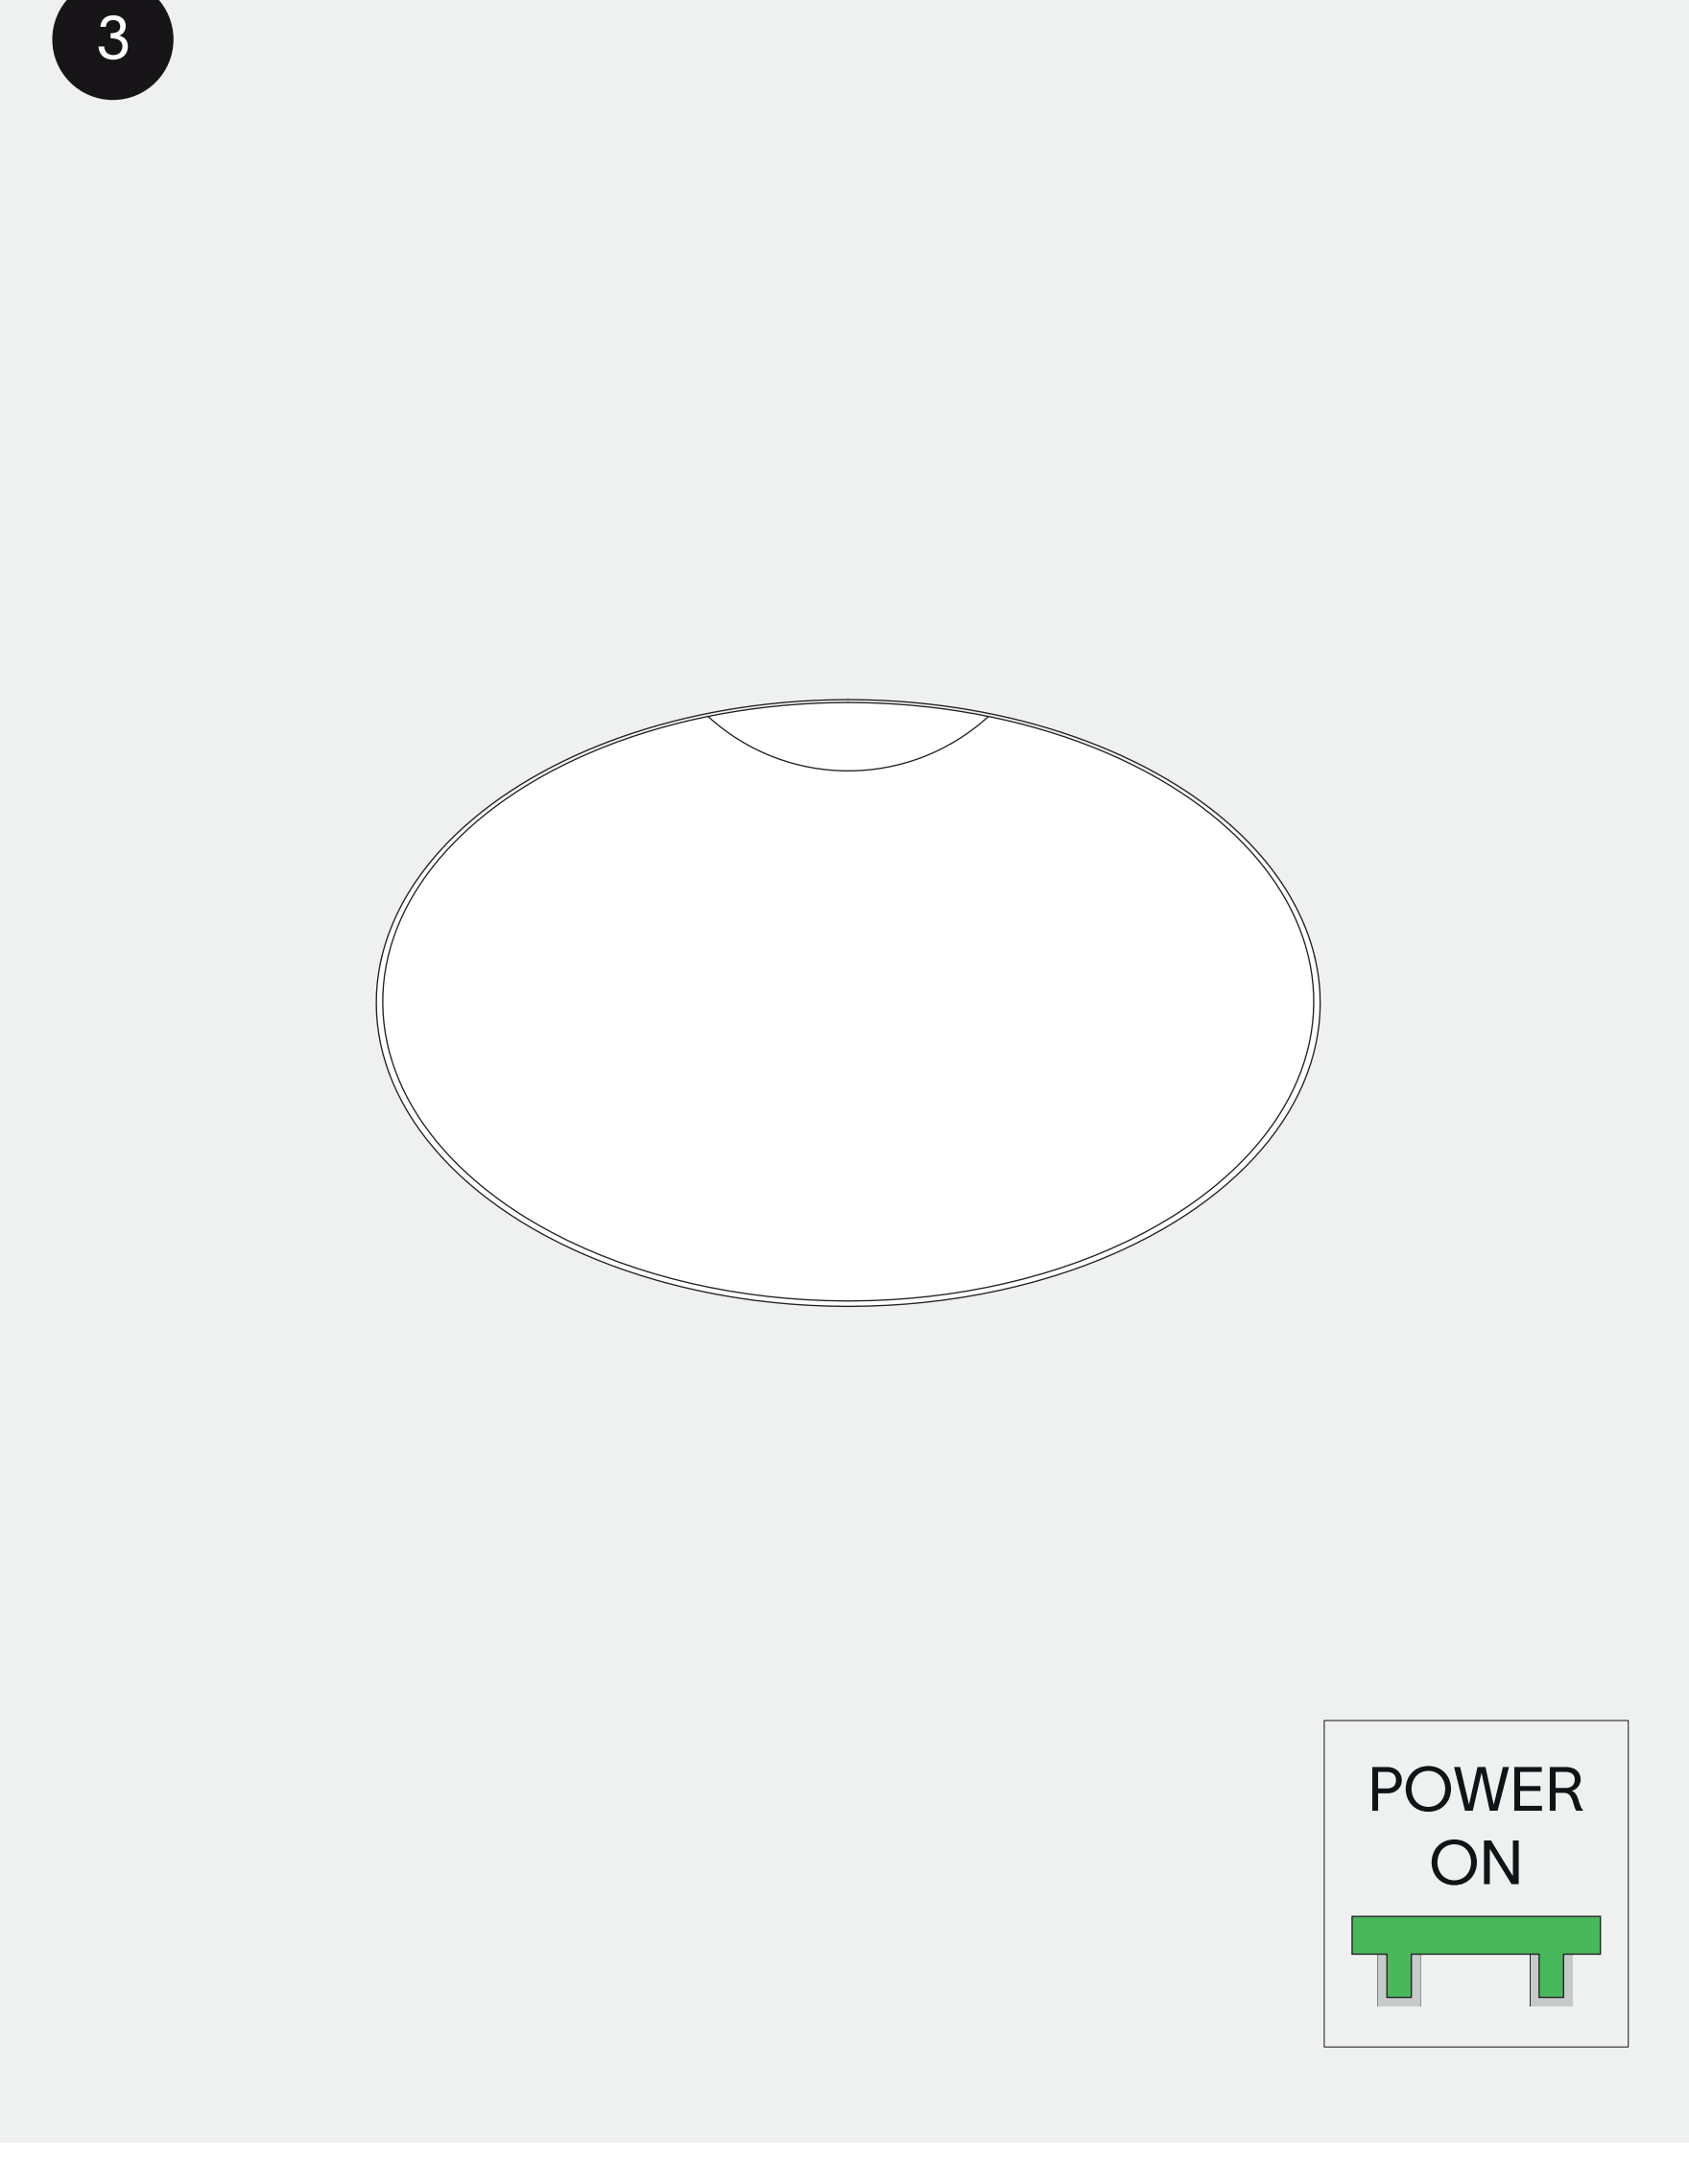

Turn the power back on.

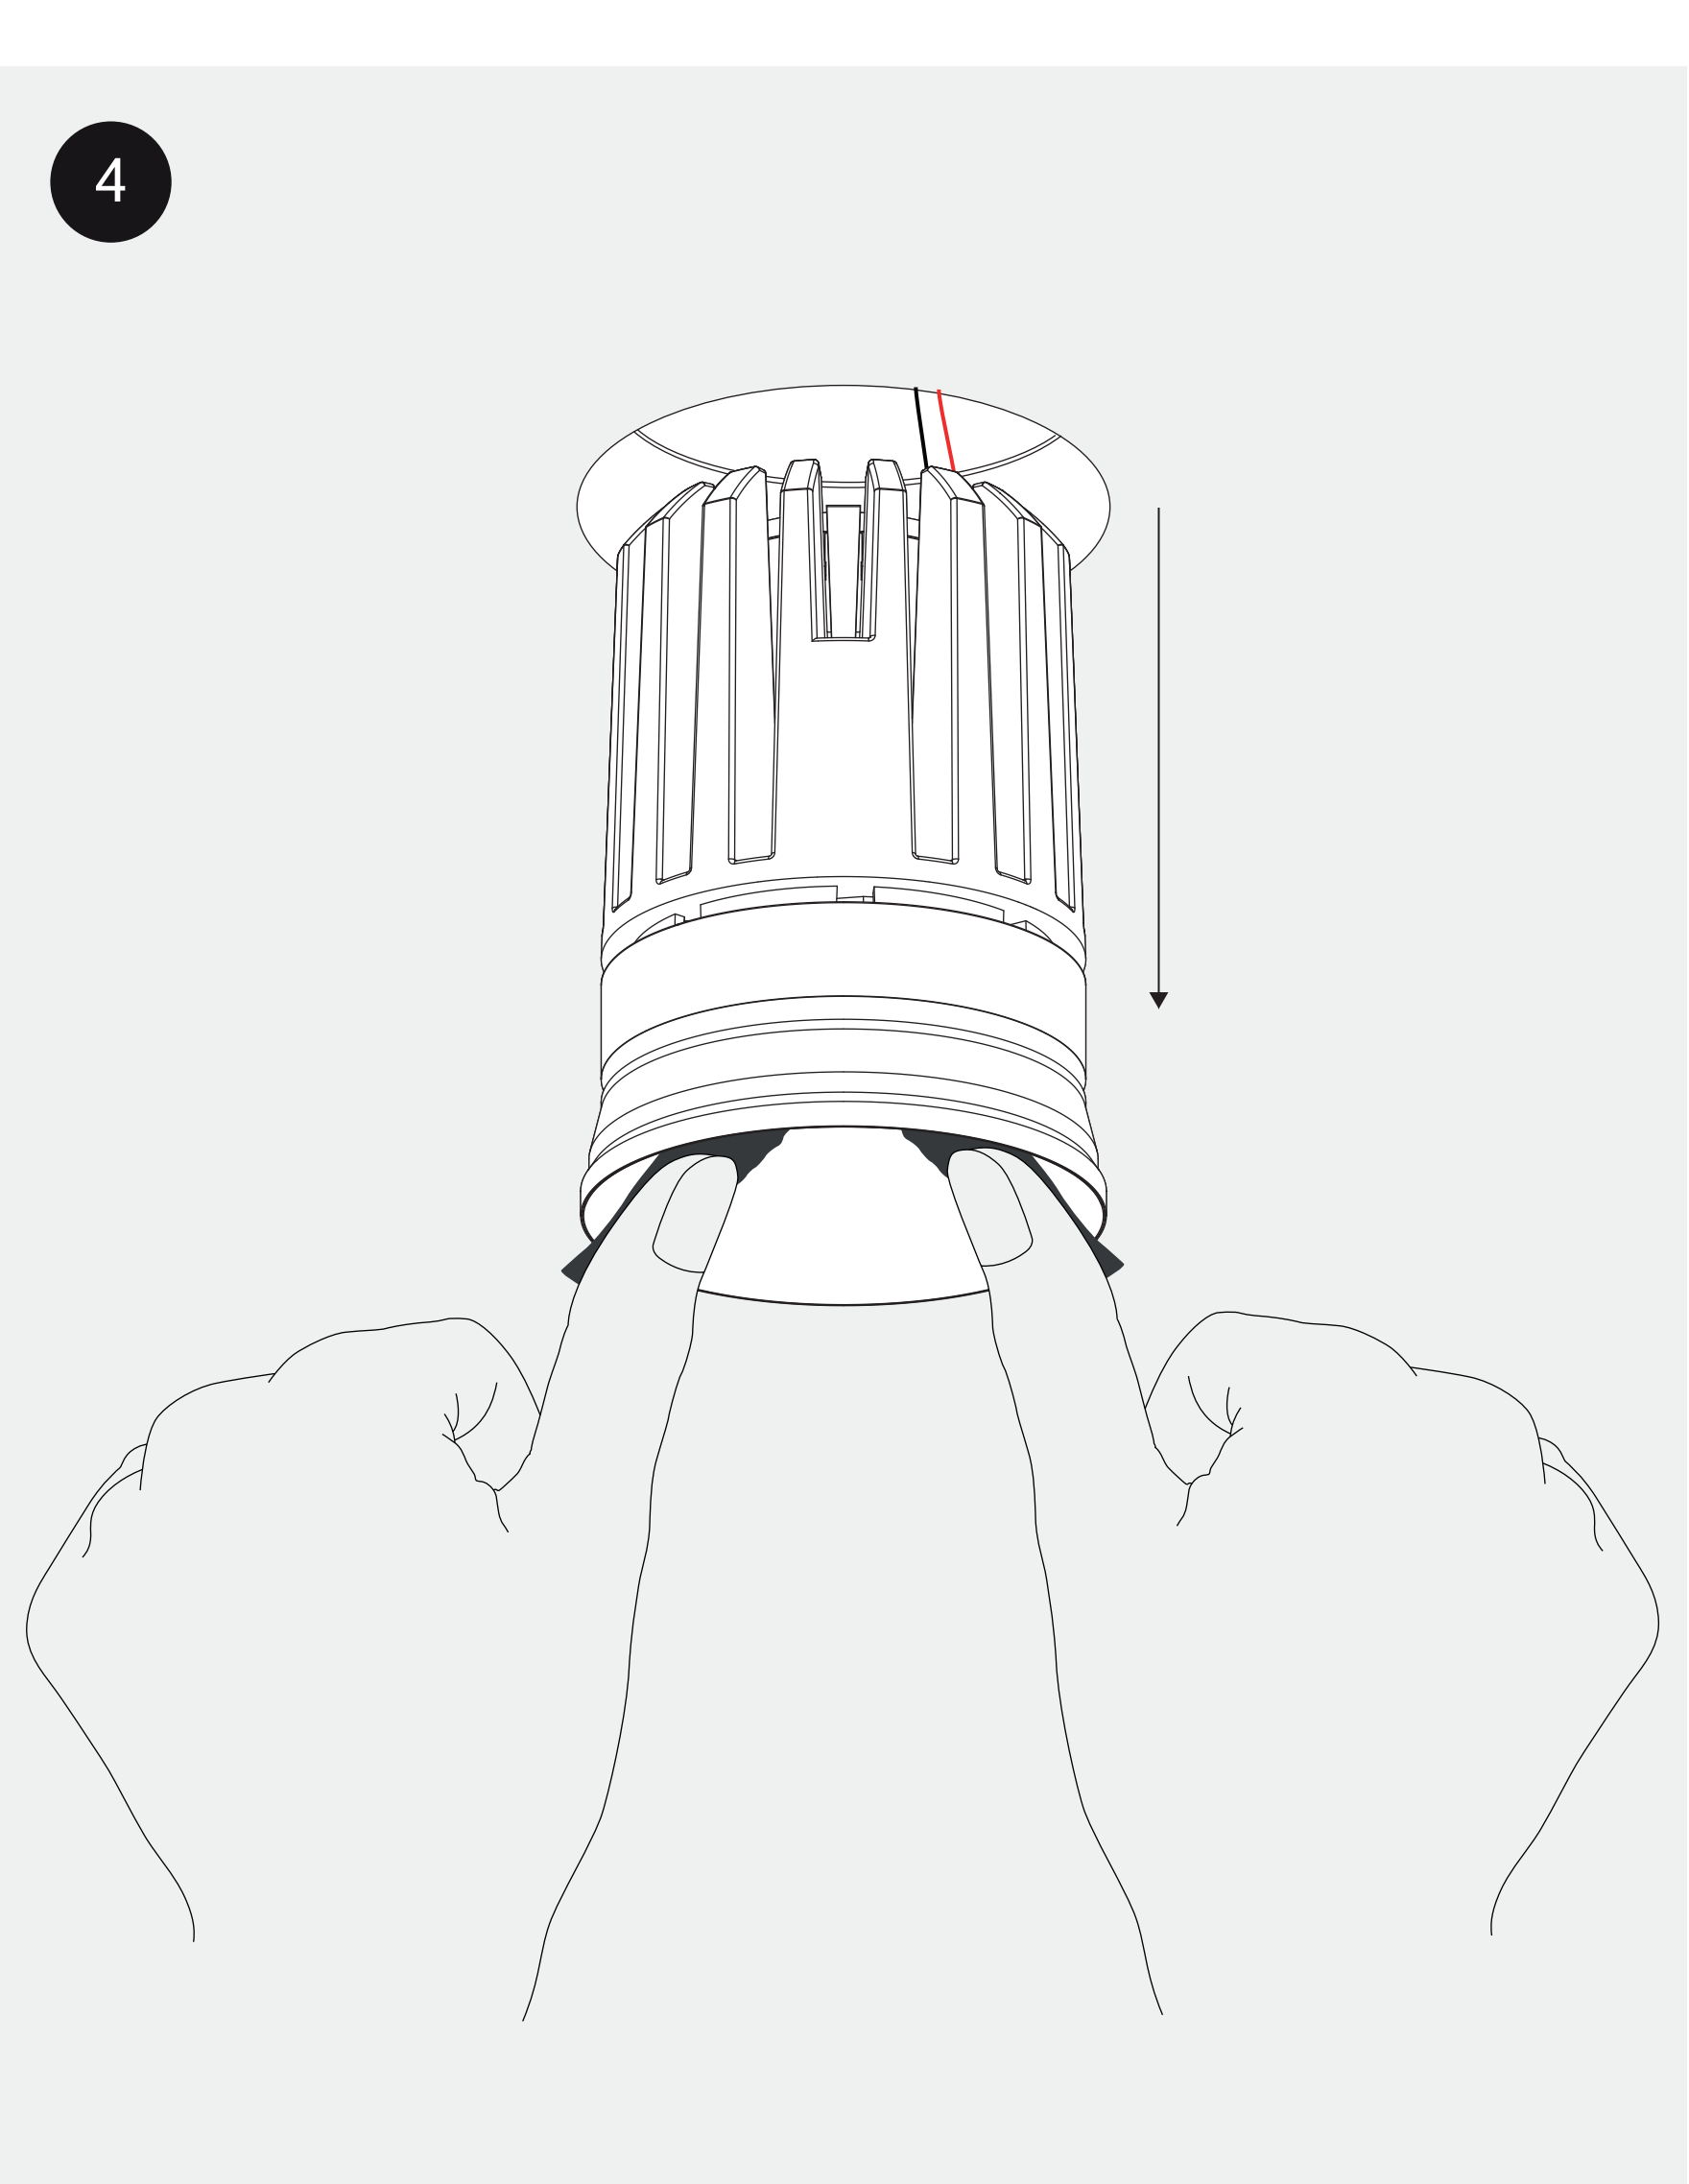

In case maintenance would be needed, the luminaire can be removed from the plaster ring without doing any damage by using duct tape.

Thank you for choosing prado.