



clt csc ring Ø1-1/2"

installation instruction


1

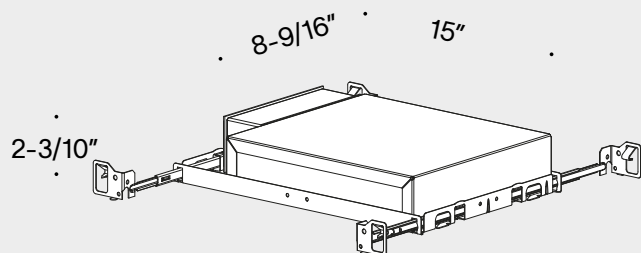


housing

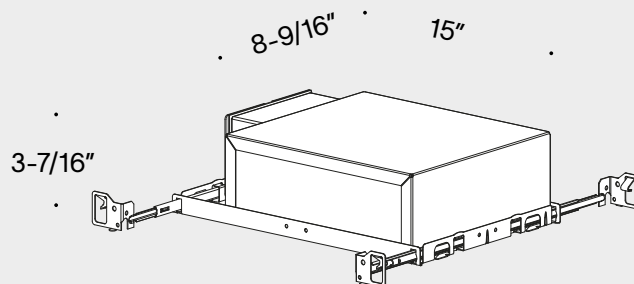

housing

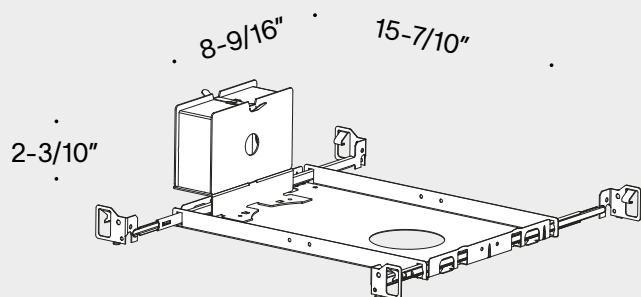

housing

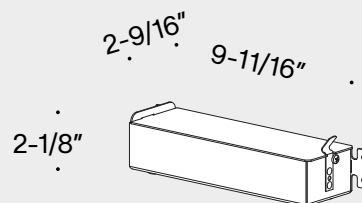


remodel




Install the appropriate IC/driver box.

for **clt ring** go to page 3 ([click here](#))

for **csc ring** go to page 7 ([click here](#))

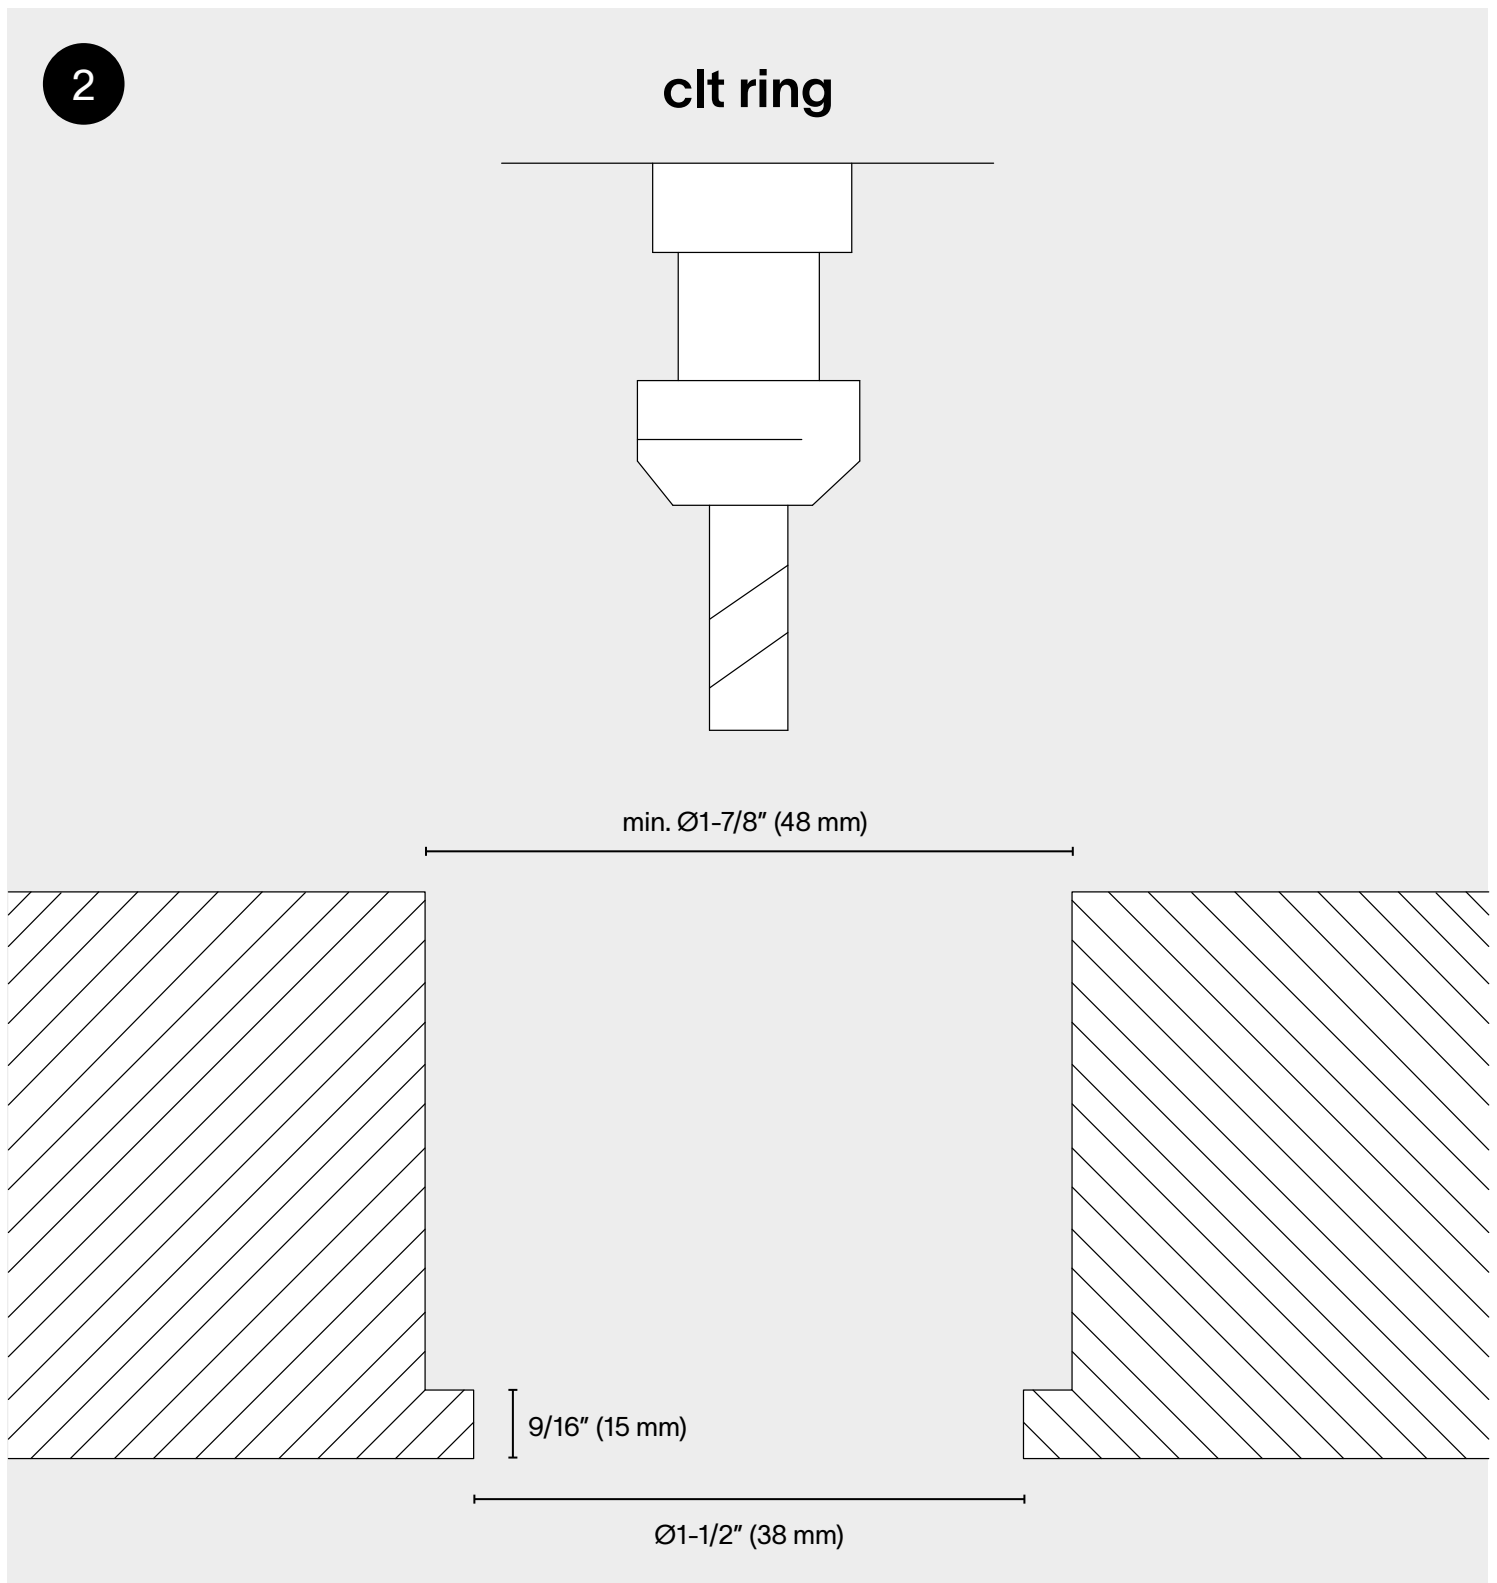


Mill a round hole with the above dimensions. Consult the chosen luminaire tech specs for required height and free air dimensions.

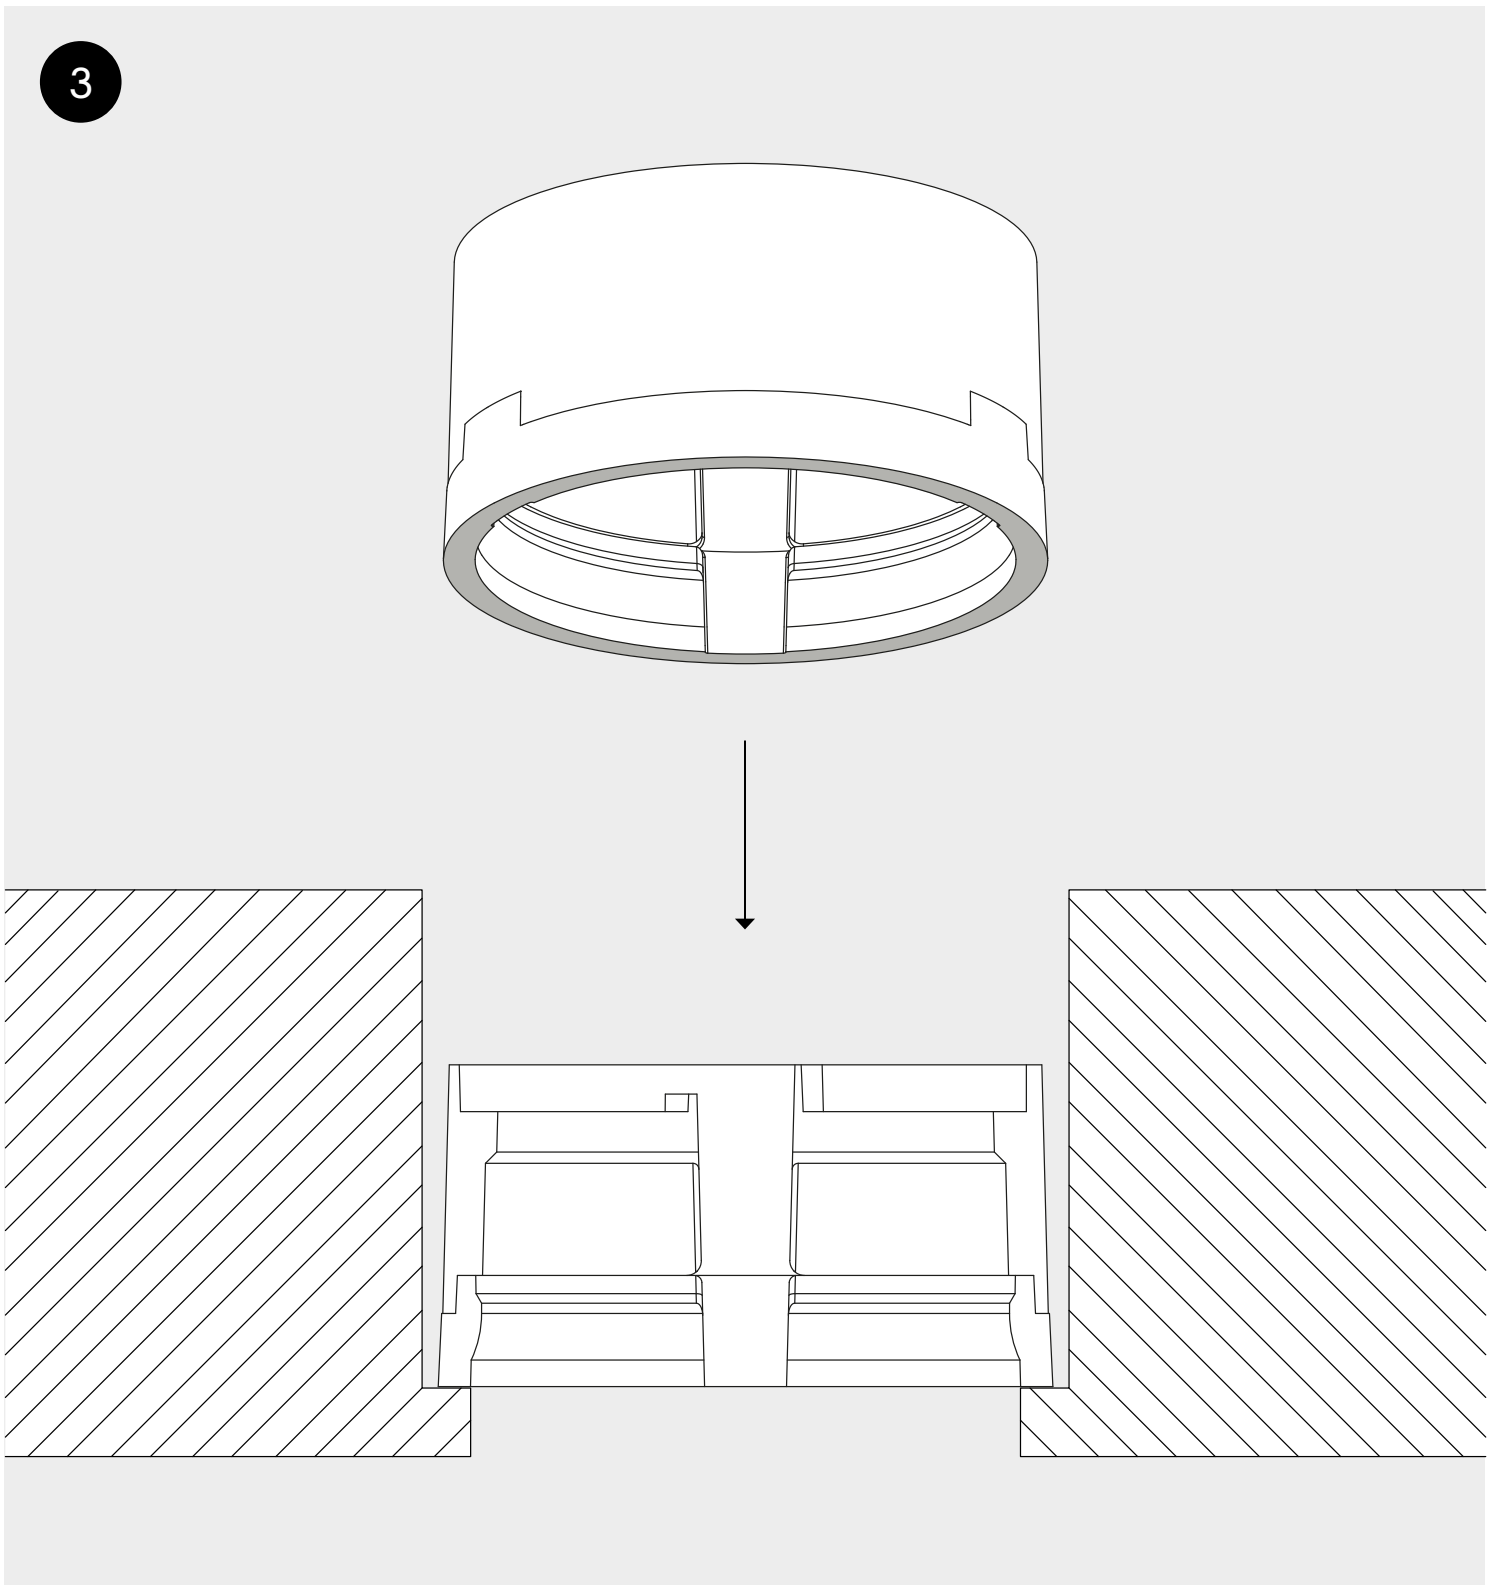


Place the clt ring in the hole, grey side facing down.

4

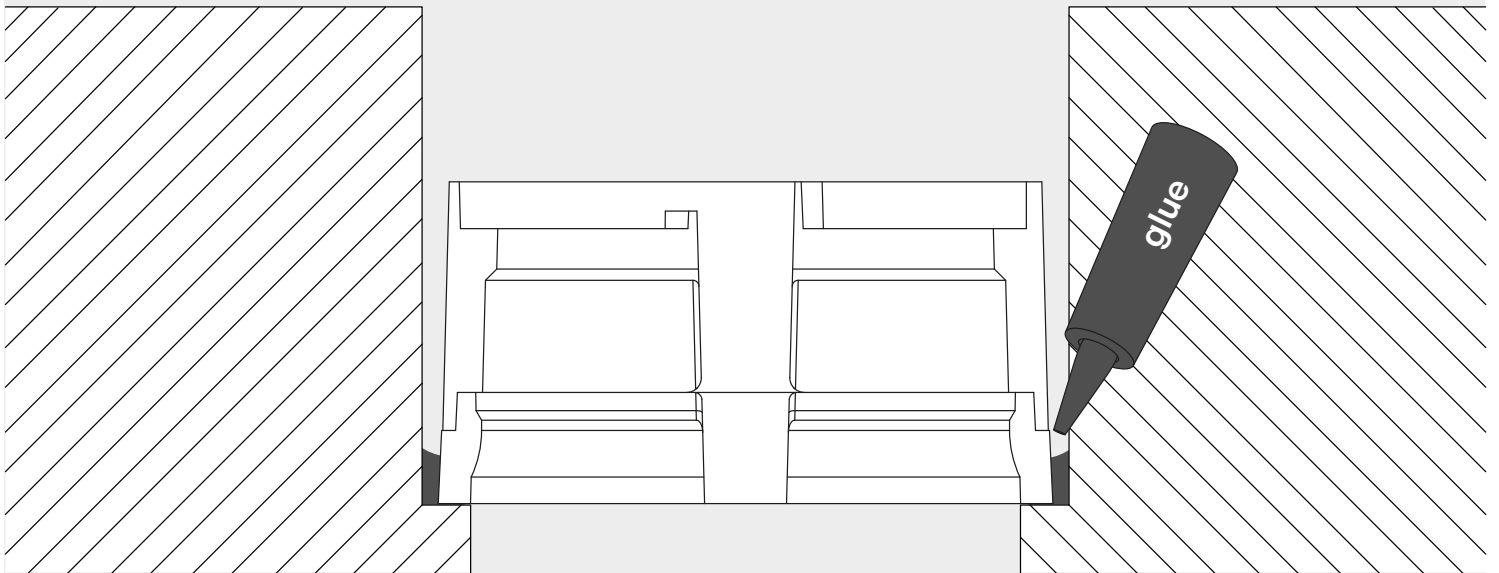

Fixate the ring to the clt with the appropriate glue.

5

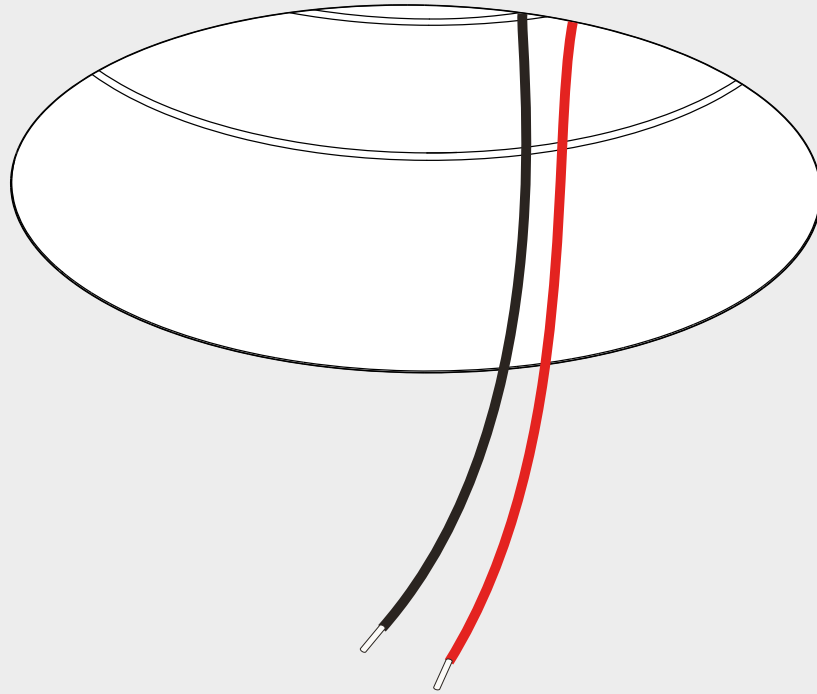

The fixture can now be installed.


thank you for choosing prado




prado.com

Installation must be done by skilled professionals only and instructions must be followed at all times. Warranty will not apply in case of wrongful use or if unskilled personnel attempts to repair a product.

2

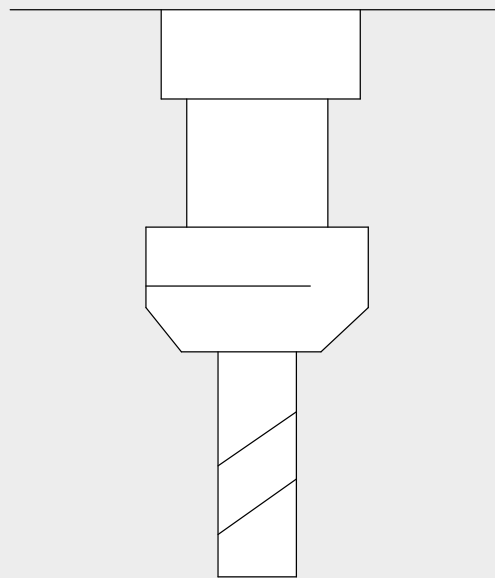
csc ringmin. $\varnothing 1-7/8"$ (48 mm) $9/16"$ (15 mm) $\varnothing 1-1/2"$ (38.6 mm)

2 x thickness stretch ceiling




Mill a round hole with the above dimensions in a wooden base (not supplied) (max. fabric thickness: $3/64"$ (1.2 mm)).

3

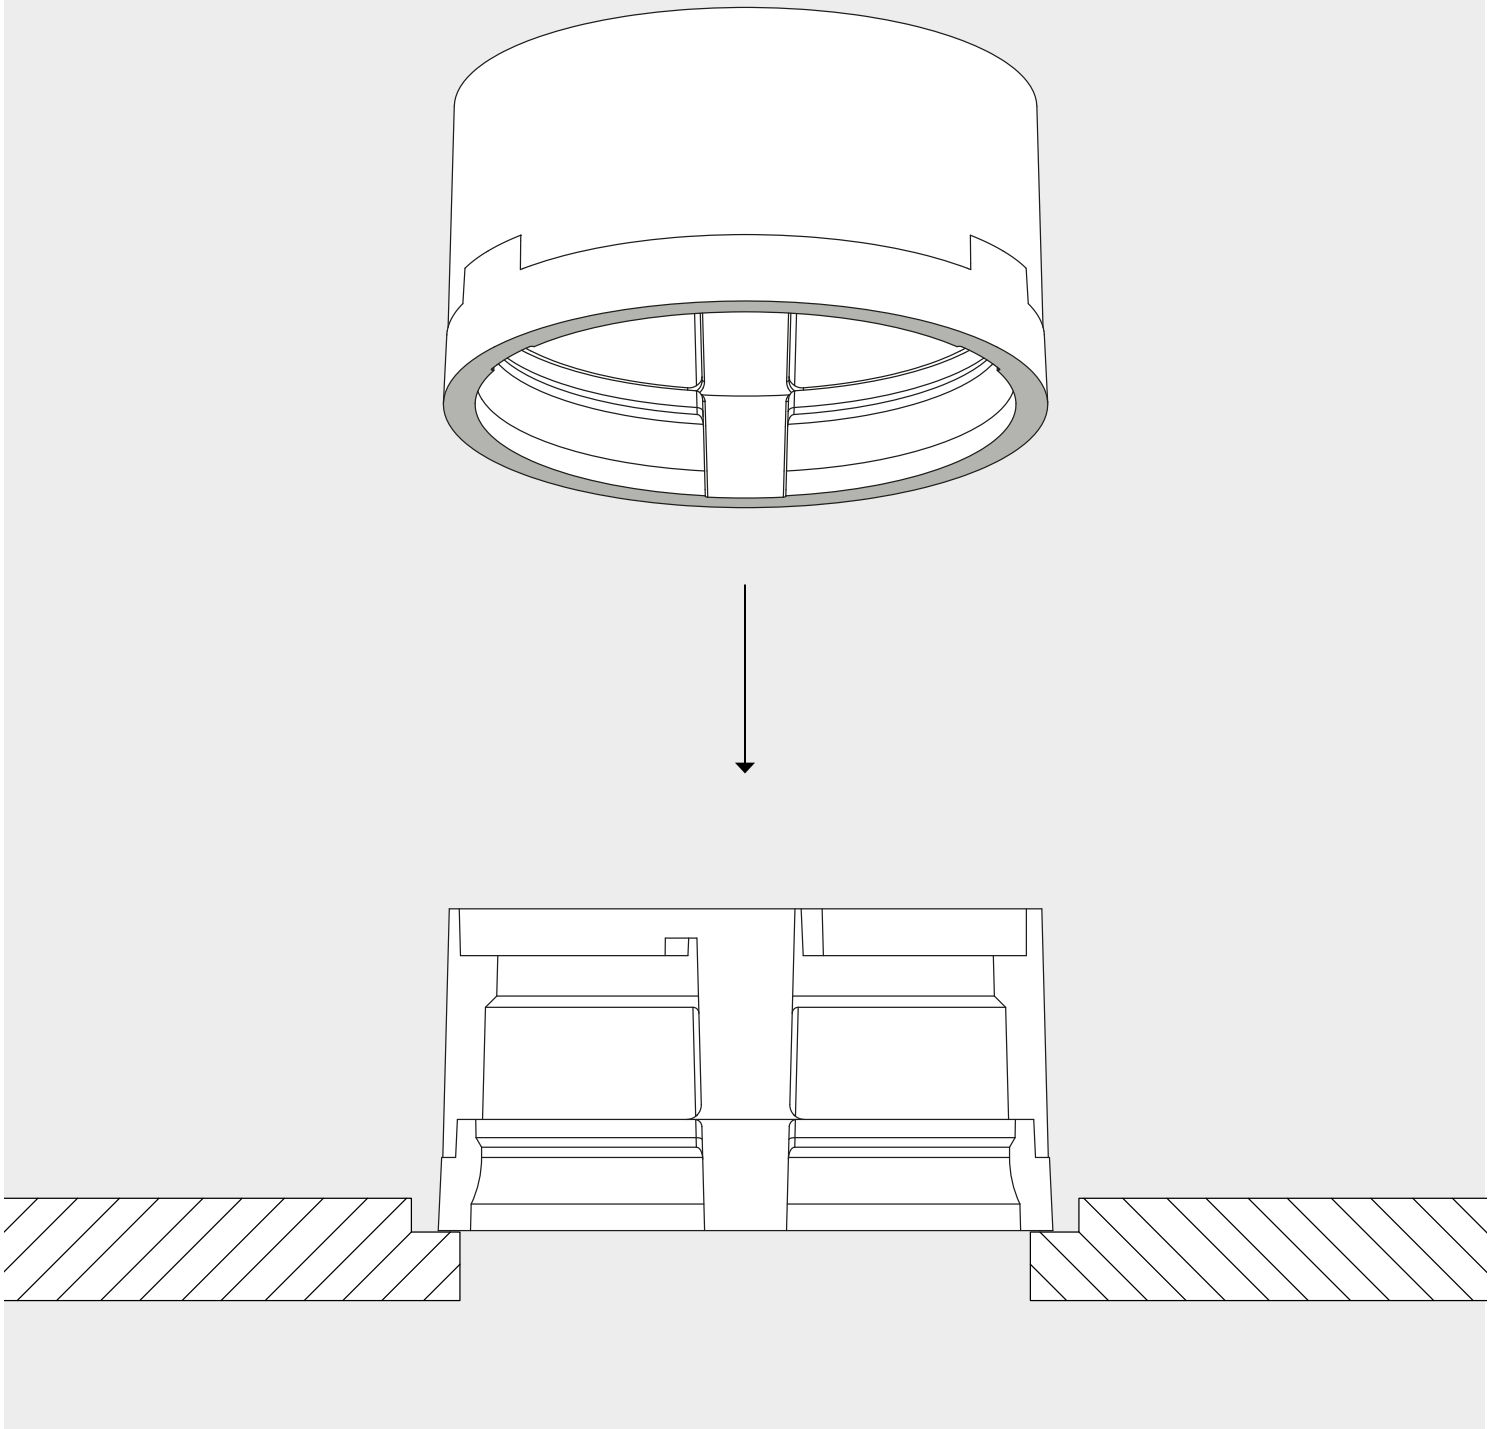


Place the csc ring in the hole, grey side facing down.

4

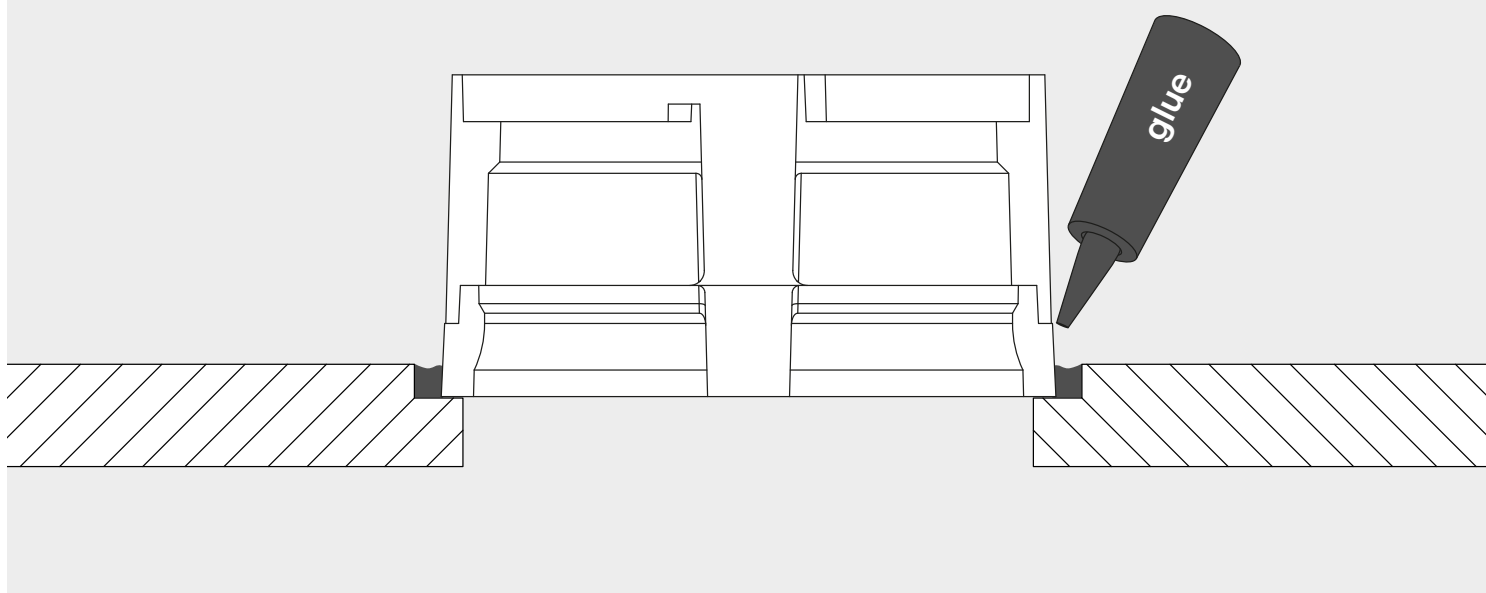


Fixate the csc ring to the wooden base with the appropriate glue.

5

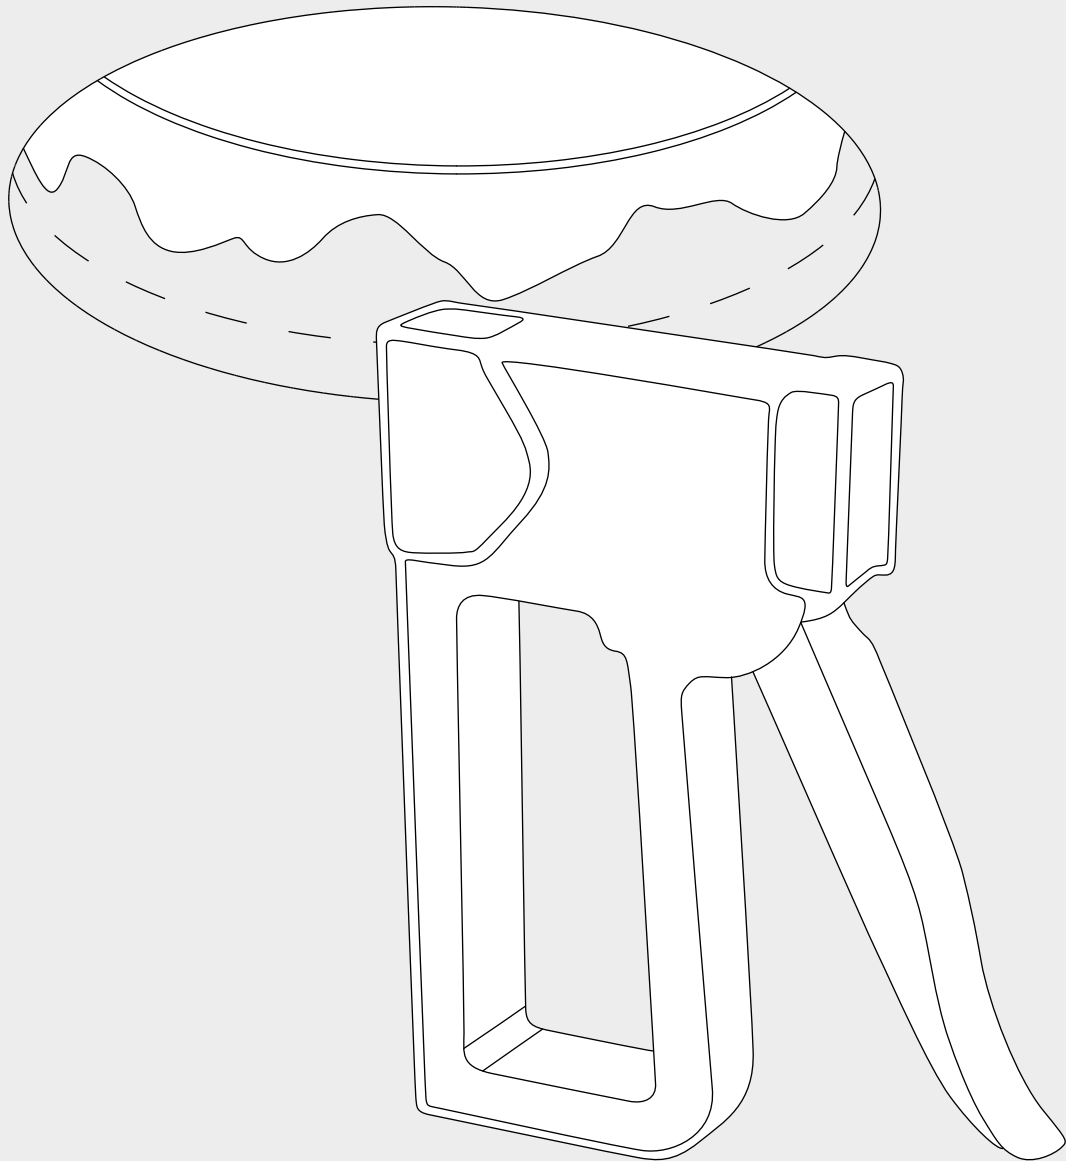

Fasten the cloth in the wooden base (below the csc kit). Cut off the excess fabric (it cannot touch the csc ring).

6

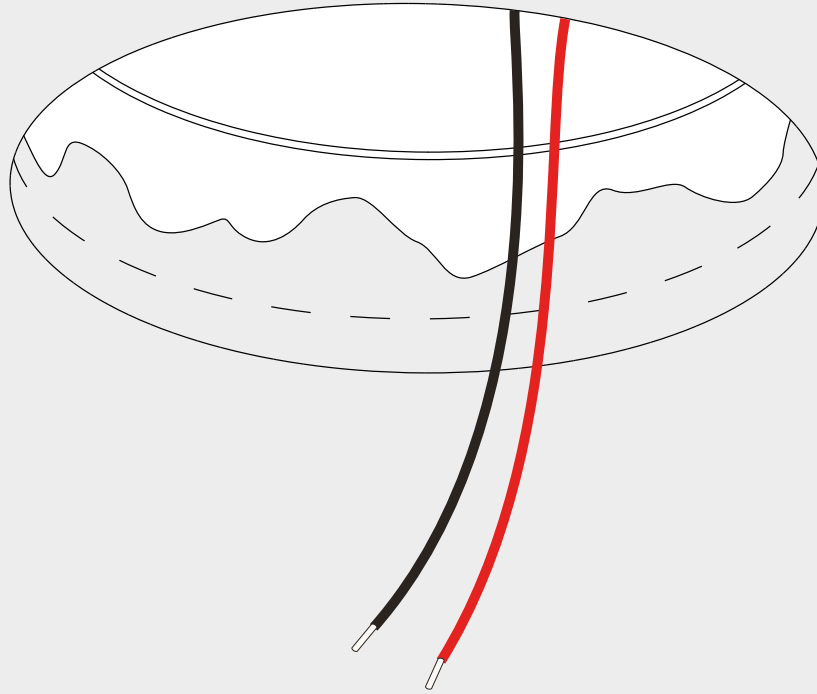

The fixture can now be installed.

thank you for choosing prado



prado.com

Installation must be done by skilled professionals only and instructions must be followed at all times. Warranty will not apply in case of wrongful use or if unskilled personnel attempts to repair a product.