



clt ring Ø1-1/2"

installation instruction


1

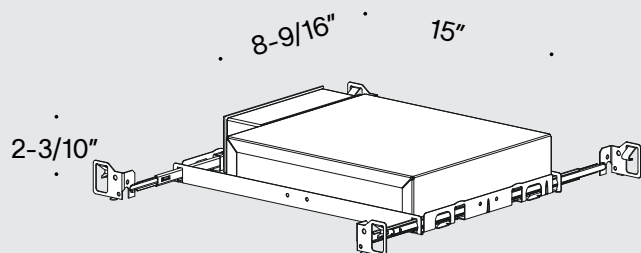


housing

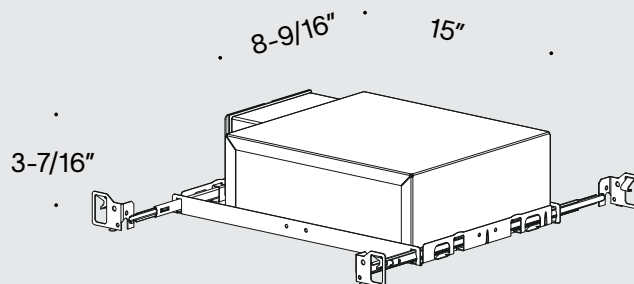

housing

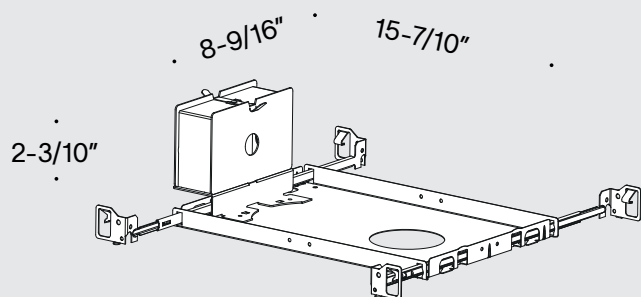


housing

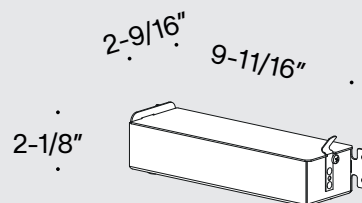

remodel




Install the appropriate IC/driver box.

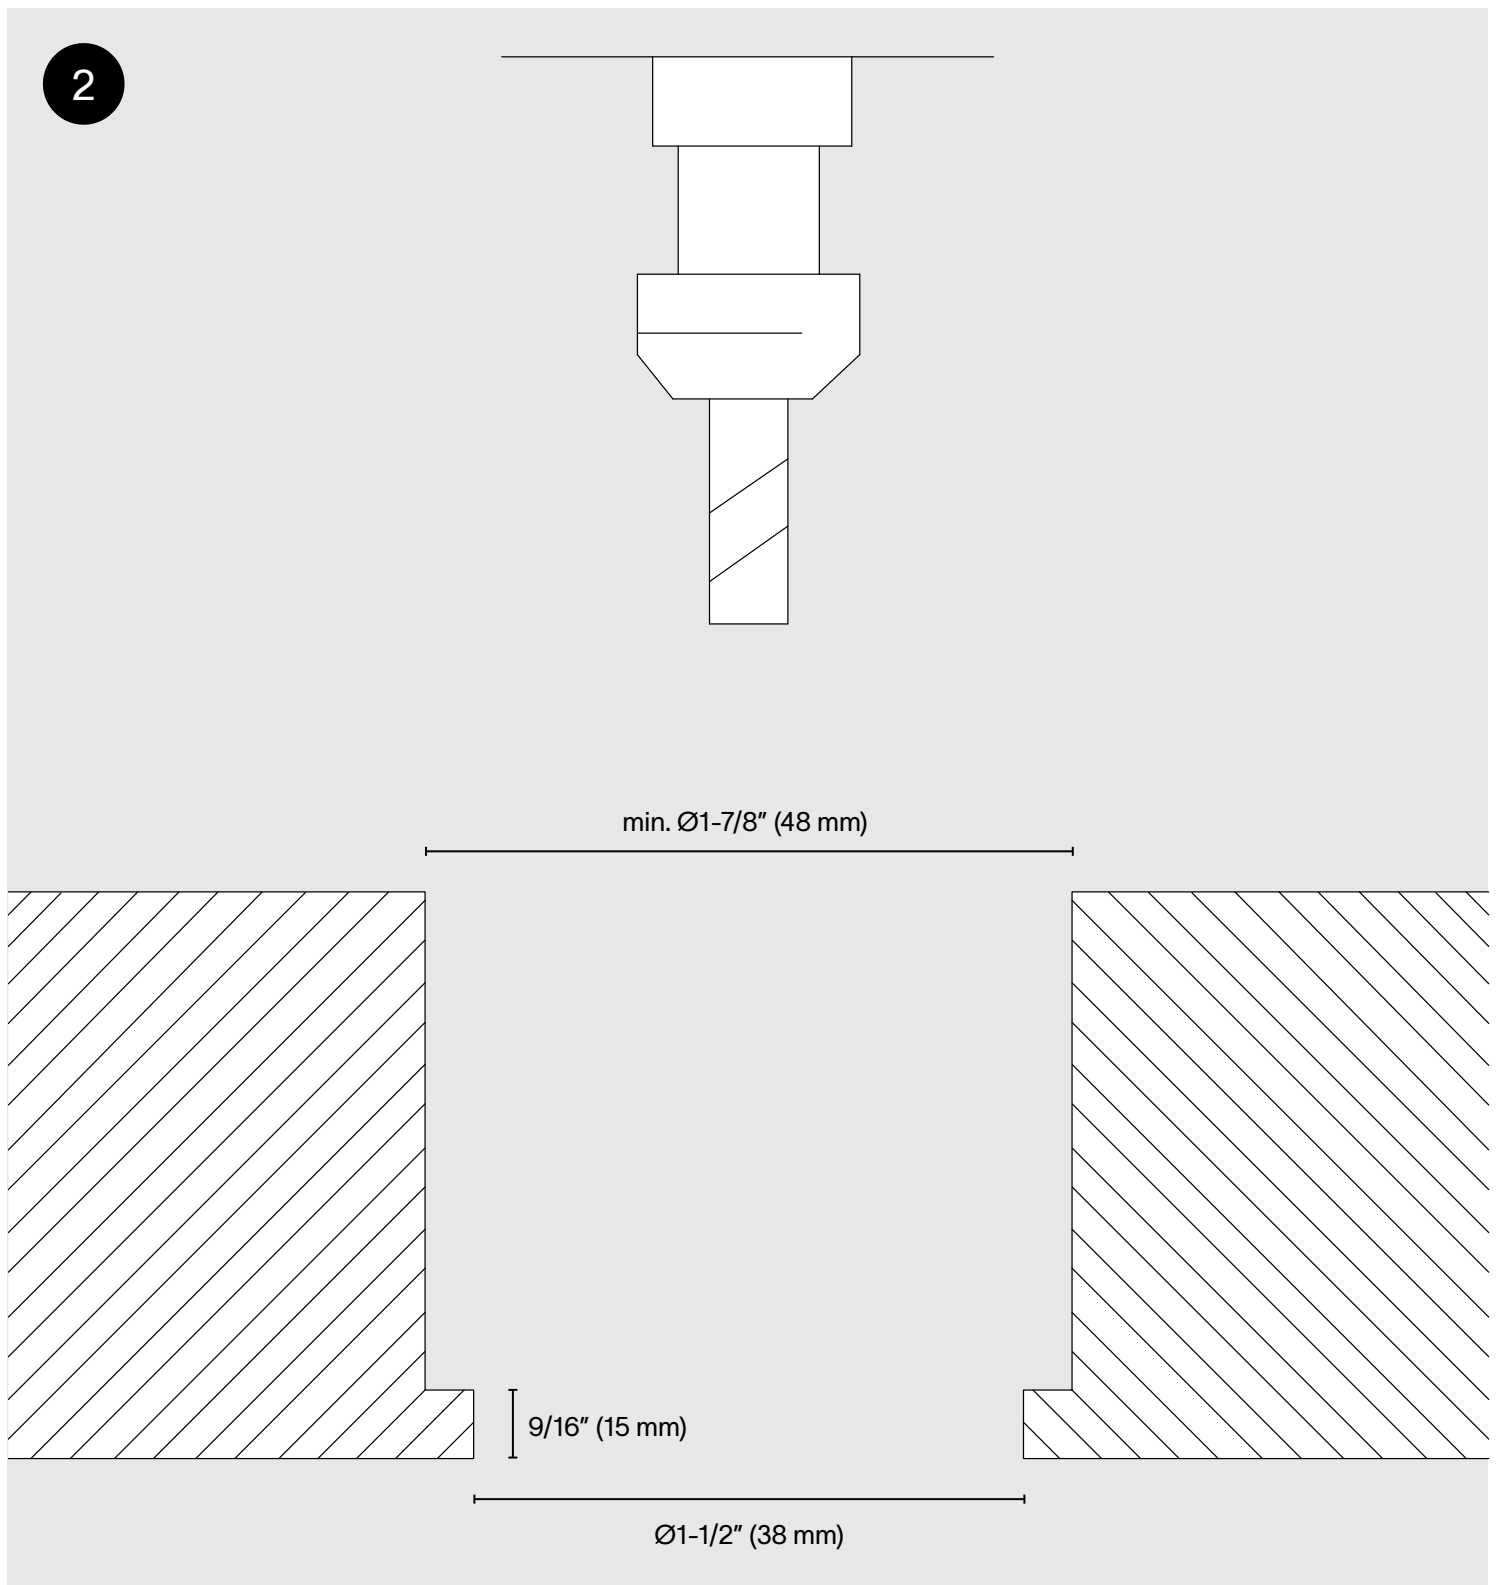


Mill a round hole with the above dimensions. Consult the chosen luminaire tech specs for required height and free air dimensions.

3

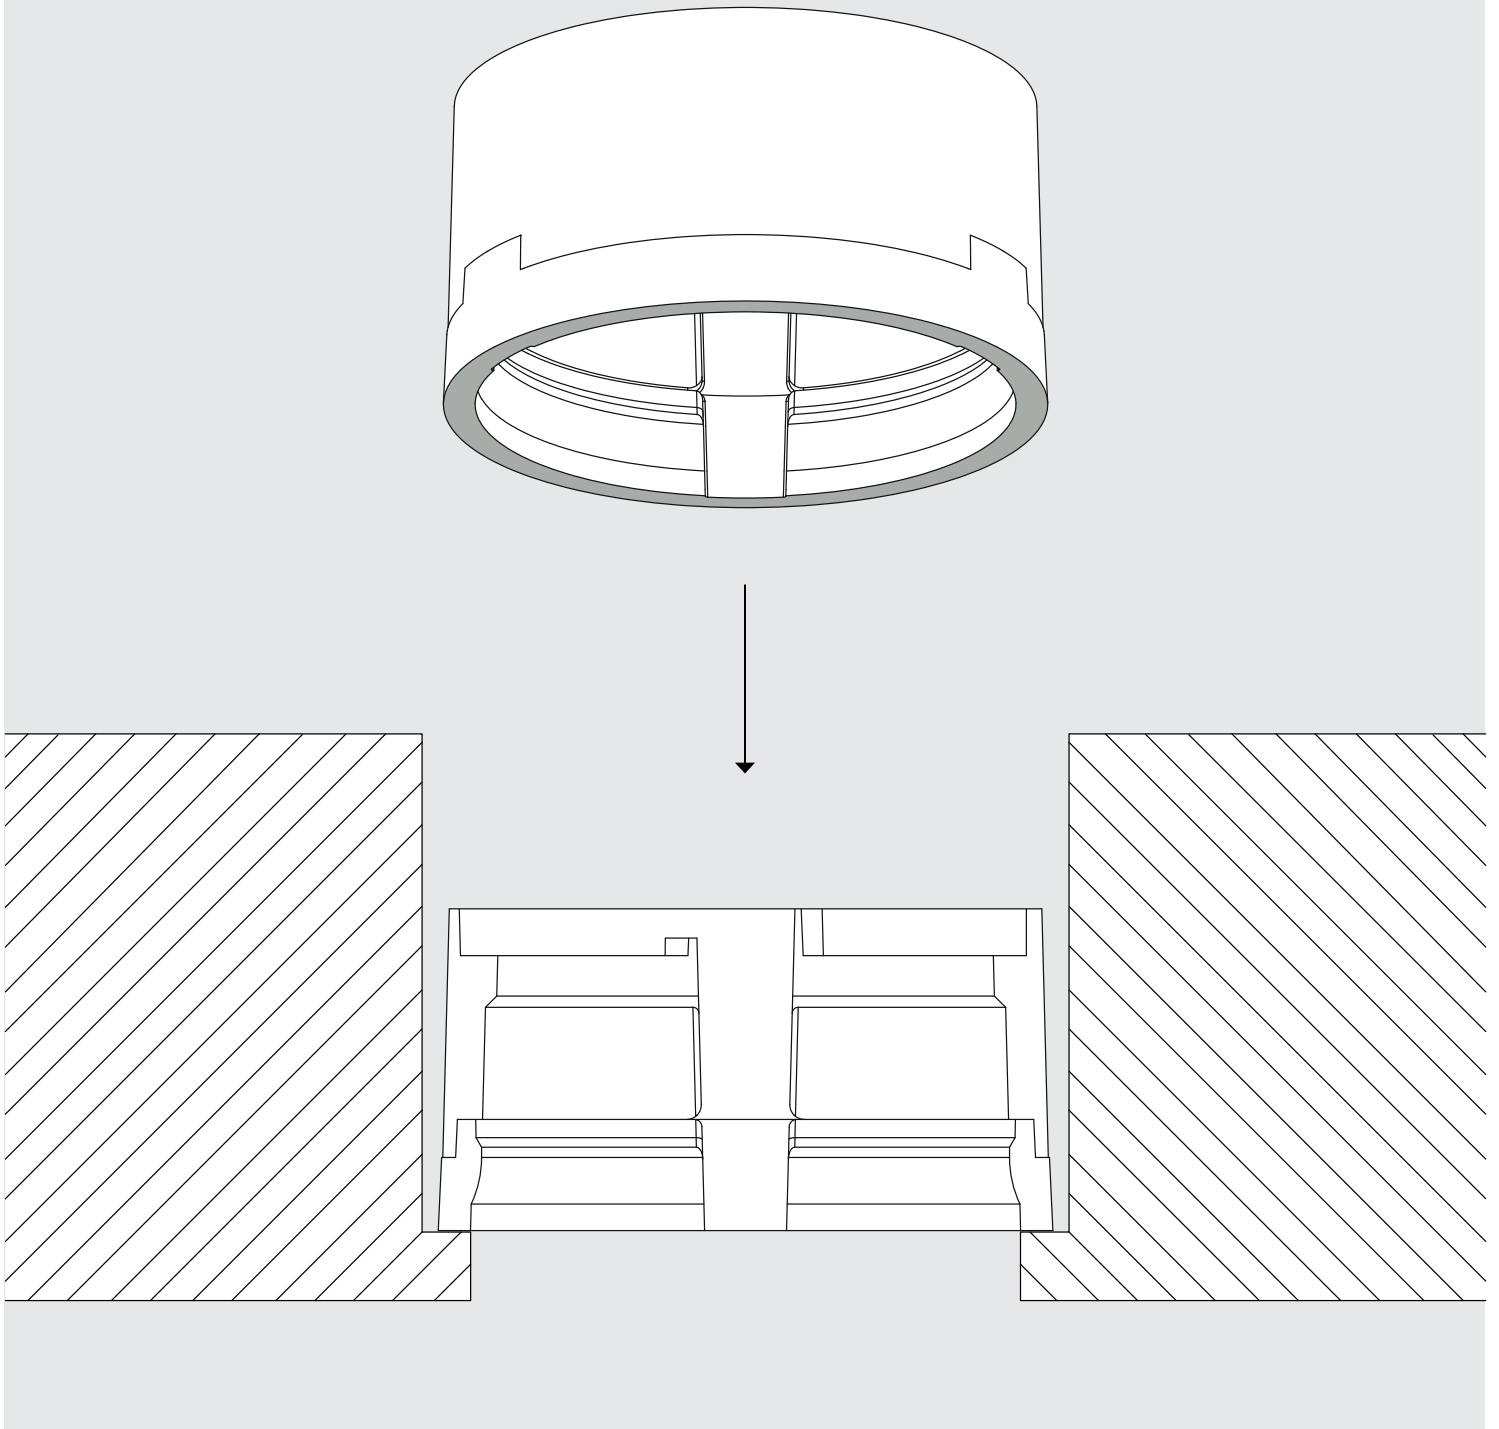


Place the clt ring in the hole, grey side facing down.

4

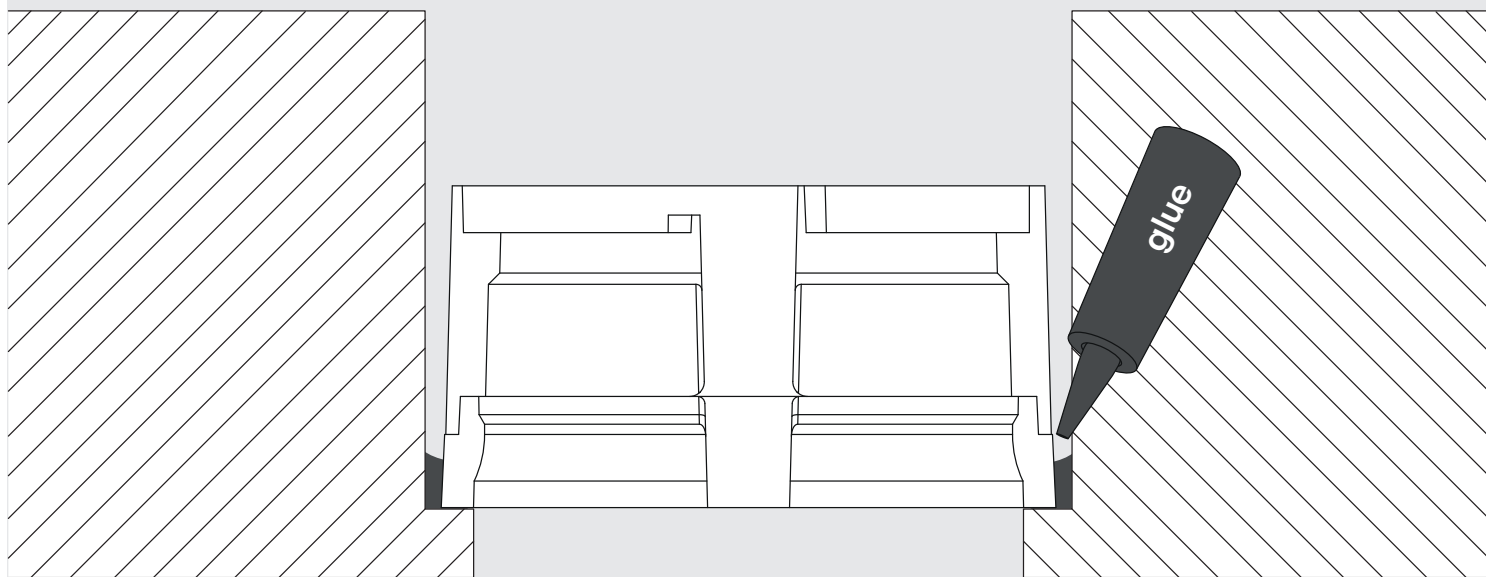

Fixate the ring to the clt with the appropriate glue.

5

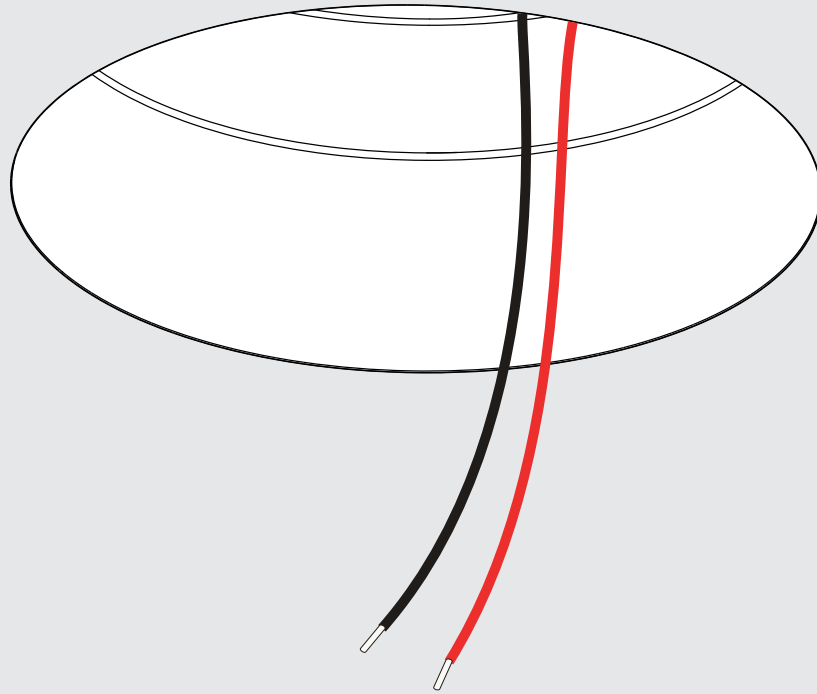

The fixture can now be installed.

thank you for choosing prado



prado.com

Installation must be done by skilled professionals only and instructions must be followed at all times. Warranty will not apply in case of wrongful use or if unskilled personnel attempts to repair a product.