

# csc ring Ø2-1/4"

## installation instruction

1

8-9/16" 15" 2-3/10"

housing

IC

AT

8-9/16" 15" 3-7/16"

housing

IC

AT

8-9/16" 15-7/10" 2-3/10"

housing

NIC


2-9/16" 9-11/16" 2-1/8"

remodel


IJB

Install the appropriate IC/driver box.

2

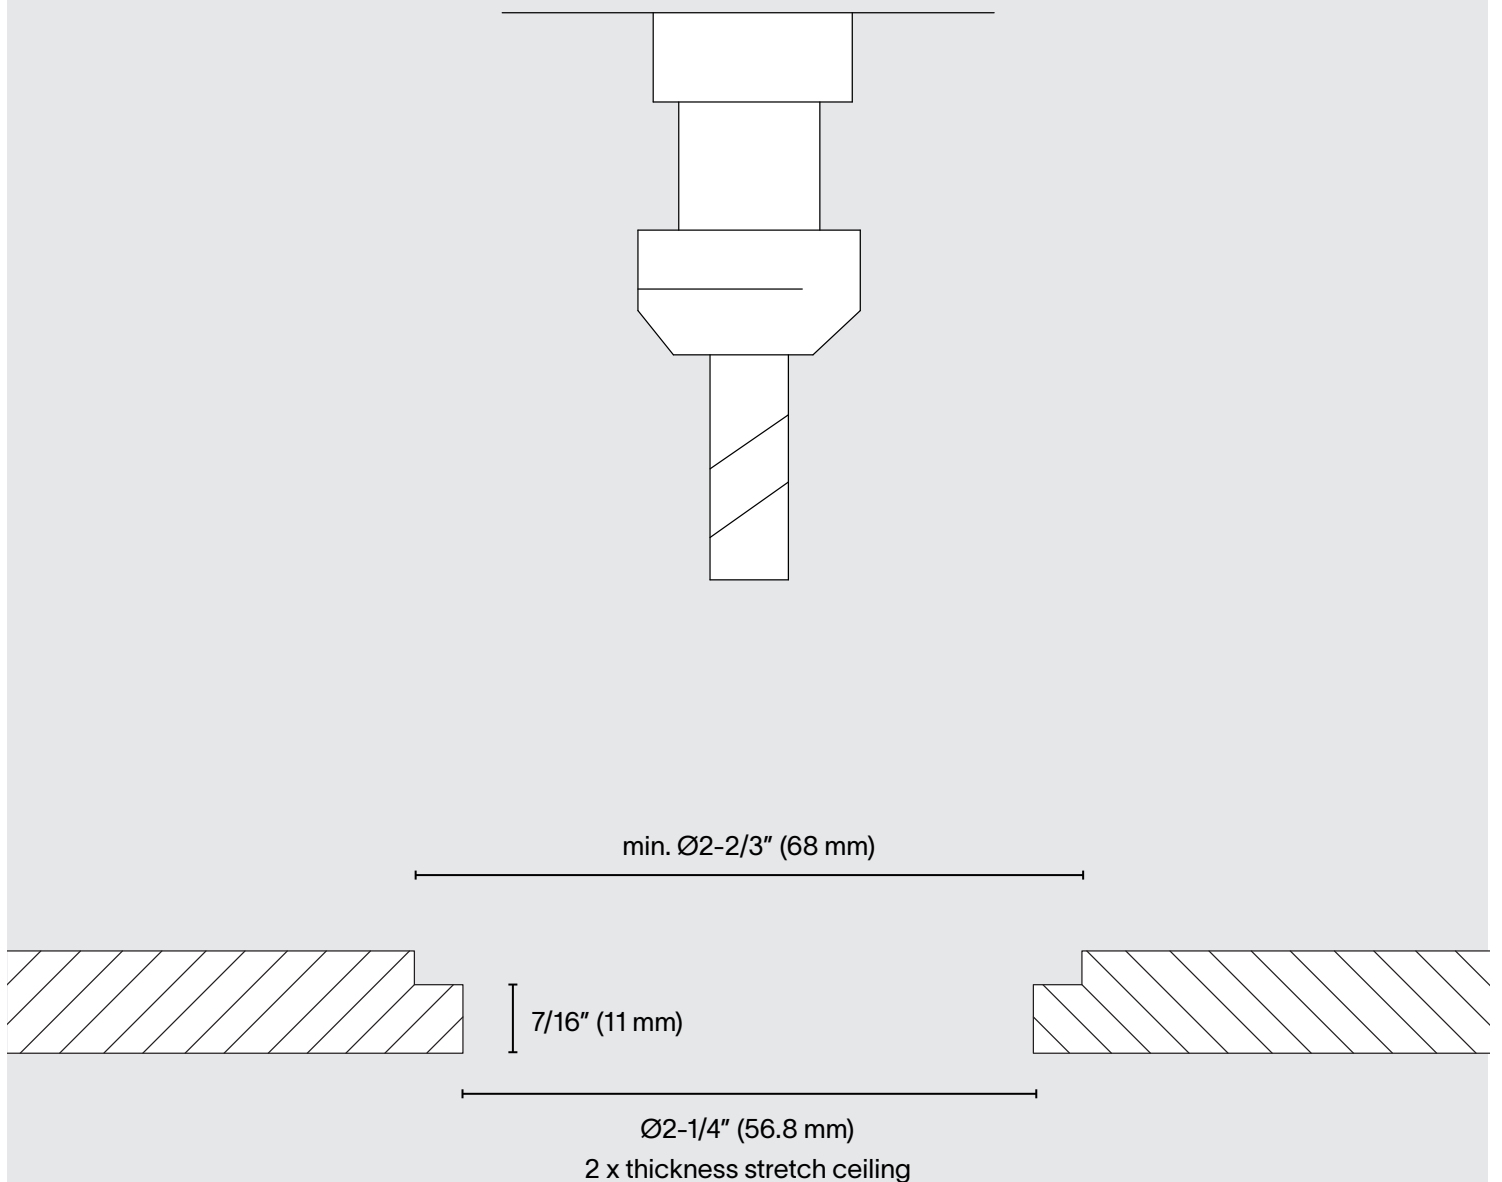


Mill a round hole with the above dimensions in a wooden base (not supplied) (max. fabric thickness:  $3/64'' (1.2 \text{ mm})$ ).

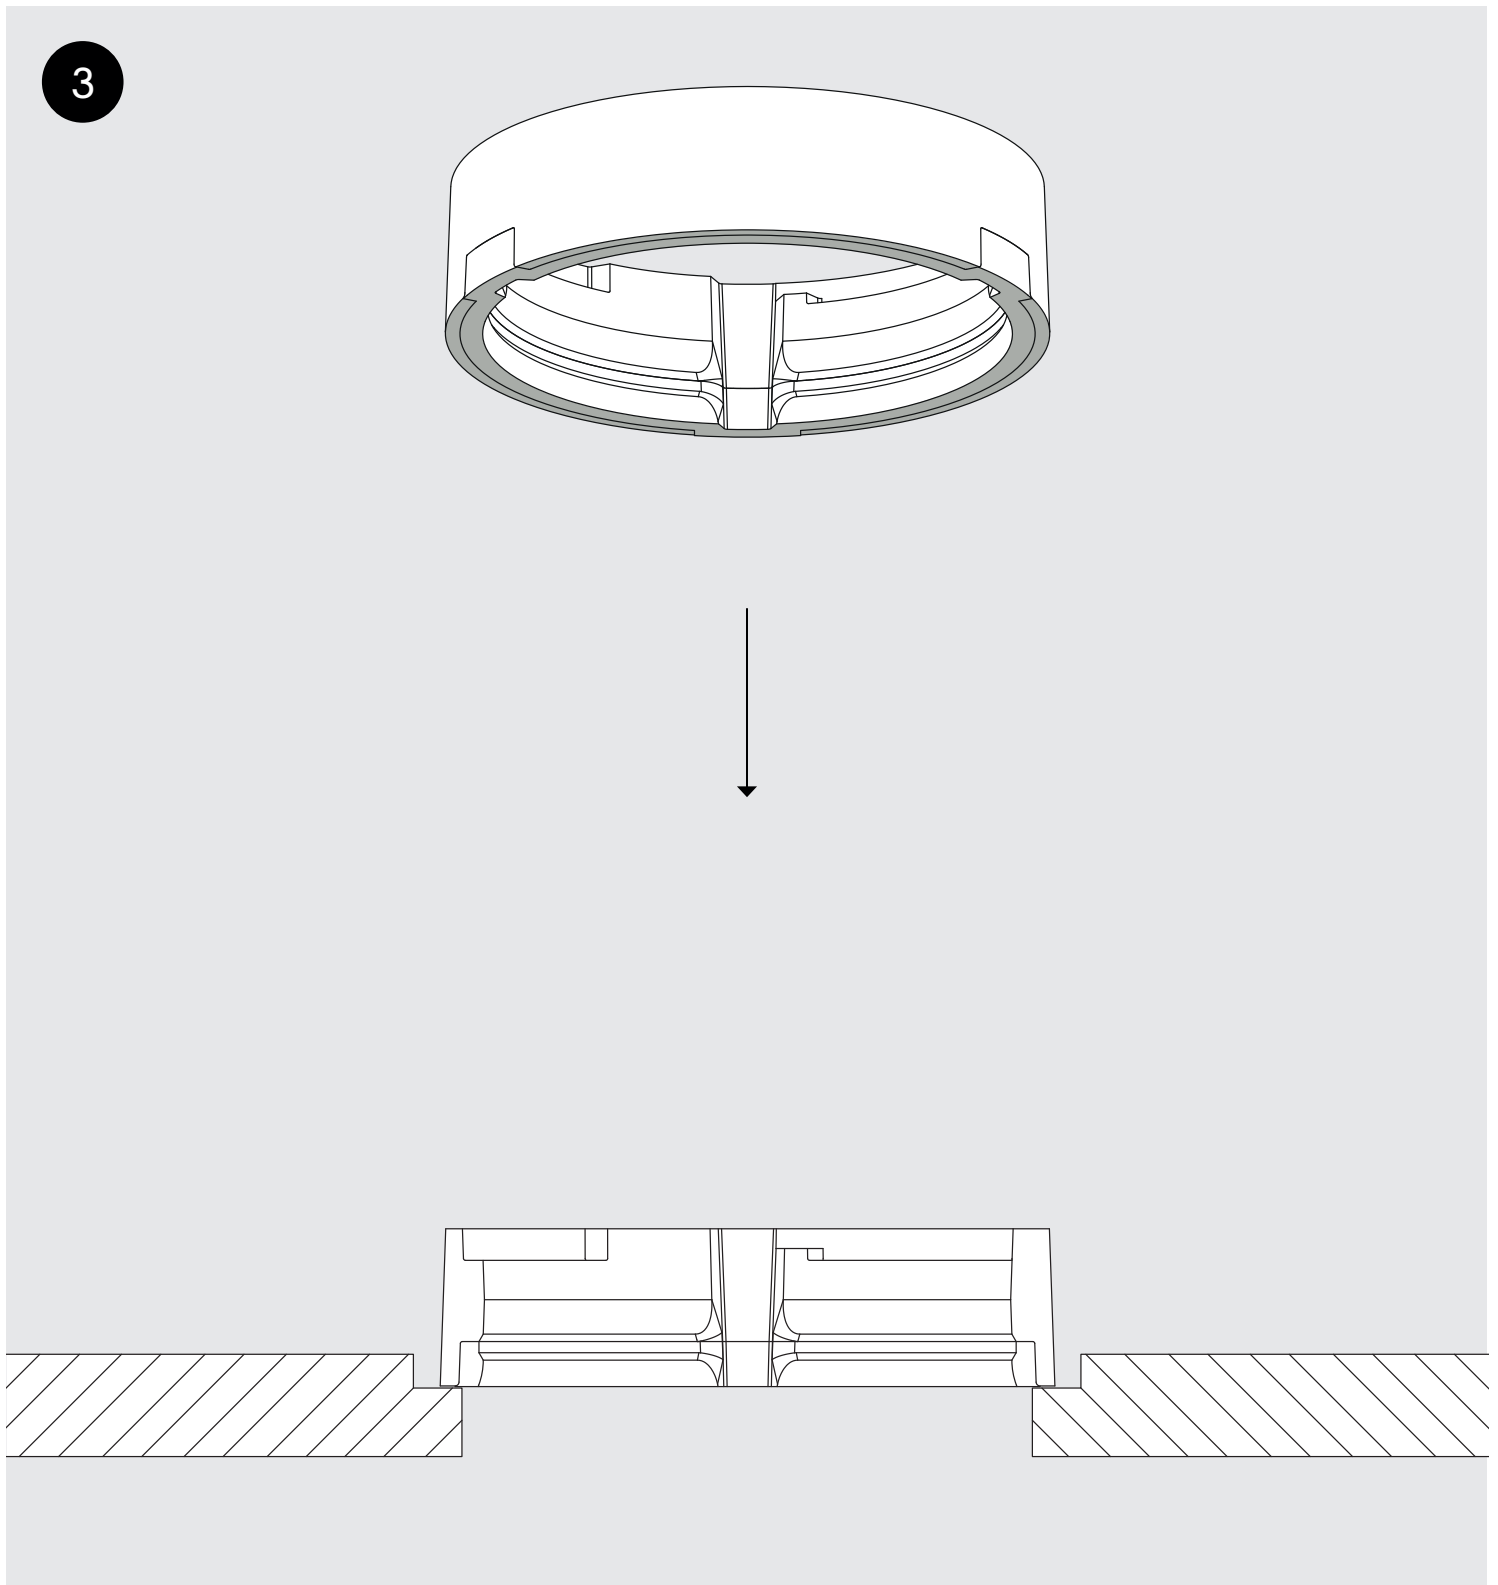


Place the csc ring in the hole, grey side facing down.

4

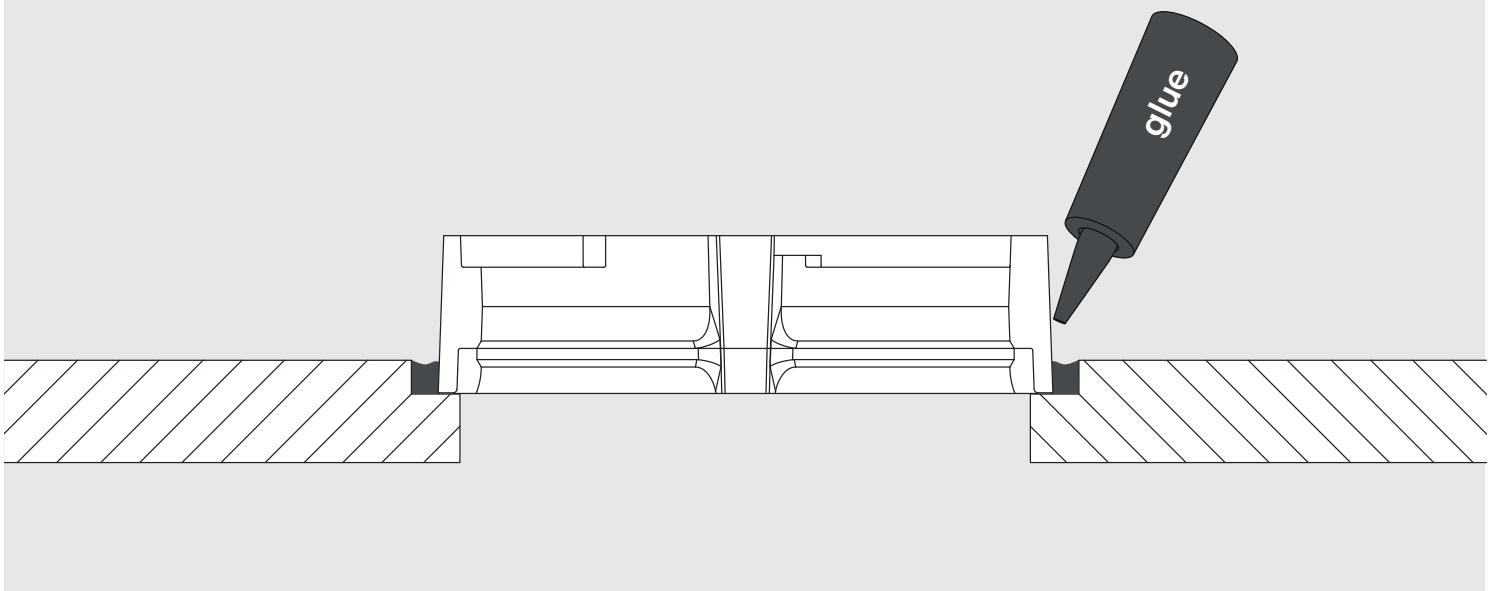


Fixate the csc ring to the wooden base with the appropriate glue.

5

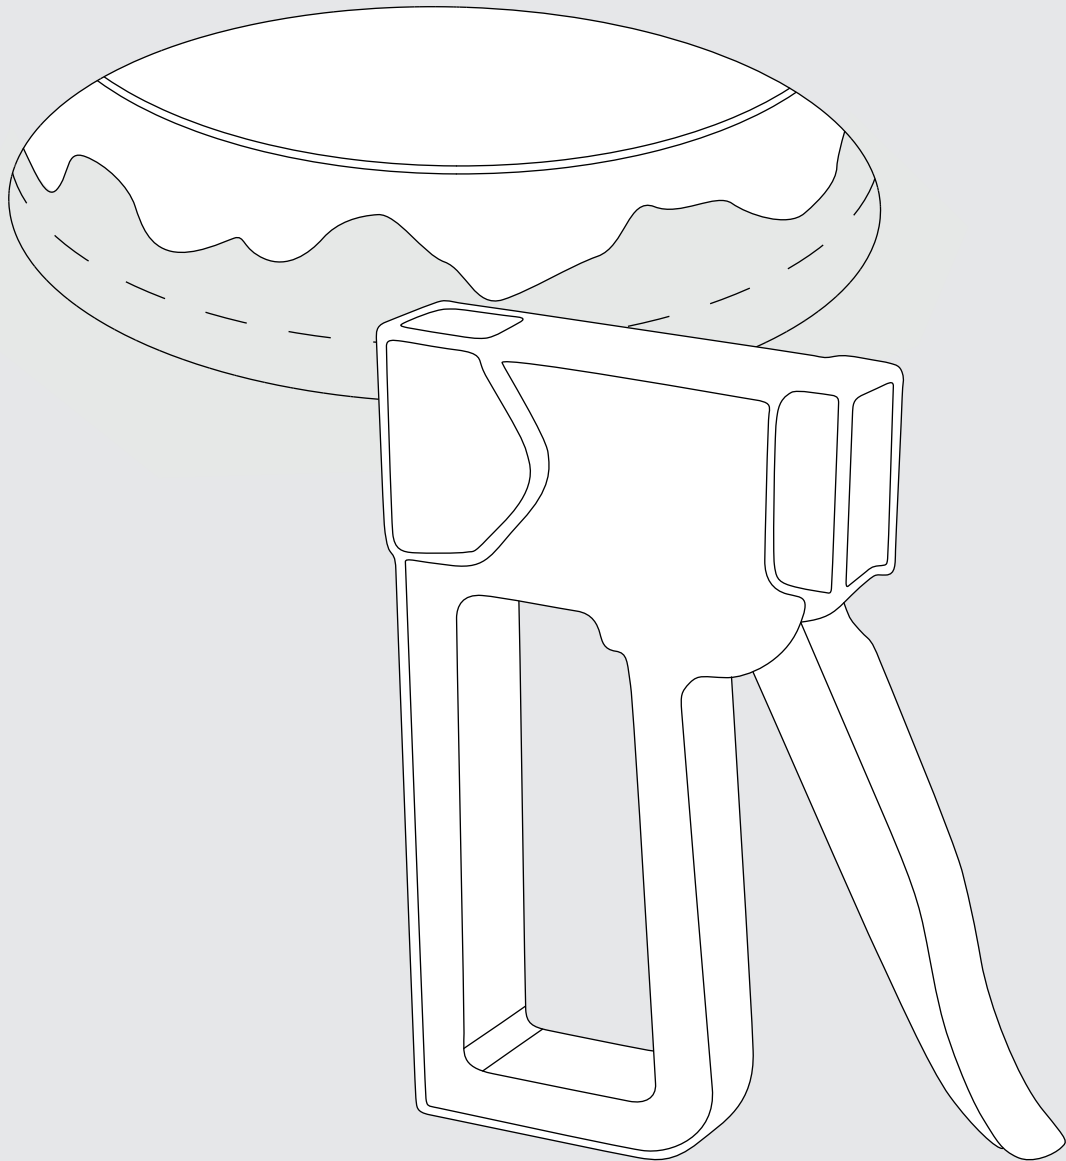

Fasten the cloth in the wooden base (below the csc kit). Cut off the excess fabric (it cannot touch the csc ring).

6

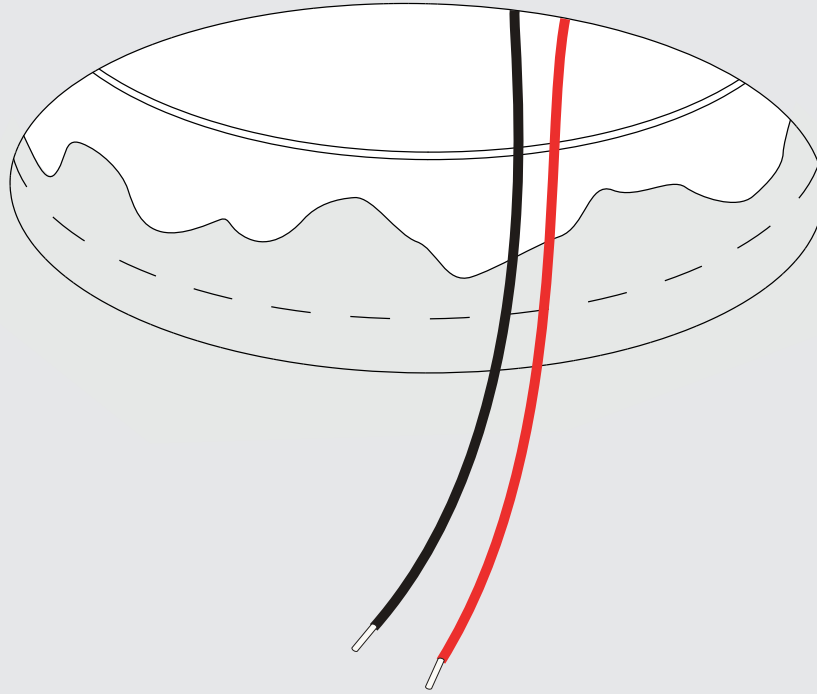

The fixture can now be installed.

thank you for choosing prado



prado.com

Installation must be done by skilled professionals only and instructions must be followed at all times. Warranty will not apply in case of wrongful use or if unskilled personnel attempts to repair a product.