



trim spot adjustable 2.0

installation instruction

1

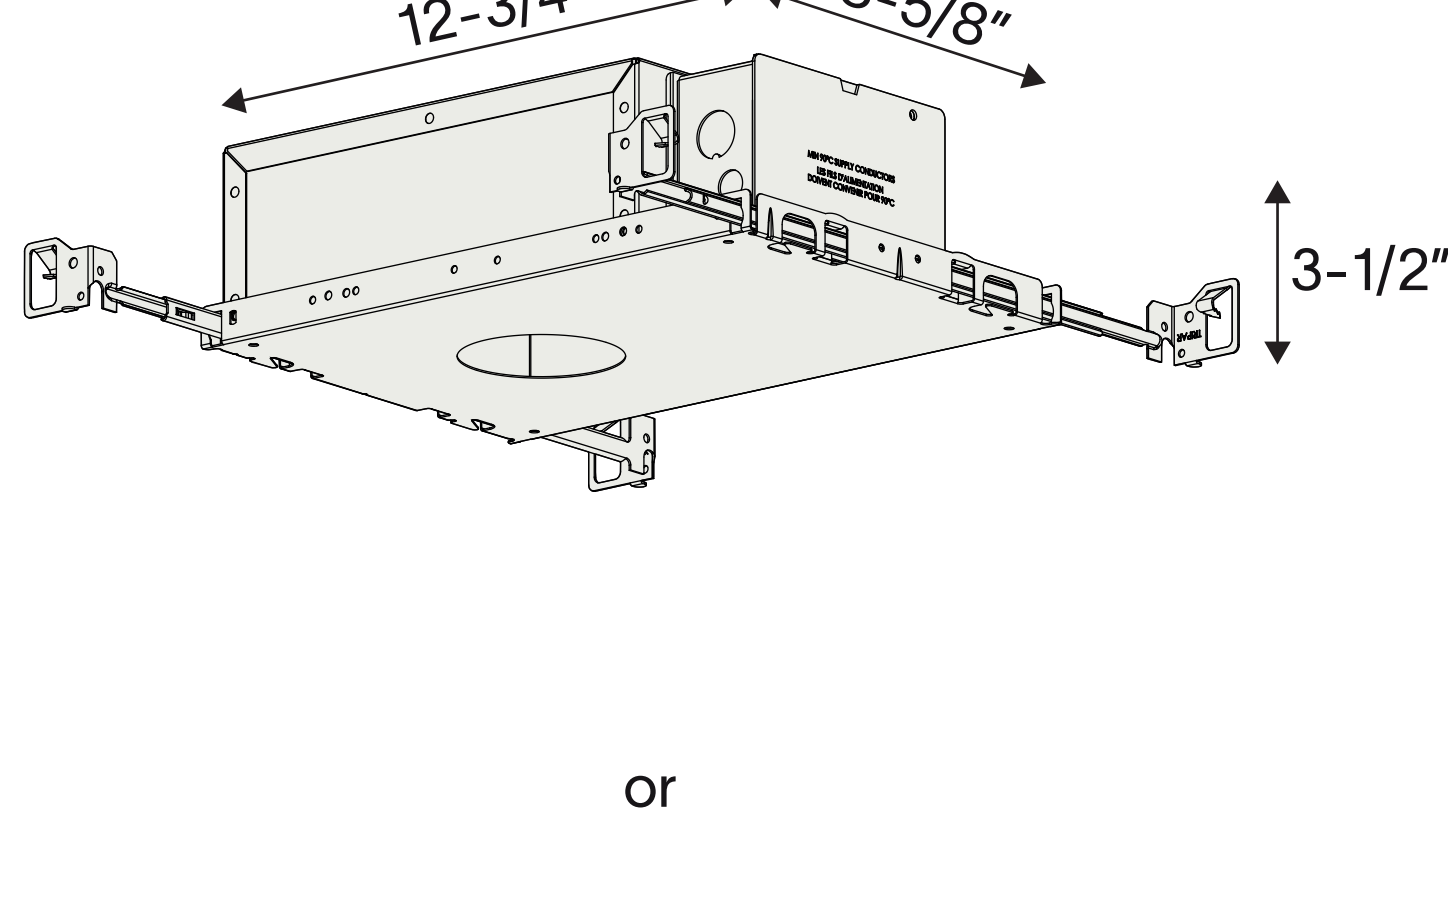


or

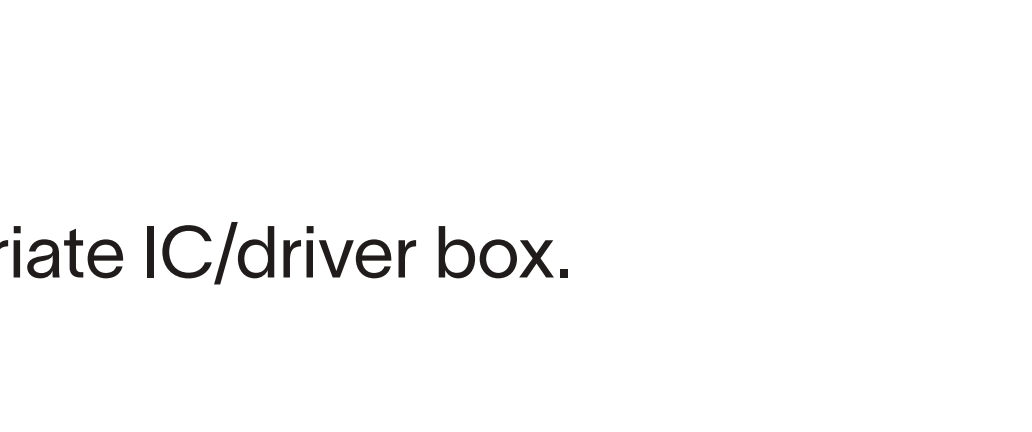



Install the appropriate IC/driver box.

2

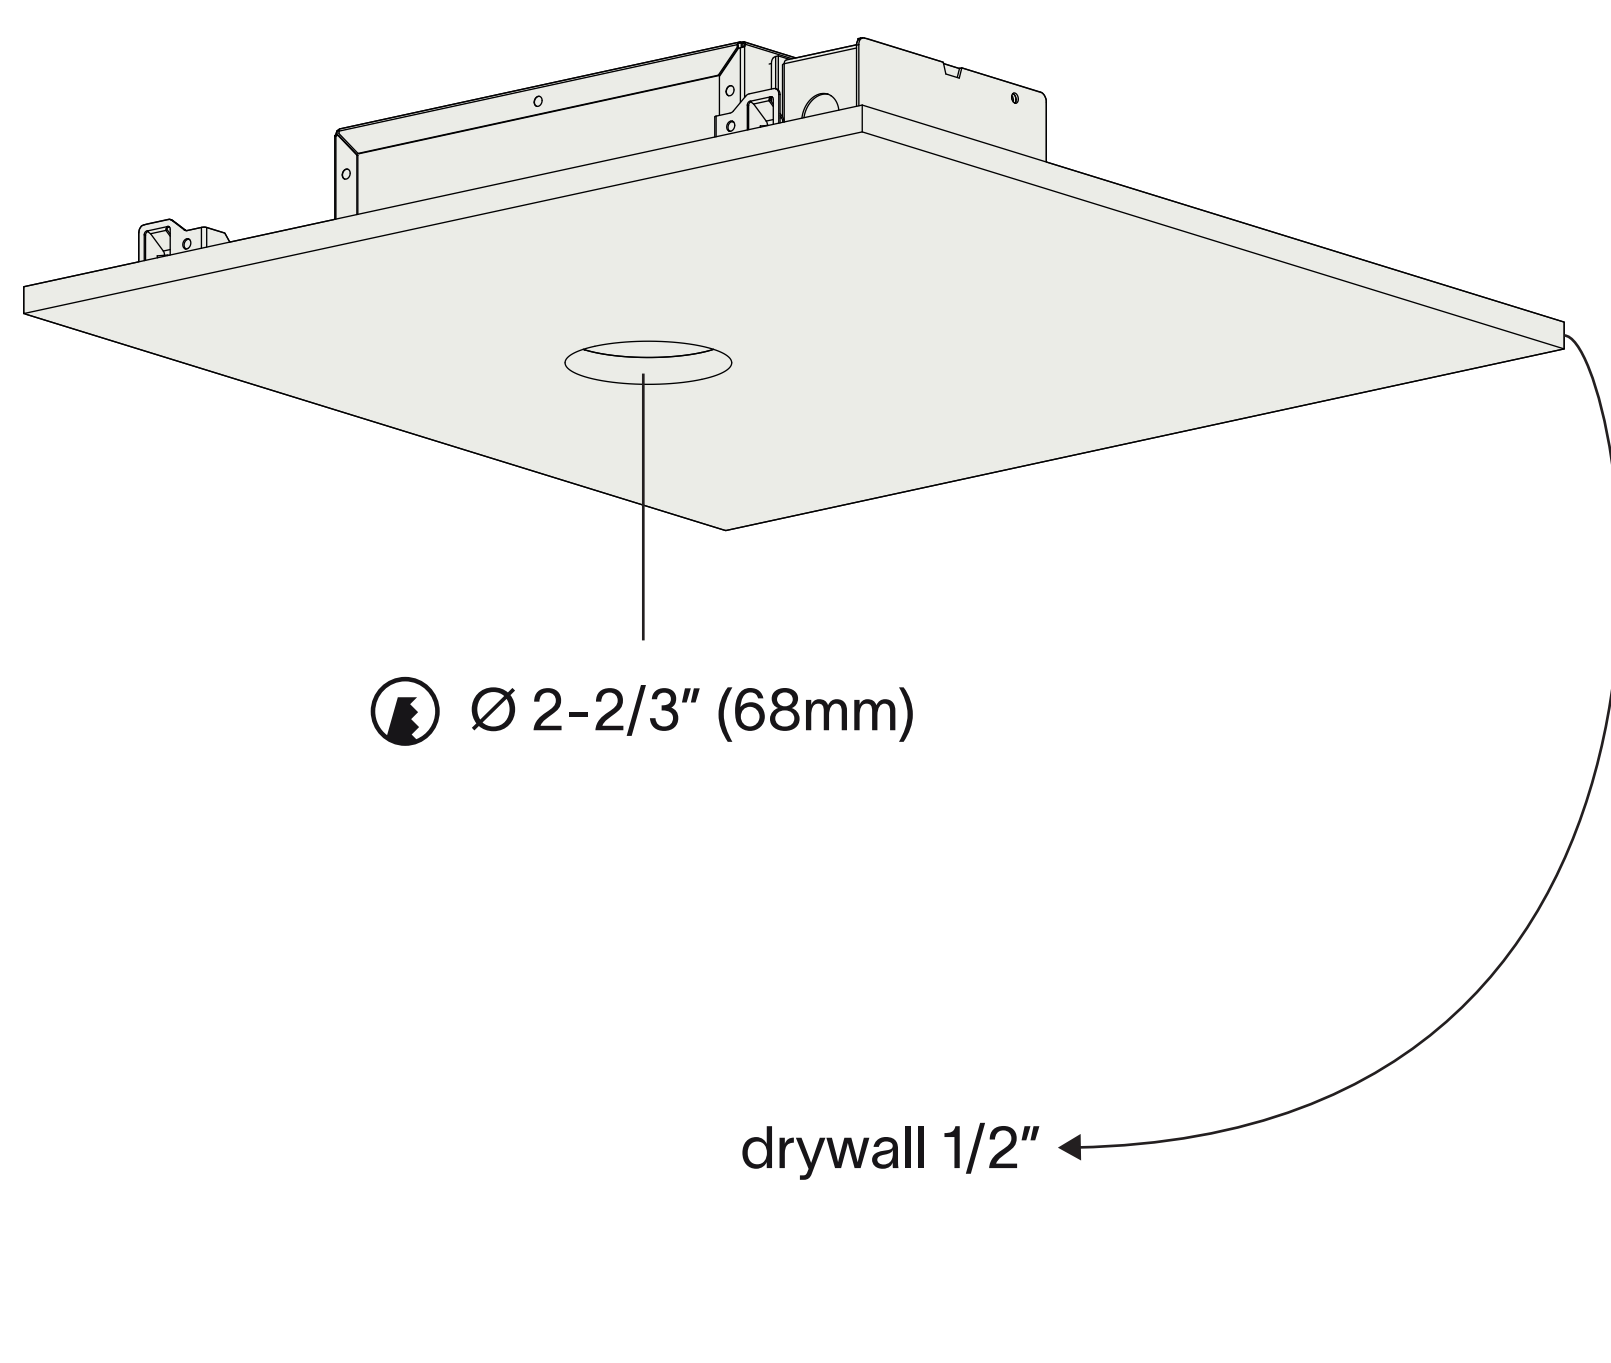


Install the drywall (thickness 1/2") with a round hole (Ø 2-2/3").

3

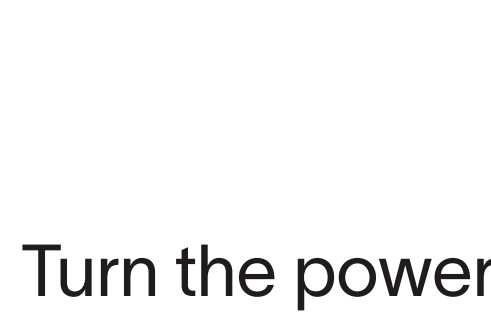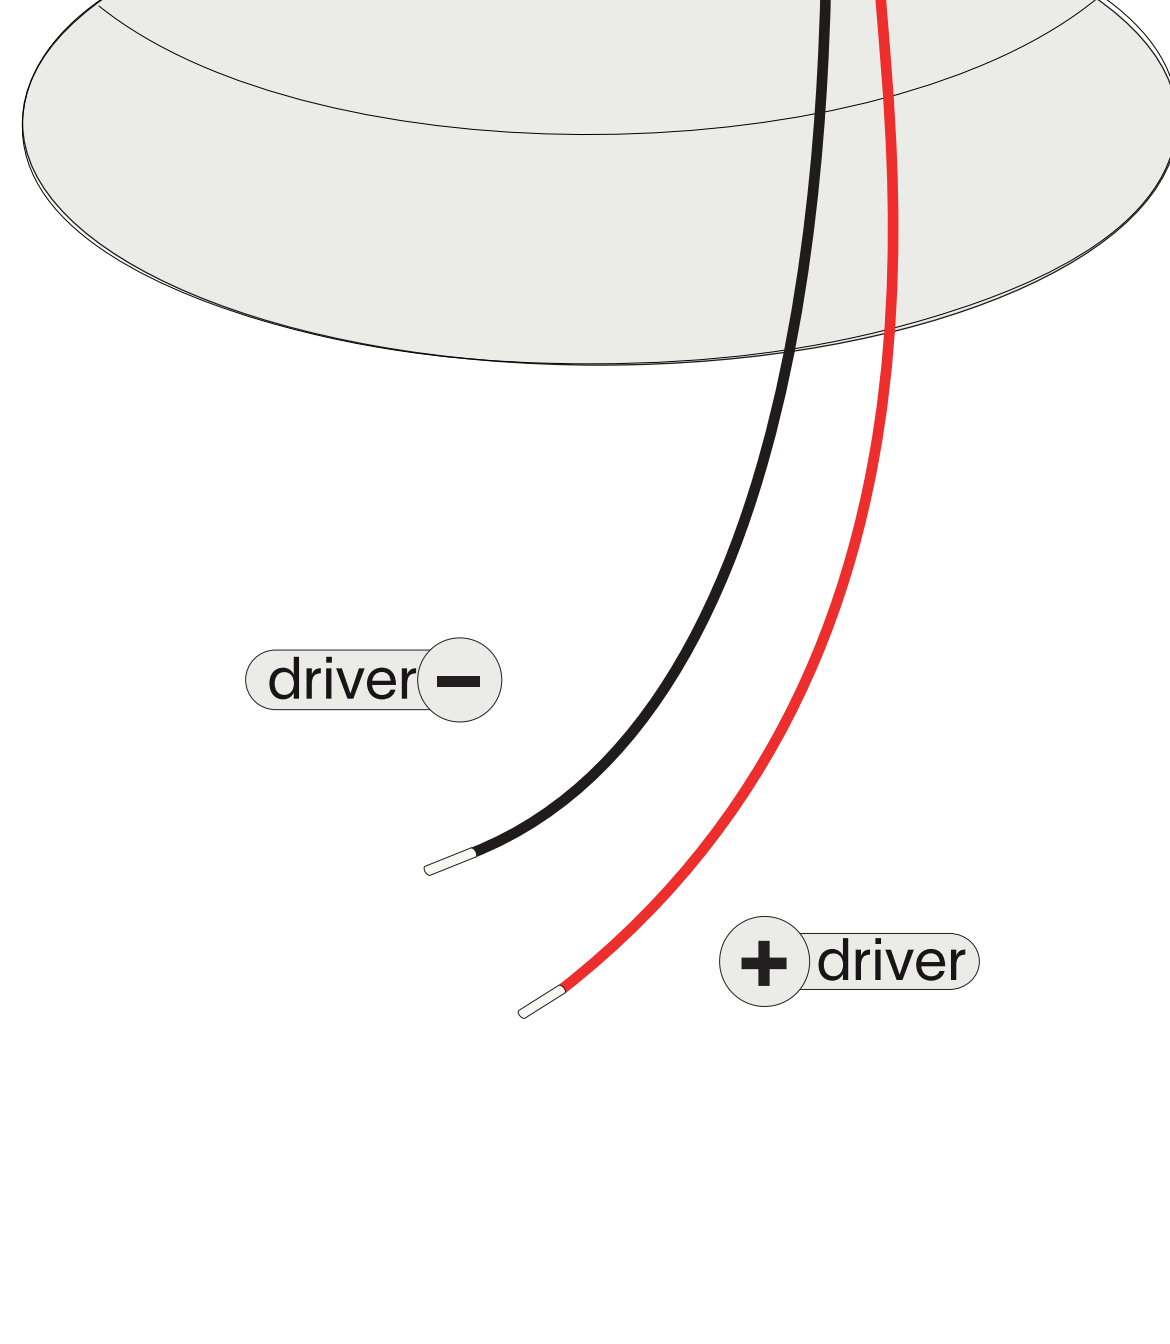


Turn the power off.

4

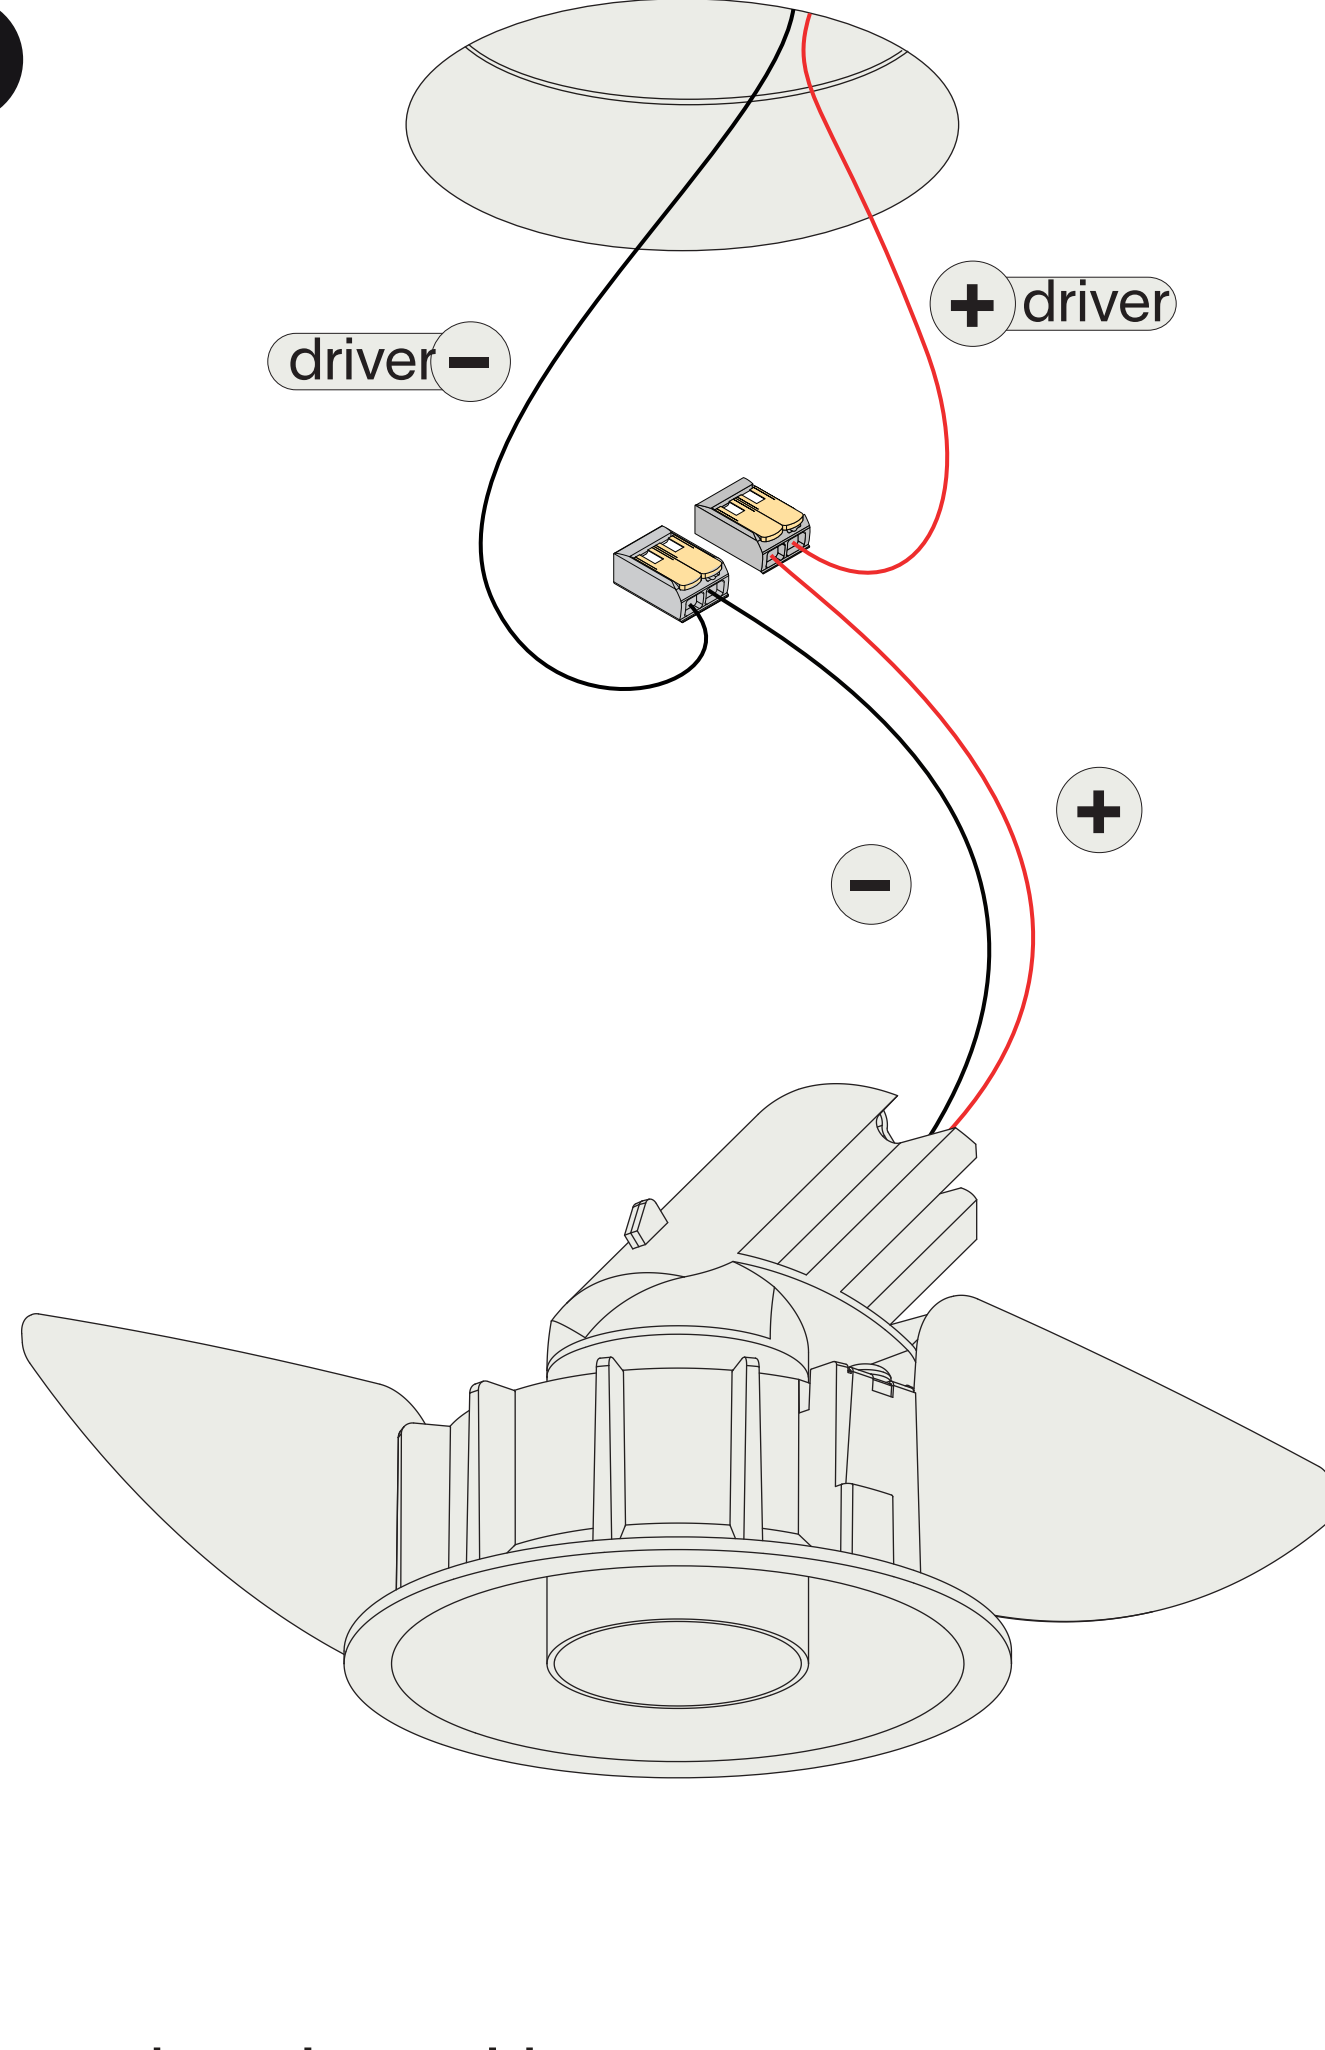


Connect the wires with wago connectors.
For serial connection, respect polarity.
Combine with a prado LED-driver.

5

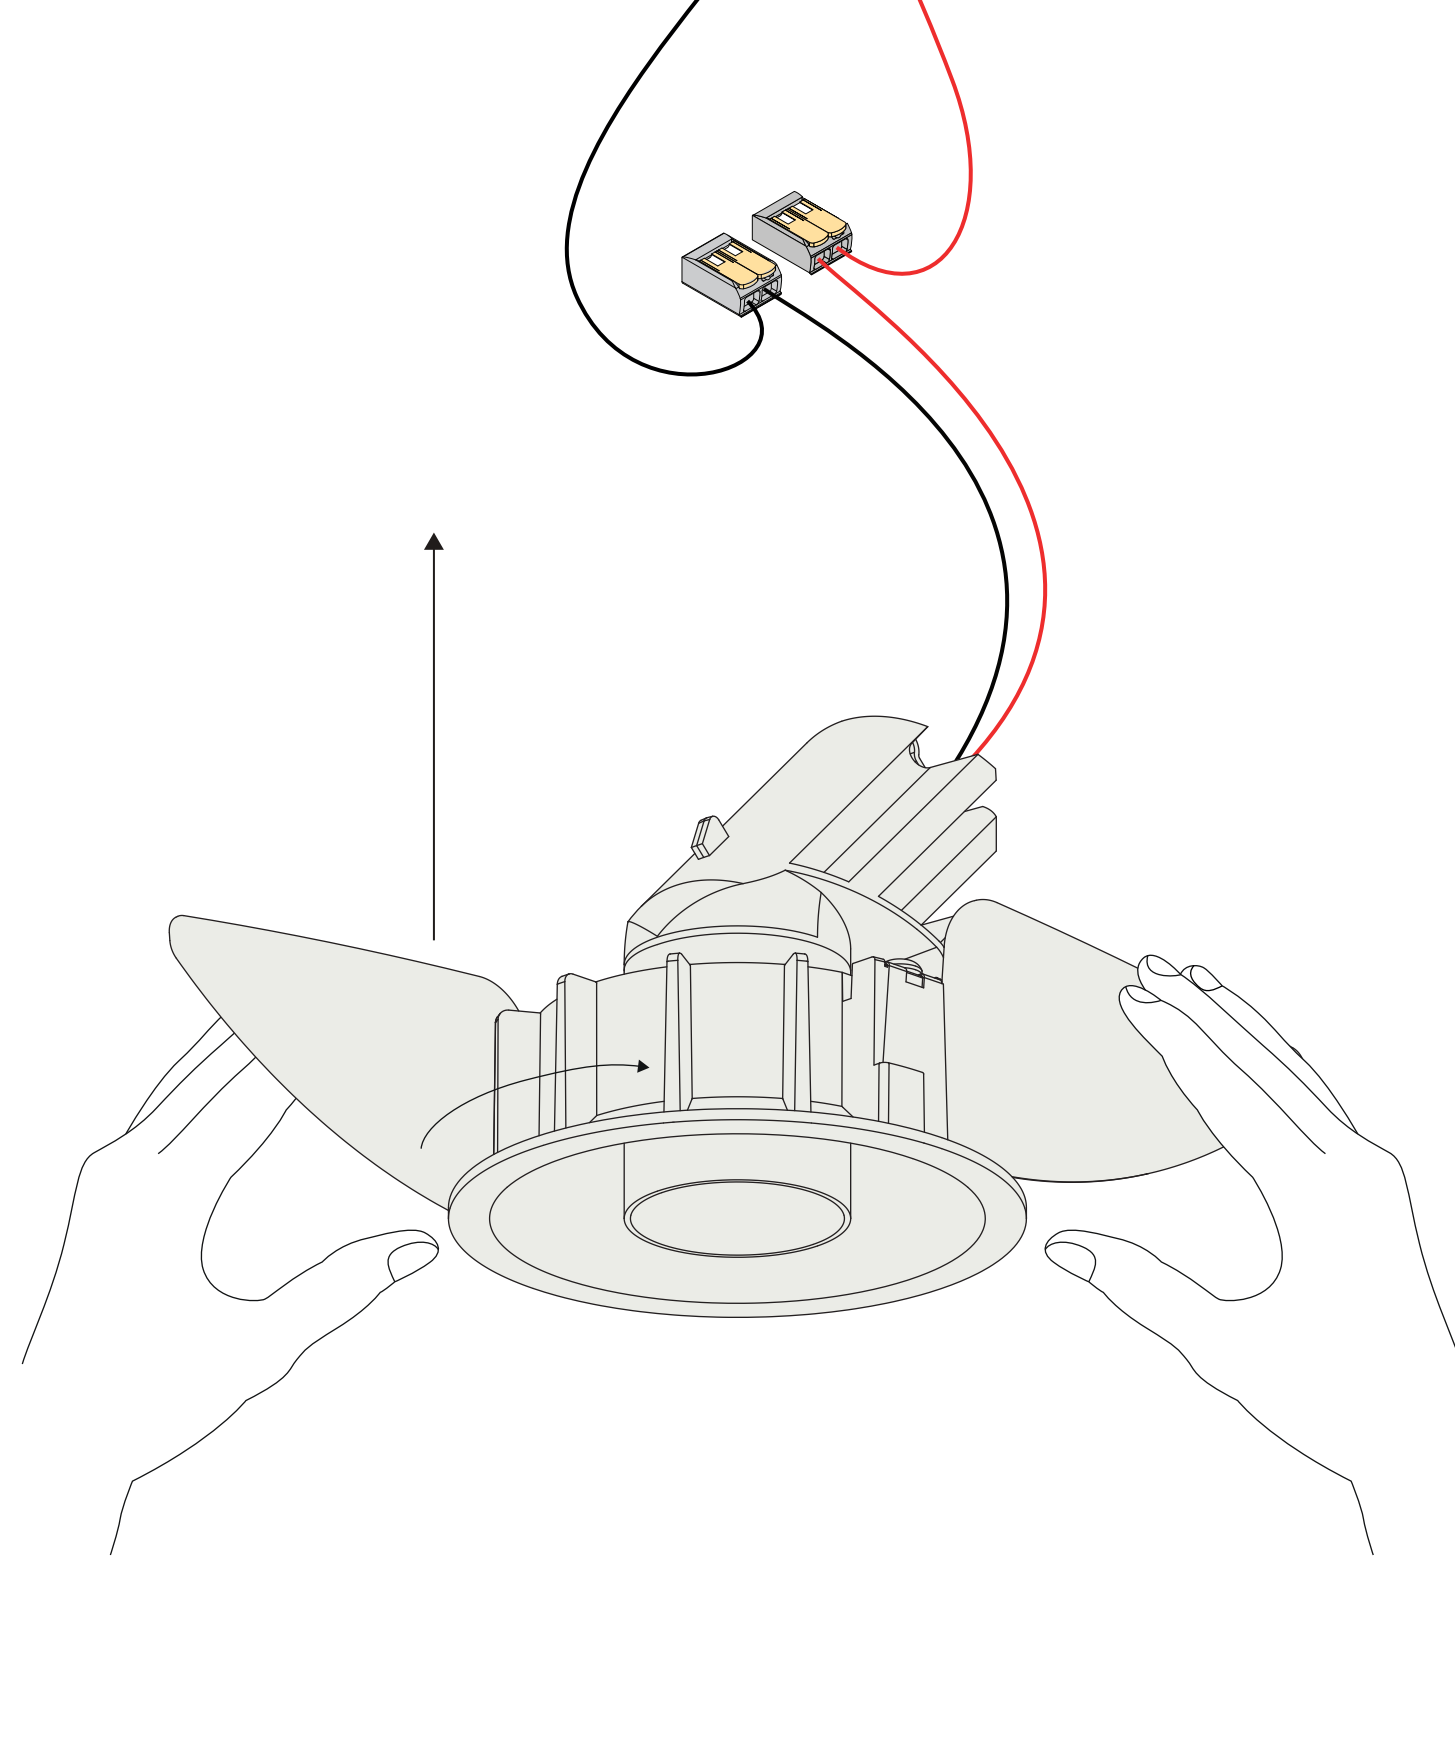

Bend over the springs and push the luminaire into the ceiling.

6

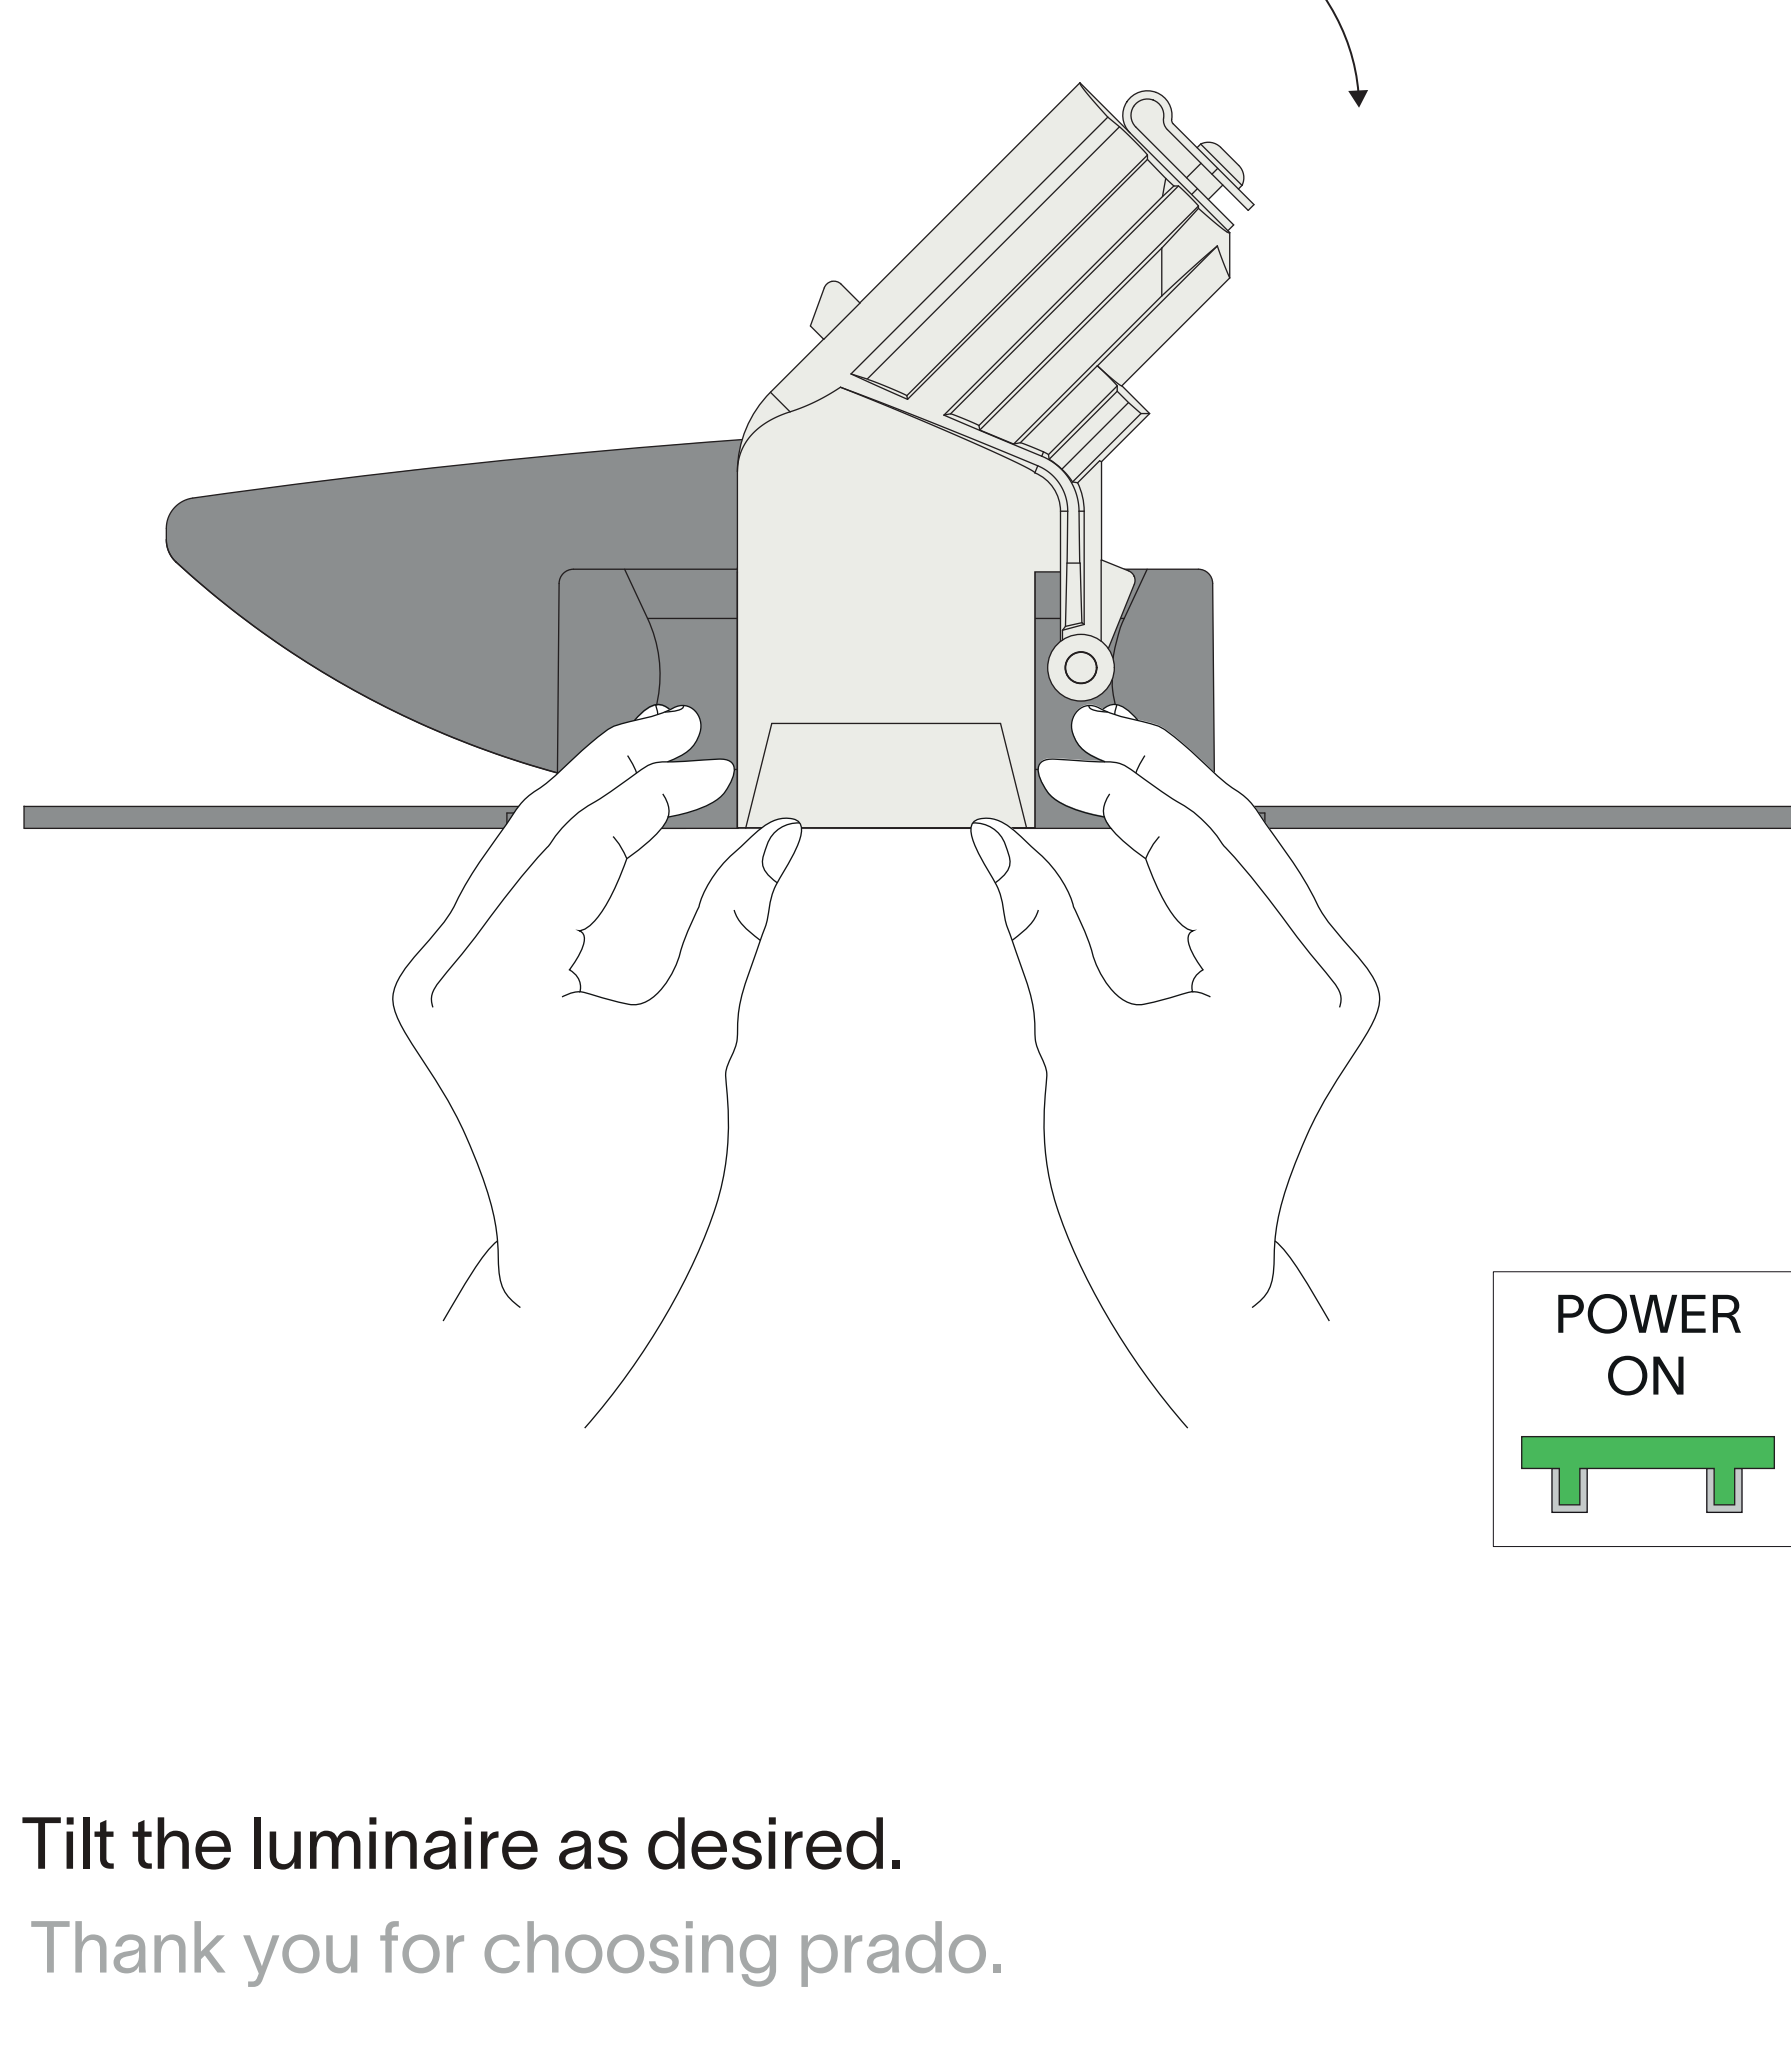

Tilt the luminaire as desired.

Thank you for choosing prado.

