
unifit outlet | single - self-contained
installation instruction

for **installation** go to page 2 (click here)


for **removal** go to page 15 (click here)

1

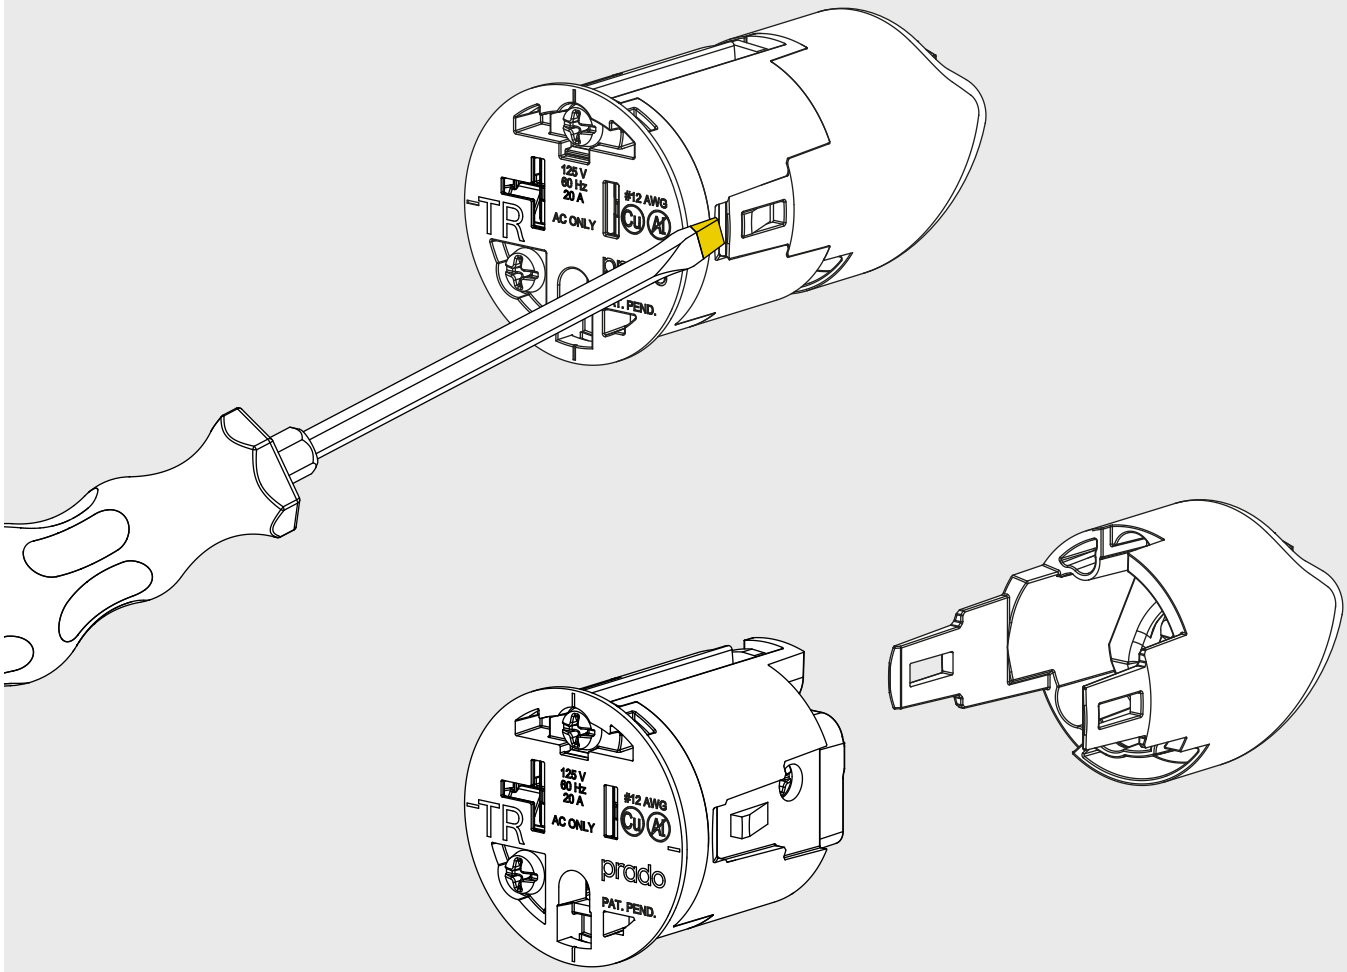

Remove the strain relief.


2

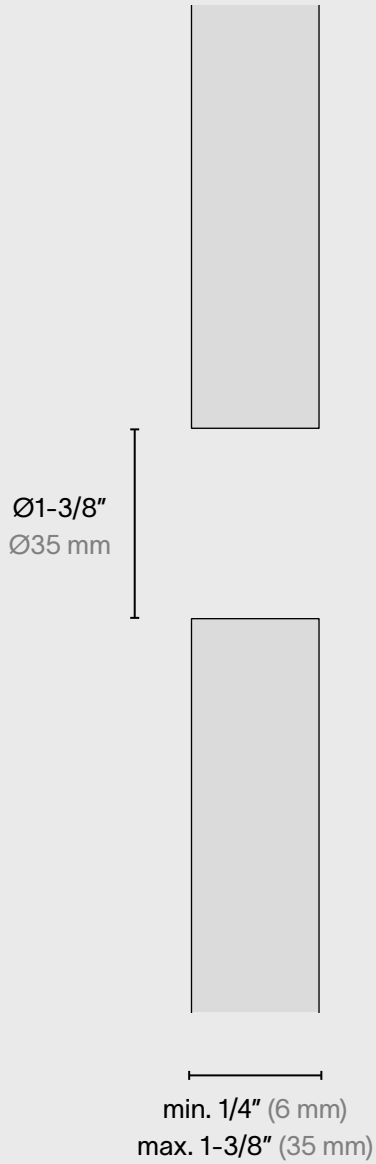


Drill the installation hole and optional countersink.

3

optional flush mount countersink

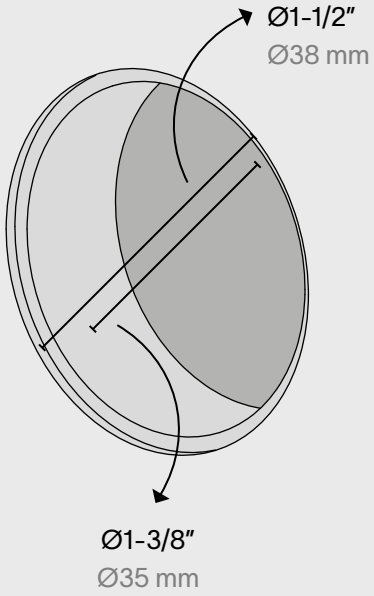


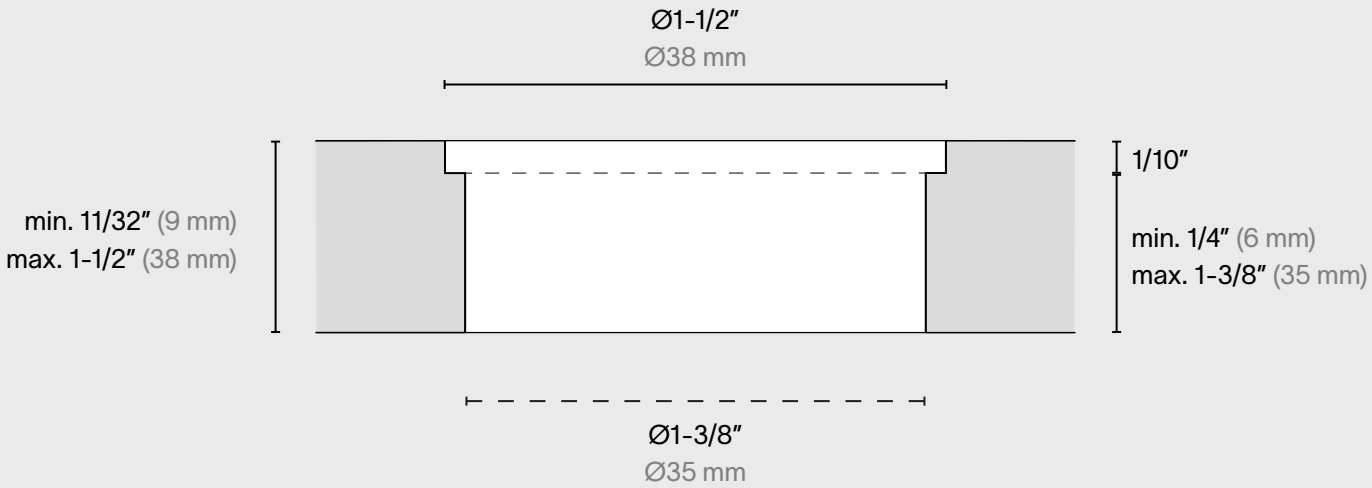


Flush mount countersink.

flush mount countersink guideline


4

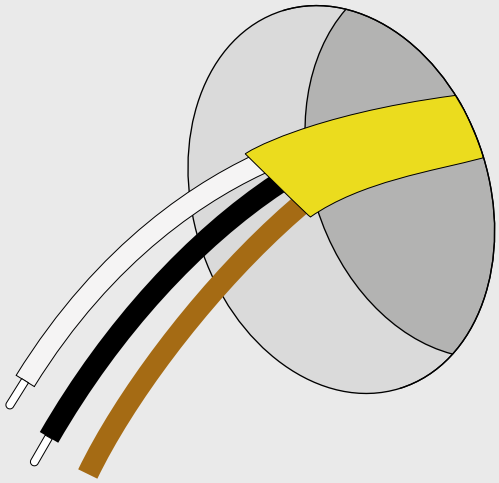

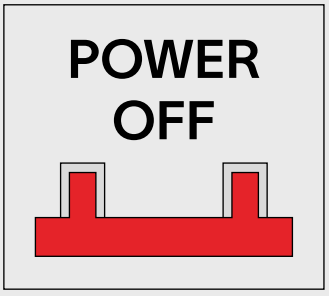

Turn the power off. Installation is possible using an NMC cable (Romex).


5

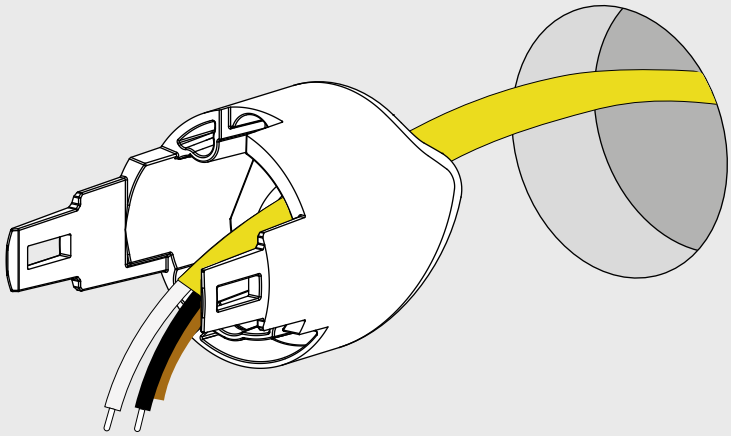


Slide the strain relief over the cable. Make sure the correct cable thickness is used:

- 15A - 12 or 14 AWG
- 20A - 12 AWG only


6

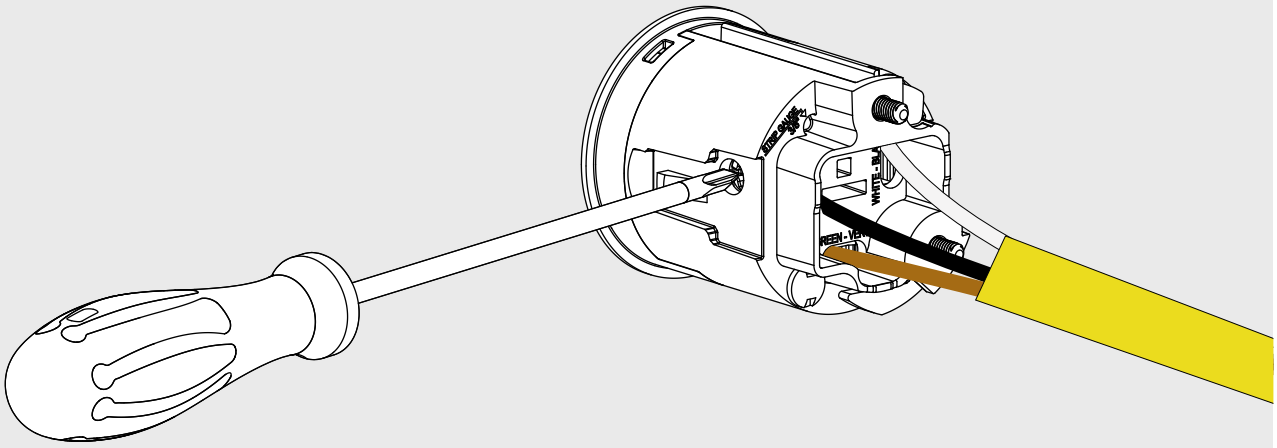

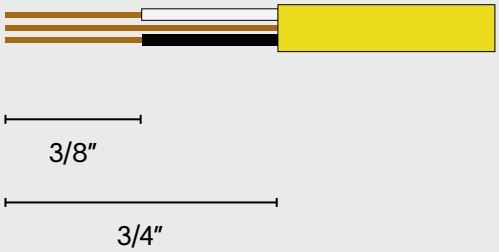


Make all necessary connections, make sure the correct cable thickness is used.

7

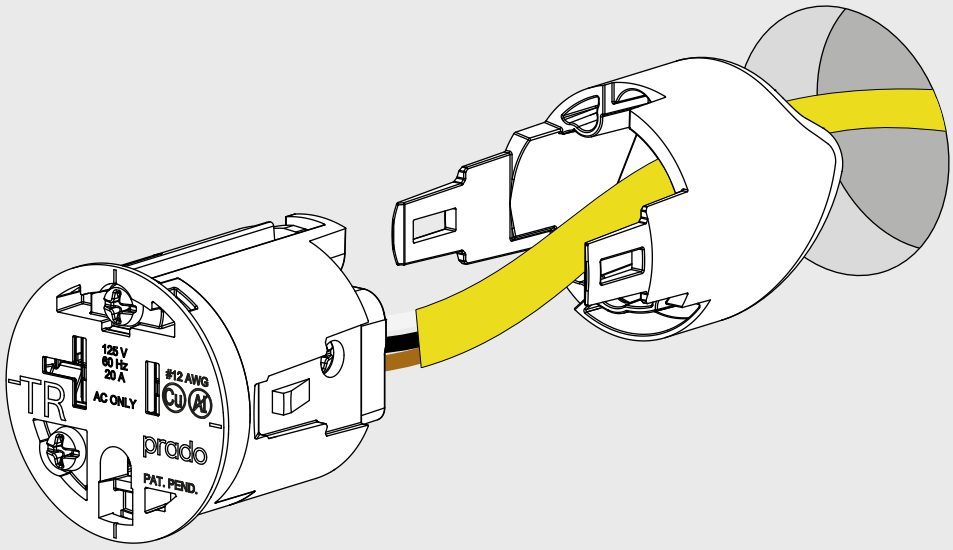


Click the strain relief on the outlet.

8

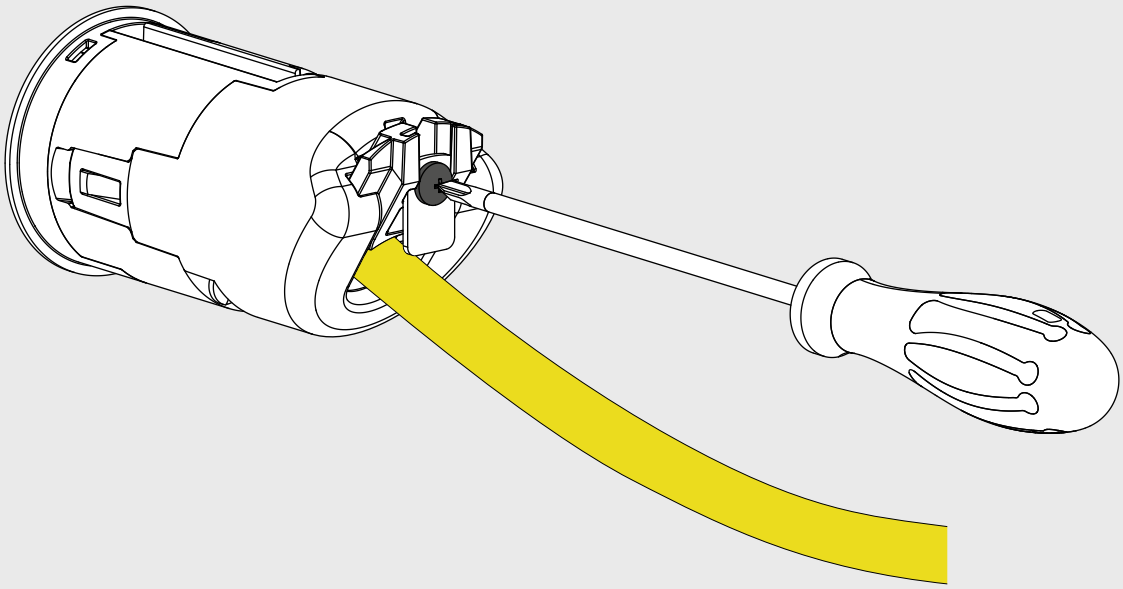


Tighten the strain relief.

9

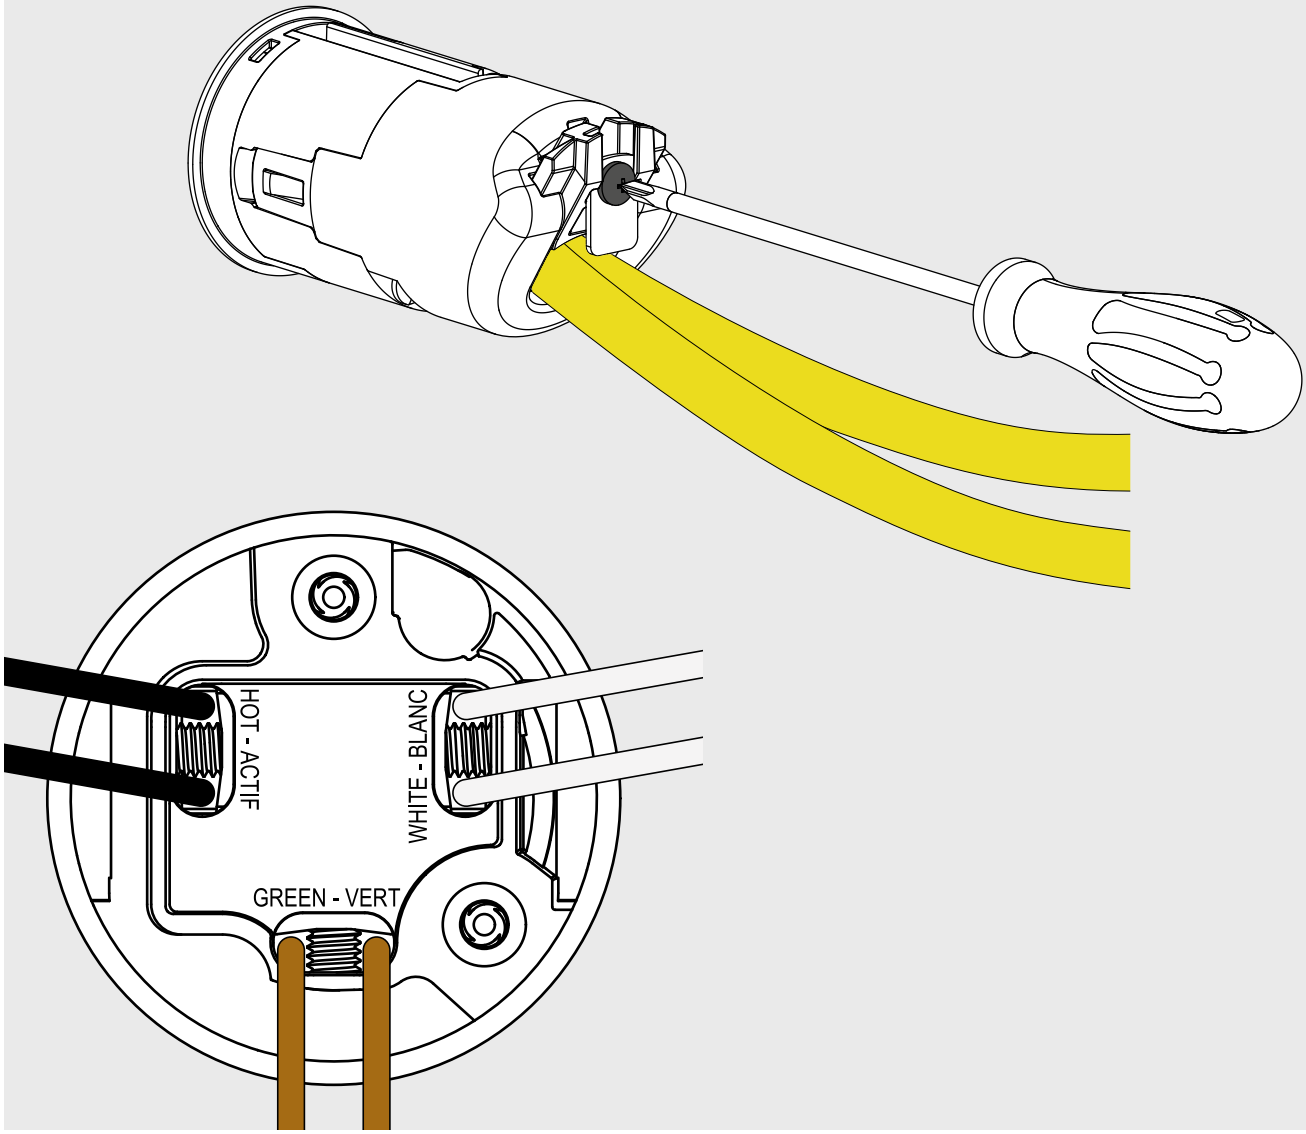


Optional: daisy chaining. Make sure there is always one wire on the right and one wire on the left of the screw.

10

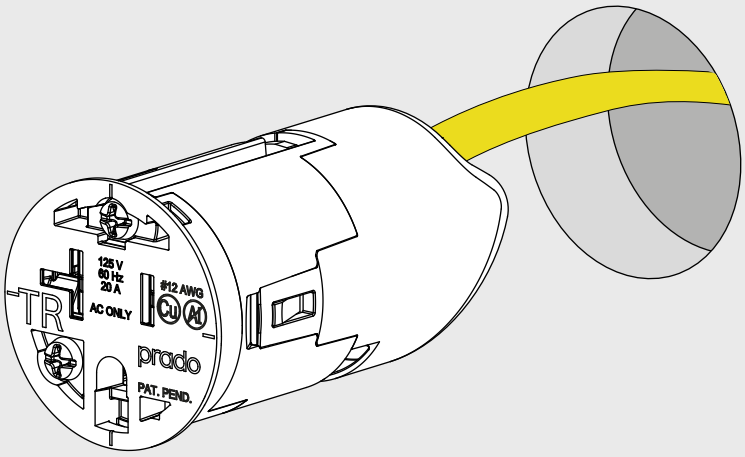


Insert the outlet in the hole.

11

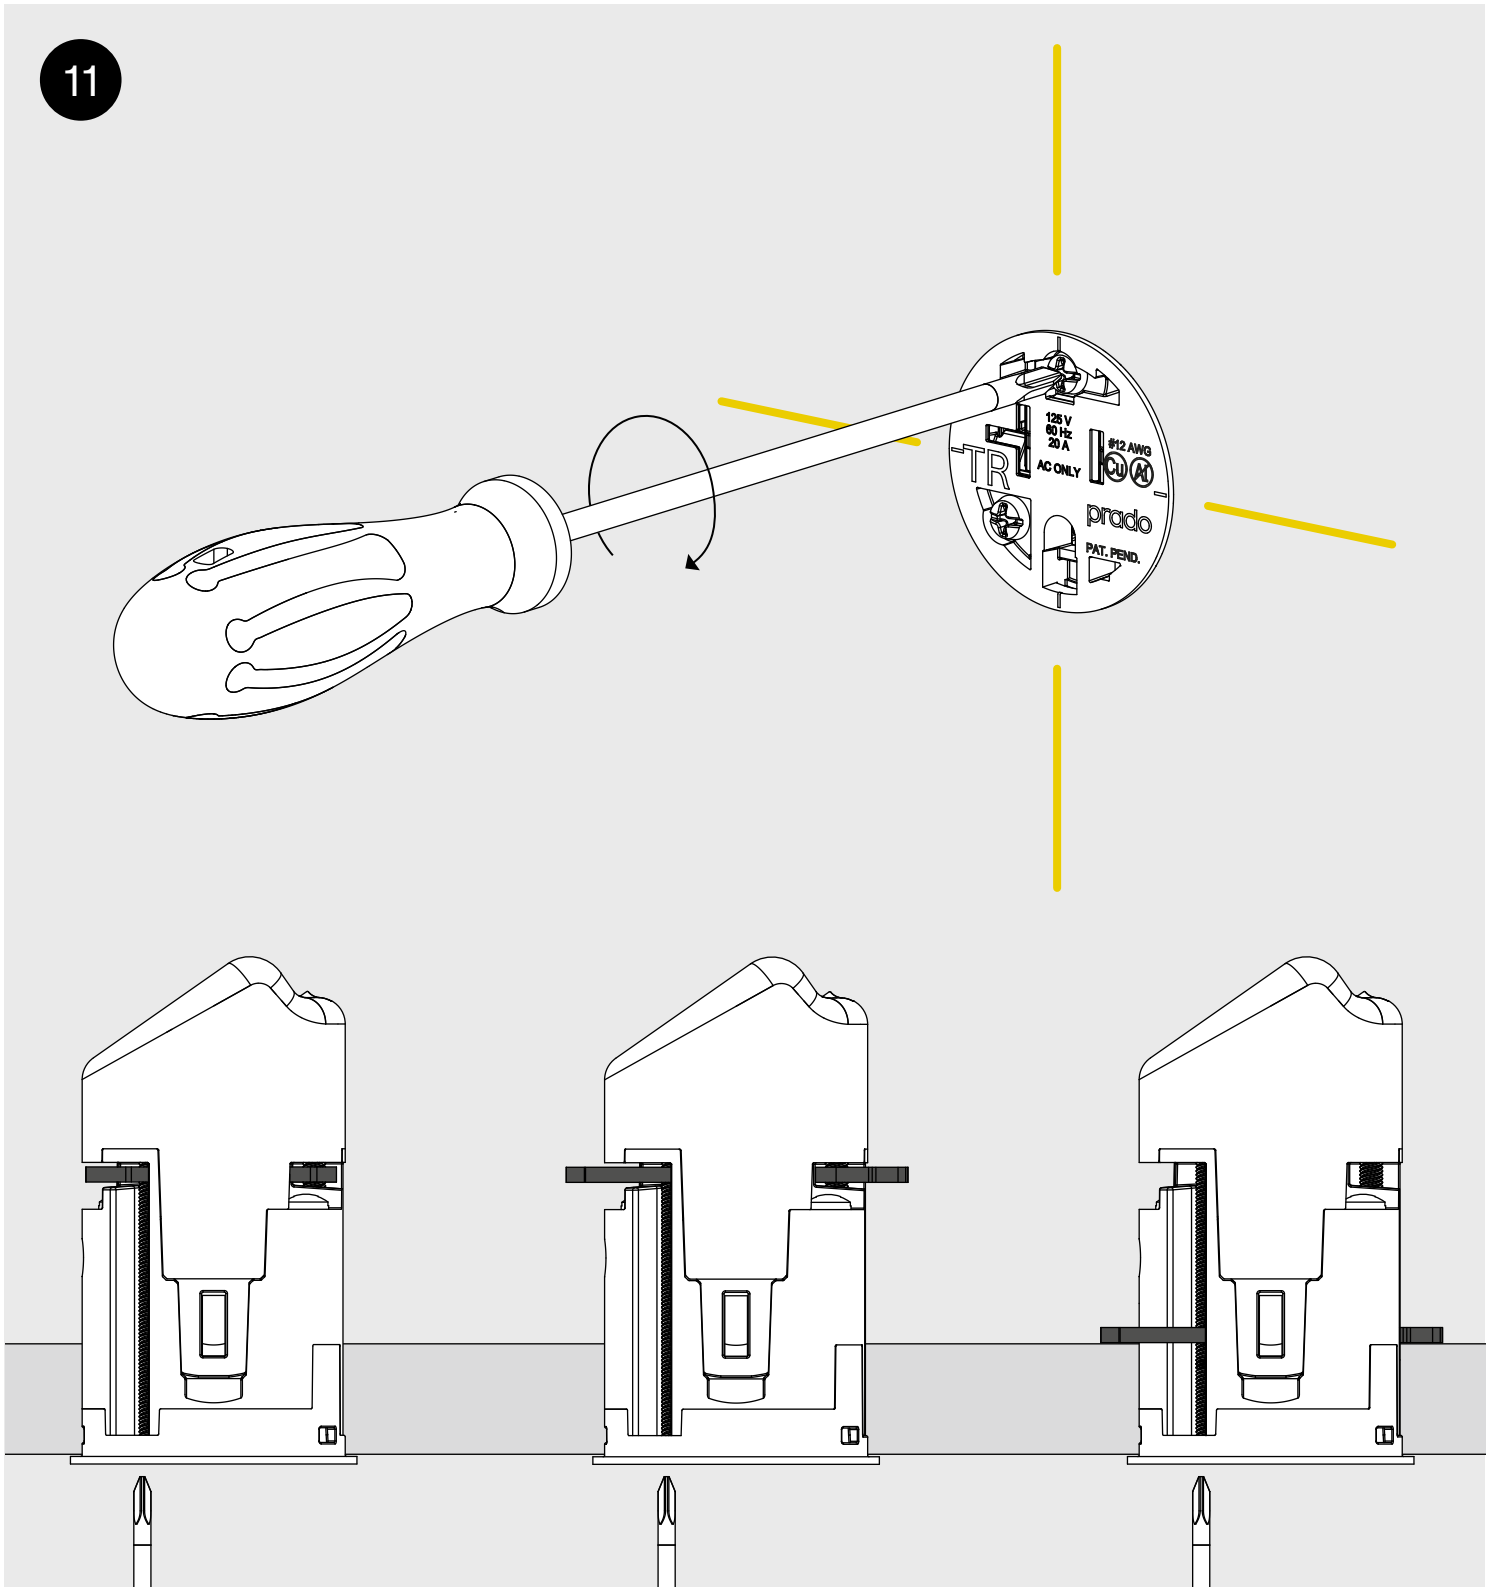


Level the outlet and fixate it by tightening the screws.

12

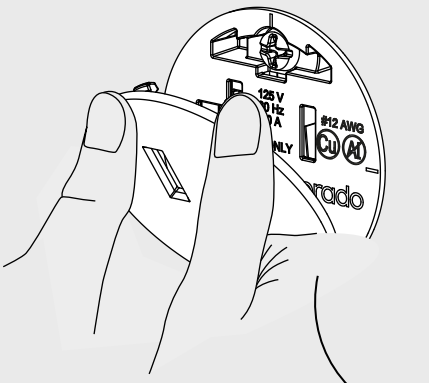


unifit cover plate sold separately

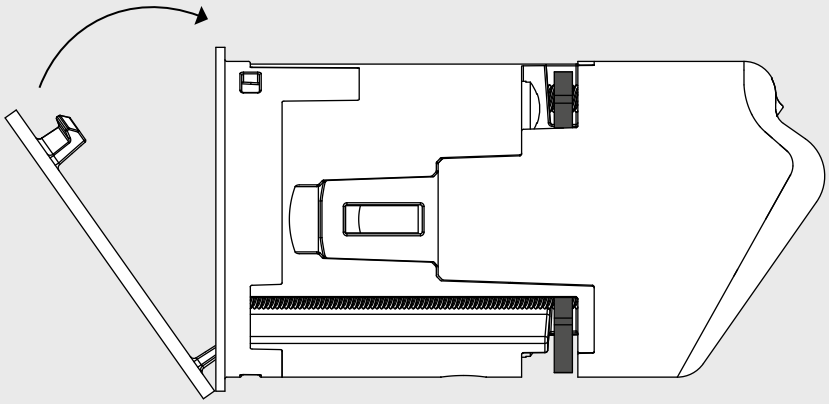



Install the cover plate of your choice. Important: Always use the appropriate wire gauge for the circuit rating. For 15A, use 12–14 AWG; for 20A, use 12 AWG only.

13

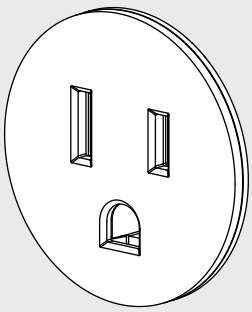

"click"

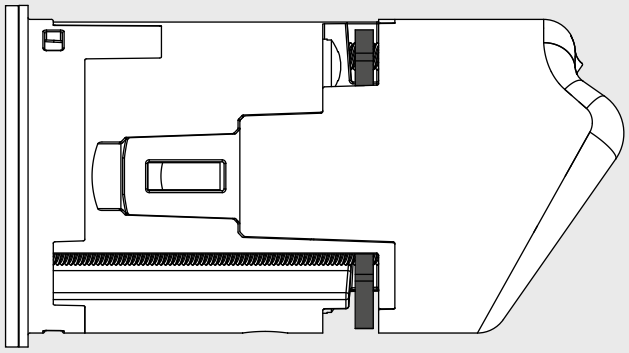


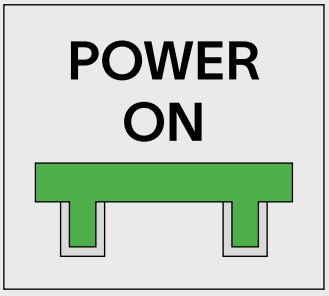


Turn the power back on.

1


for removal

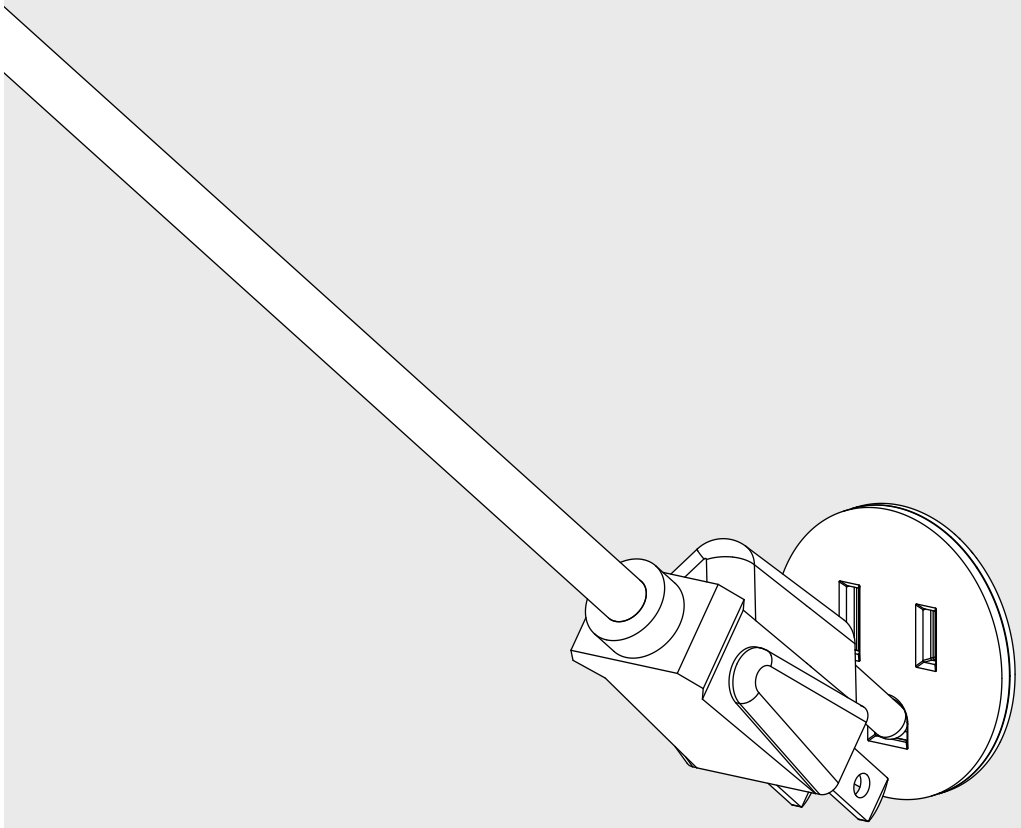

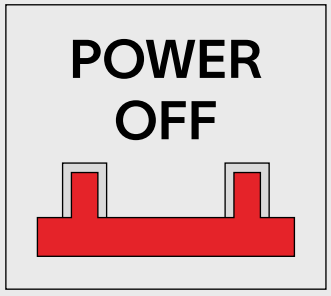


Turn the power off before removing the outlet.

2

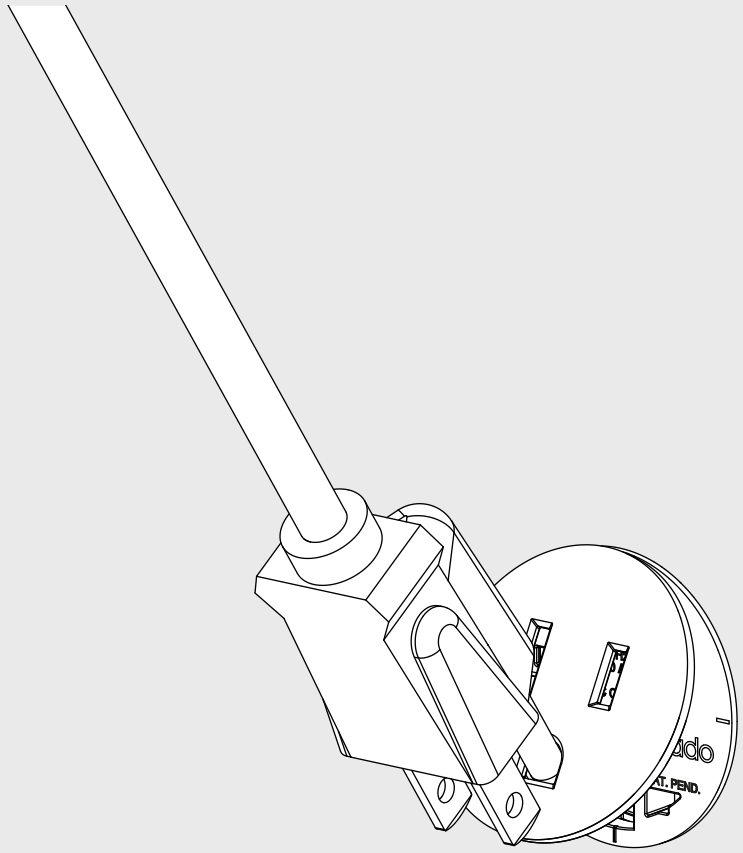


Click off the cover plate using a plug.

3

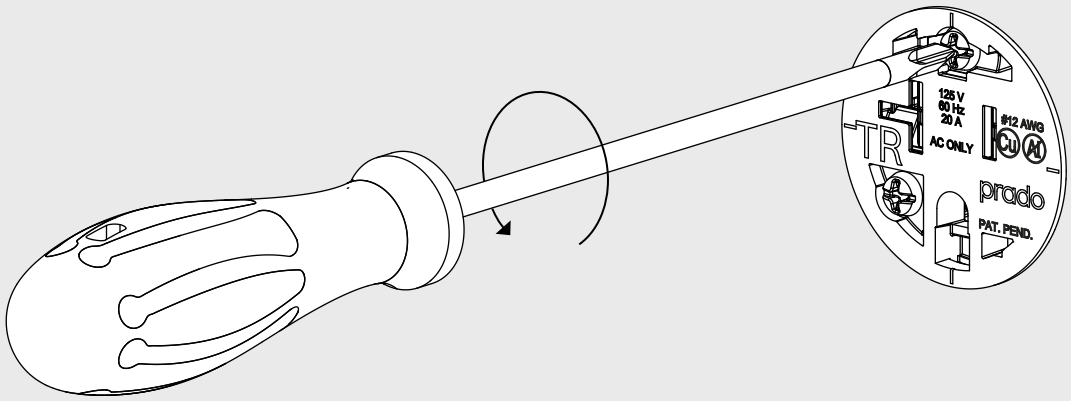


Loosen the screws.

4

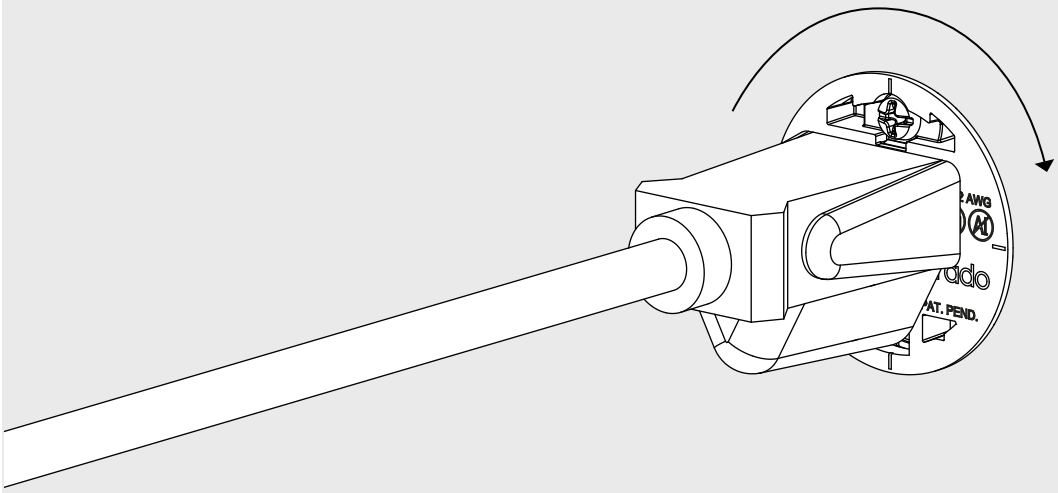

Remove the outlet by using a plug and twisting clockwise.

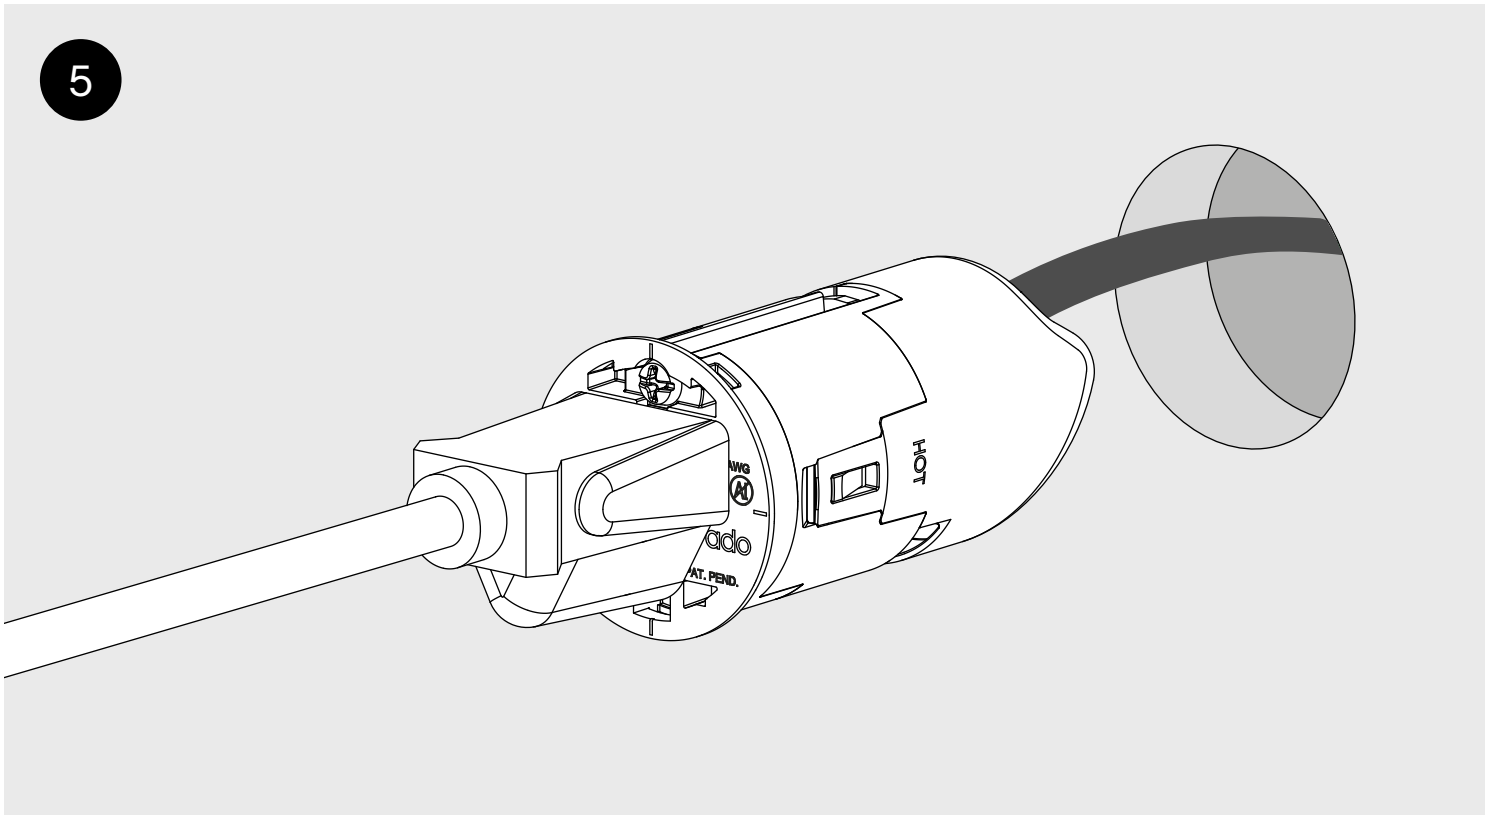

Remove the outlet.

thank you for choosing prado

C ETL US LISTED
Intertek
5029983

CONFORMS TO UL STD. 498
CERTIFIED TO CSA STD. C22.2#42

Installation must be done by skilled professionals only and instructions must be followed at all times. Warranty will not apply in case of wrongful use or if unskilled personnel attempts to repair a product.