prado

# unifit keystone holder
## installation instruction

1

Drill the installation hole and optional countersink.

2

Optional flush mount countersink.

3

Click the keystone of choice (HDMI, audio, RJ45,..) into the holder. Pay attention to the bottom and top of the keystone and the holder.

4



Insert the keystone module in the hole.

5

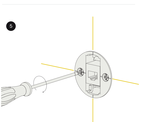

Level the outlet and fixate it by tightening the screws.

6

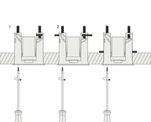

Tighten the screws until the clamps are fully secured.

7




Install the unifit keystone cover plate (sold separately).

8

Turn the power on.

for removal

Turn the power off before removing the keystone module.

1

Use a screw driver to unclick the cover plate.

2

Remove the cover plate.

3



Loosen the screws.

5

Remove the keystone module.

Thank you for choosing prado.



Installation must be done by skilled professionals only and instructions must be followed at all times. Warranty will not apply in case of wrongful use of if unauthorized personnel attempts to repair a product.